

# REACTOR™

309574M

## Electric, Heated, Plural Component Proportioner


*For spraying polyurethane foam and polyurea coatings.*  
**Not for use in explosive atmospheres.**



**Important Safety Instructions:**

Read all warnings and instructions in this manual. Save these instructions.

See page 2 for **Table of Contents** and page 3 for **List of Models**.

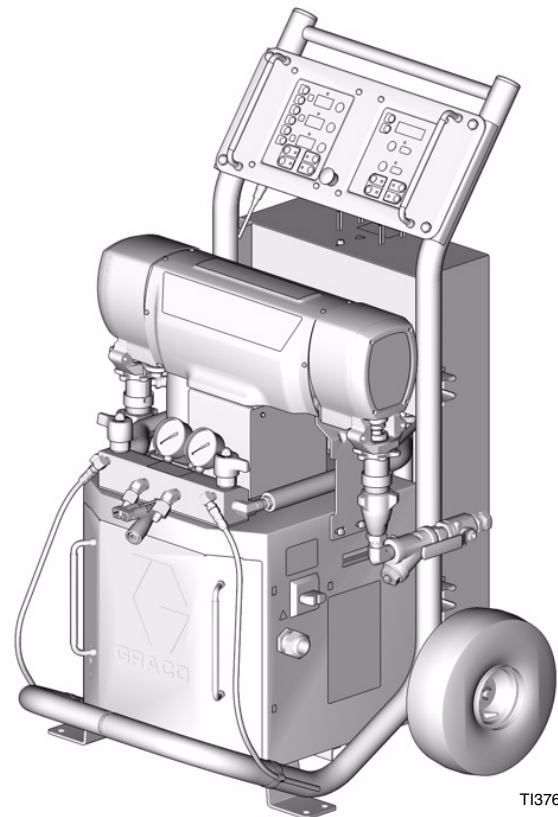

TI3764a-1





# Contents

|   |           |
|---|-----------|
| <b>Models</b> .....   | <b>3</b>  |
| <b>Manual Conventions</b> .....   | <b>4</b>  |
| <b>Supplied Manuals</b> .....   | <b>4</b>  |
| <b>Related Manuals</b> .....  | <b>5</b>  |
| <b>Warning</b> .....  | <b>6</b>  |
| <b>Before Beginning Repair</b> .....  | <b>8</b>  |
| <b>Flushing</b> .....   | <b>8</b>  |
| <b>Pressure Relief Procedure</b> .....  | <b>9</b>  |
| <b>Temperature Control Diagnostic Codes</b> .....                                     | <b>10</b> |
| E01: High fluid temperature .....   | 10        |
| E02: High hose current .....  | 11        |
| E03: No hose current .....  | 11        |
| E04: Fluid Temperature Sensor (FTS) or “A” or “B”<br>thermocouple not connected. .... | 13        |
| E05: Board overtemperature .....  | 14        |
| <b>Motor Control Diagnostic Codes</b> .....   | <b>15</b> |
| Alarms .....  | 15        |
| Warnings .....  | 15        |
| E21: No component A transducer .....  | 16        |
| E22: No component B transducer .....  | 16        |
| E23: High pressure .....  | 16        |
| E24: Pressure Imbalance .....   | 16        |
| E25: High line voltage .....  | 18        |
| E26: Low line voltage .....   | 18        |
| E27: High Motor Temperature .....   | 18        |
| E28: High current in motor .....  | 18        |
| E29: Brush Wear .....   | 19        |
| <b>Communication Diagnostic Codes</b> .....   | <b>19</b> |
| E30: Momentary loss of communication .....  | 19        |
| E99: Loss of communication .....  | 19        |
| <b>Troubleshooting</b> .....  | <b>20</b> |

|  |           |
|--|-----------|
| <b>Repair</b> .....                    | <b>24</b> |
| Pump Removal .....                     | 24        |
| Pump Installation .....                | 26        |
| Drive Housing .....                    | 28        |
| Motor Brushes .....                    | 30        |
| Circuit Breaker Module .....           | 32        |
| Electric Motor .....                   | 33        |
| Motor Control Board .....              | 34        |
| Transducers .....                      | 36        |
| Temperature Control Board .....        | 38        |
| 245979 Temperature Control Board ..... | 39        |
| Heater .....                           | 40        |
| Heated Hose .....                      | 43        |
| Fluid Temperature Sensor (FTS) .....   | 44        |
| Display Module .....                   | 50        |
| <b>Parts</b> .....                     | <b>53</b> |
| <b>Reactor Assembly</b> .....          | <b>55</b> |
| Common Parts .....                     | 55        |
| Parts that Vary by Model .....         | 56        |
| 248669 Conversion Kit .....            | 72        |
| <b>Technical Data</b> .....            | <b>73</b> |
| <b>Graco Standard Warranty</b> .....   | <b>74</b> |
| <b>Graco Information</b> .....         | <b>74</b> |



# Models

## E SERIES

| Part No., Series | Model            | Voltage (phase) | Full Load Peak Amps* | System Watts** | Heater Watts | Flow lb/min (kg/min) | Output per Cycle (A + B) gal. (liter) | Maximum Fluid Working Pressure psi (MPa, bar) |
|------------------|------------------|-----------------|----------------------|----------------|--------------|----------------------|---------------------------------------|---|
| 246025, D        | E-20             | 230V (1)        | 48                   | 11,100         | 6,000        | 20 (9)               | .0104 (.0395)                         | 2000 (14, 140)                                |
| 246026, C        | E-30             | 230V (1)        | 78                   | 17,900         | 10,200       | 30 (13.5)            | .0272 (0.1034)                        | 2000 (14, 140)                                |
| 246030, D        | E-20             | 380V (3)        | 24                   | 11,100         | 6,000        | 20 (9)               | .0104 (.0395)                         | 2000 (14, 140)                                |
| 246031, C        | E-30             | 380V (3)        | 34                   | 17,900         | 10,200       | 30 (13.5)            | .0272 (0.1034)                        | 2000 (14, 140)                                |
| 246034, D        | E-20             | 230V (3)        | 32                   | 11,100         | 6,000        | 20 (9)               | .0104 (.0395)                         | 2000 (14, 140)                                |
| 246035, C        | E-30             | 230V (3)        | 50                   | 17,900         | 10,200       | 30 (13.5)            | .0272 (0.1034)                        | 2000 (14, 140)                                |
| 248657, A        | E-30 with 15.3kW | 230V (1)        | 100                  | 23,000         | 15,300       | 30 (13.5)            | .0272 (0.1034)                        | 2000 (14, 140)                                |
| 248658, A        | E-30 with 15.3kW | 230V (3)        | 62                   | 23,000         | 15,300       | 30 (13.5)            | .0272 (0.1034)                        | 2000 (14, 140)                                |
| 248659, A        | E-30 with 15.3kW | 380V (3)        | 35                   | 23,000         | 15,300       | 30 (13.5)            | .0272 (0.1034)                        | 2000 (14, 140)                                |

## E-XP SERIES

| Part No., Series | Model | Voltage (phase) | Full Load Peak Amps* | System Watts** | Heater Watts | Flow gpm (lpm) | Output per Cycle (A + B) gal. (liter) | Maximum Fluid Working Pressure psi (MPa, bar) |
|------------------|-------|-----------------|----------------------|----------------|--------------|----------------|---------------------------------------|---|
| 246024, C        | E-XP1 | 230V (1)        | 69                   | 15,800         | 10,200       | 1 (3.8)        | .0104 (.0395)                         | 2500 (17.2, 172)                              |
| 246028, C        | E-XP2 | 230V (1)        | 100                  | 23,000         | 15,300       | 2 (7.6)        | .0203 (.0771)                         | 3500 (24.1, 241)                              |
| 246029, C        | E-XP1 | 380V (3)        | 24                   | 15,800         | 10,200       | 1 (3.8)        | .0104 (.0395)                         | 2500 (17.2, 172)                              |
| 246032, C        | E-XP2 | 380V (3)        | 35                   | 23,000         | 15,300       | 2 (7.6)        | .0203 (.0771)                         | 3500 (24.1, 241)                              |
| 246033, C        | E-XP1 | 230V (3)        | 43                   | 15,800         | 10,200       | 1 (3.8)        | .0104 (.0395)                         | 2500 (17.2, 172)                              |
| 246036, C        | E-XP2 | 230V (3)        | 62                   | 23,000         | 15,300       | 2 (7.6)        | .0203 (.0771)                         | 3500 (24.1, 241)                              |


\* Full load amps with all devices operating at maximum capabilities. Fuse requirements at various flow rates and mix chamber sizes may be less.



\*\* E-20 and E-XP1 with 210 ft (64.1 m) hose; E-30 and E-XP2 with 310 ft (94.6 m) hose.



# Manual Conventions

## Warning



**WARNING**

A warning alerts you to possible serious injury or death if you do not follow instructions.


Symbols, such as fluid injection (shown), alert you to a specific hazard and direct you to read the indicated hazard warnings on pages 6-7.

## Caution


**CAUTION**

A caution alerts you to possible equipment damage or destruction if you do not follow instructions.

## Note

 A note indicates additional helpful information.

# Supplied Manuals

The following manuals are shipped with the Reactor™ Proportioner. Refer to these manuals for detailed equipment information.

Order Part No. 15B535 for a compact disk of Reactor manuals translated in several languages.

| Reactor Electric Proportioner                                  |   |
|--|---|
| Part No.   | Description   |
| 309551   | Reactor Electric Proportioner, Operation Manual (English) |
| 309577   | Displacement Pump, Repair-Parts Manual (English)          |
| Reactor Electrical Diagrams (one of the following is included) |   |
| Part No.   | Description   |
| 309726   | Electrical Diagrams, E-XP1 and E-20, 230V, 1 phase        |
| 309727   | Electrical Diagrams, E-XP2 and E-30, 230V, 1 phase        |
| 309728   | Electrical Diagrams, E-XP1 and E-20, 380V, 3 phase        |
| 309729   | Electrical Diagrams, E-XP2 and E-30, 380V, 3 phase        |
| 309730   | Electrical Diagrams, E-XP1 and E-20, 230V, 3 phase        |
| 309731   | Electrical Diagrams, E-XP2 and E-30, 230V, 3 phase        |



# Related Manuals

The following manuals are for accessories used with the Reactor™.

Order Part No. 15B381 for a compact disk of Fusion manual translated in several languages.

Order Part No. 15B535 for a compact disk of Reactor manuals translated in several languages.

| Feed Pump Kits                            |   |
|---|---|
| Part No.                                  | Description   |
| 309815                                    | Instruction-Parts Manual (English)                              |
| Air Supply Kit                            |   |
| Part No.                                  | Description   |
| 309827                                    | Instruction-Parts Manual (English) for Feed Pump Air Supply Kit |
| Circulation and Return Tube Kits          |   |
| Part No.                                  | Description   |
| 309852                                    | Instruction-Parts Manual (English)                              |
| Heated Hose                               |   |
| Part No.                                  | Description   |
| 309572                                    | Instruction-Parts Manual (English)                              |
| Fusion Air Purge Spray Gun                |   |
| Part No.                                  | Description   |
| 309550                                    | Instruction-Parts Manual (English)                              |
| Fusion Mechanical Purge Spray Gun         |   |
| Part No.                                  | Description   |
| 309856                                    | Instruction-Parts Manual (English)                              |
| Circulation Kit                           |   |
| Part No.                                  | Description   |
| 309818                                    | Instruction-Parts Manual (English)                              |
| Data Reporting Kit                        |   |
| Part No.                                  | Description   |
| 309867                                    | Instruction-Parts Manual (English)                              |
| Pump Wet-Cup Flush Kits and Reservoir Kit |   |
| Part No.                                  | Description   |
| 309911                                    | Instruction-Parts Manual (English)                              |
| Transformer Repair Kit                    |   |
| Part No.                                  | Description   |
| 309930                                    | Instruction-Parts Manual (English)                              |
| Rupture Disk Assembly Kit                 |   |
| Part No.                                  | Description   |
| 309969                                    | Instruction-Parts Manual (English)                              |





## WARNING



### SKIN INJECTION HAZARD

High-pressure fluid from gun, hose leaks, or ruptured components will pierce skin. This may look like just a cut, but it is a serious injury that can result in amputation. **Get immediate surgical treatment.**

- Do not point the gun at anyone or at any part of the body.
- Do not put your hand or fingers over the gun fluid nozzle.
- Do not stop or deflect leaks with your hand, body, glove, or rag.
- Do not “blow back” fluid; this is not an air spray system.
- Follow **Technical Data**, page 73, when you stop spraying and before cleaning, checking, or servicing equipment.
- Use lowest possible pressure when flushing, priming, or troubleshooting.
- Engage spray gun piston safety lock when not spraying.
- Tighten all fluid connections before operating the equipment.
- Check hoses, tubes, and couplings daily. Replace worn or damaged parts immediately. High pressure hose cannot be recoupled; replace the entire hose.








### FIRE, EXPLOSION, AND ELECTRIC SHOCK HAZARD

Solvent and fumes in work area can ignite or explode. High voltage components can cause electric shock. To help prevent fire, explosion, and electric shock:



- Shut off main power switch and wait 5 minutes before opening Reactor cabinet door.
- All electrical wiring must be done by trained and qualified personnel and comply with all local codes.
- Ground equipment and conductive objects. See **Grounding** in the Operation manual.
- Use equipment only in well ventilated area.
- Eliminate all ignition sources, such as pilot lights, cigarettes and plastic drop cloths (potential static arc).
- Do not plug or unplug power cords or turn lights on or off when flammable fumes are present.
- Keep the work area free of debris, including solvent, rags, and gasoline.
- Hold gun firmly to side of grounded pail when triggering into pail.
- Use only grounded hoses.
- If there is static sparking or you feel a shock, **stop operation immediately**. Do not use equipment until you identify and correct the problem.
- To avoid chemical reaction and explosion, do not use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in pressurized aluminum equipment.



|  <b>WARNING</b> |  |
|--|--|
|                 | <p><b>EQUIPMENT MISUSE HAZARD</b></p> <p>Misuse can cause serious injury or death.</p> <ul style="list-style-type: none"> <li>• For professional use only.</li> <li>• Use equipment only for its intended purpose. Call your Graco distributor for information.</li> <li>• Read manuals, warnings, tags, and labels before operating equipment. Follow instructions.</li> <li>• Check equipment daily. Repair or replace worn or damaged parts immediately.</li> <li>• Do not alter or modify equipment. Use only Graco parts and accessories.</li> <li>• Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See <b>Technical Data</b> in all equipment manuals.</li> <li>• Use fluids and solvents that are compatible with equipment wetted parts. See <b>Technical Data</b> in all equipment manuals. Read fluid and solvent manufacturer's warnings.</li> <li>• Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.</li> <li>• Do not use hoses to pull equipment.</li> <li>• Comply with all applicable safety regulations.</li> </ul> |
|                 | <p><b>BURN HAZARD</b></p> <p>This equipment is used with heated fluid, which can cause equipment surfaces to become very hot. To avoid severe burns:</p> <ul style="list-style-type: none"> <li>• Do not touch hot fluid or equipment.</li> <li>• Allow equipment to cool completely before touching it.</li> <li>• Wear gloves if fluid temperature exceeds 110°F (43°C).</li> </ul>  |
|               | <p><b>TOXIC FLUID OR FUMES HAZARD</b></p> <p>Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.</p> <ul style="list-style-type: none"> <li>• Read Material Safety Data Sheet (MSDS) to know the specific hazards of the fluids you are using.</li> <li>• Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.</li> </ul>  |
|               | <p><b>PERSONAL PROTECTIVE EQUIPMENT</b></p> <p>You must wear proper protective equipment when operating, servicing, or when in the operating area of the equipment to help protect you from serious injury, including eye injury; inhalation of toxic fumes; and hearing loss. This equipment includes but is not limited to:</p> <ul style="list-style-type: none"> <li>• Protective eyewear.</li> <li>• Gloves, clothing, and respirator as recommended by the fluid and solvent manufacturer.</li> <li>• Hearing protection.</li> </ul>   |



# Before Beginning Repair

**WARNING**  


Repairing this equipment requires access to parts which may cause electric shock or other serious injury if work is not performed properly. Have a qualified electrician connect power and ground to main power switch terminals, see the Operation manual. Be sure to shut off all power to the equipment before repairing.

 
1. Flush if necessary, see **Flushing**.

2. Park component A pump.

a. Press .




b. Trigger gun until pump A stops. After fluid pressure drops below 700 psi (4.9 MPa, 49 bar), motor will run until component A pump is at bottom of its stroke, then shut off.

c. Check ISO reservoir for component A pump. Fill wet-cup on component B pump. See operation manual.

3. Turn main power OFF .


4. Relieve pressure, page 9.

# Flushing

**WARNING**  


Read warnings, page 6. Flush equipment only in a well-ventilated area. Do not spray flammable fluids. Do not turn on heaters while flushing with flammable solvents.

- Flush out old fluid with new fluid, or flush out old fluid with a compatible solvent before introducing new fluid.
- Use the lowest possible pressure when flushing.
- All fluid components are compatible with common solvents. Use only moisture-free solvents.
- To flush feed hoses, pumps, and heaters separately from heated hoses, set **PRESSURE RELIEF/SPRAY** valves (SA, SB) to **PRESSURE RELIEF**.

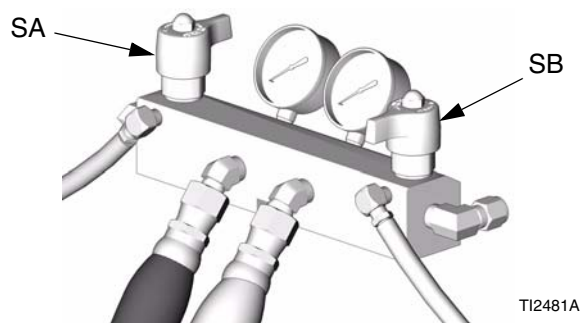

- To flush entire system, circulate through gun fluid manifold (with manifold removed from gun).
- Always leave some type of fluid in system. Do not use water.



# Pressure Relief Procedure


1. Relieve pressure in gun and perform gun shutdown procedure. See gun manual.
2. Verify gun fluid manifold valves A and B are closed.



TI2421A

3. Shut off feed pumps and agitator, if used.

4. Turn PRESSURE RELIEF/SPRAY valves (SA, SB) to PRESSURE RELIEF. Route fluid to waste containers or supply tanks. Ensure gauges drop to 0.

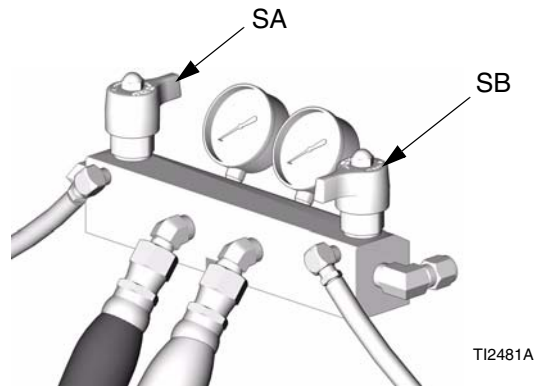


TI2481A

5. Engage gun piston safety lock.



TI2409A

6. Disconnect gun air line and remove gun fluid manifold.

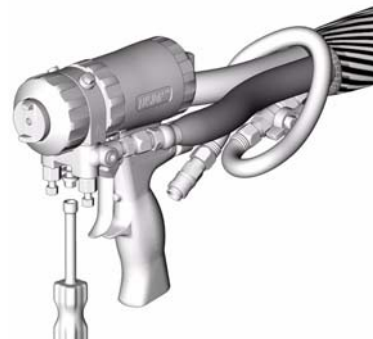

TI2543A



# Temperature Control Diagnostic Codes

Temperature control diagnostic codes E01 through E05 appear on temperature display.

These alarms turn off heat. Turn main power OFF



then ON



to clear.

| Code No. | Code Name                           | Alarm Zone | Corrective Action page |
|----------|-------------------------------------|------------|------------------------|
| 01       | High fluid temperature              | Individual | 10                     |
| 02       | High hose current                   | Hose only  | 11                     |
| 03       | No hose current with hose heater on | Hose only  | 11                     |
| 04       | FTS or thermocouple not connected   | Individual | 13                     |
| 05       | Board overtemperature               | All        | 14                     |



For hose zone only, if FTS is disconnected at startup, display will show hose current 0A.

## E01: High fluid temperature


- Using an external temperature-sensing device, check to see if you really do have high temperatures.
- Check connections between temperature control board and heater overtemperature switches, page 42.
- Make sure all of the wires are securely connected into connector J1.
- Check temperature sensors, page 41.
- Check temperature sensor is contacting heater element, page 41.

### If you do not have high temperature (A temp reading below 190° F):

- Make sure connector J1 is firmly plugged into the heater control board.
- Check continuity of the over-temperature switches and the "A" and "B" temperature sensors by removing the J1 plug from the temperature control board socket. On the plug end check the resistance:

|              |                |
|--------------|----------------|
| Pins 1 & 2   | ~ 0 $\Omega$   |
| Pins 3 & 4   | ~ 0 $\Omega$   |
| Pins 7 & 8   | 4 - 6 $\Omega$ |
| Pins 10 & 11 | 4 - 6 $\Omega$ |

### If you do have a high temperature:


- Note what zone ("A", "B", or both) is exhibiting the high temperature condition.
  -  You will need to cool the unit down to be able to do any testing. Using your feed pumps to move cool material into the Reactor can do this.
- Check resistance of the "A" and "B" temperature sensors. Remove the J1 plug from the temperature control board socket. Refer to Table 4, page 38. Resistance across pins 7 and 8 = 4 - 6 ohms. Resistance across pins 10 and 11 = 4 - 6 ohms.
- Check temperature sensor is contacting heater element, page 41.
- Check if the heater control board turns off when the unit hits the set point temperature.
  - With power off, remove the wire nuts on the back of the unit leading to the heater, attach the leads of an A/C volt meter to the wires, and tape them off so they can't be touched or shorted.
  - Set the "A" and "B" set point below the ambient temperature, and turn the heat zones on. The red light above each zone should blink and the voltmeter should read little to no voltage. Measuring line voltage while the red light is blinking would indicate that the relay on the heater control board has failed. In this case, replace the heater control board.



## E02: High hose current

1. Check tap connection at transformer, see operation manual.
2. Check hose connections for electrical short, page 43.
3. Move to lower hose length on transformer.
4. Replace temperature control board, page 38.

## E03: No hose current

 Check transformer. If transformer has “lollipops” located in front, refer to E03 (lollipops). If the transformer does not include the “lollipops,” refer to E03 (no lollipops).

### E03 (lollipops)

Do all of the steps in order with out skipping any steps. If you don't you may misdiagnose the failure.

1. Check hose connectors for broken electrical connection, page 43.
2. With the main power off, and the hose plugged in, test the continuity of the heated hose through the Reactor unit. Pull connector J13 off of the temperature control board and remove the red wire from the transformer hose length tap. Perform a continuity measurement between pin 6 of the **J13 wire harness** (not the board) and the wire removed from the transformer tap. You should have continuity. If no continuity exists, trace the wires until you find the problem. See FIG. 1.


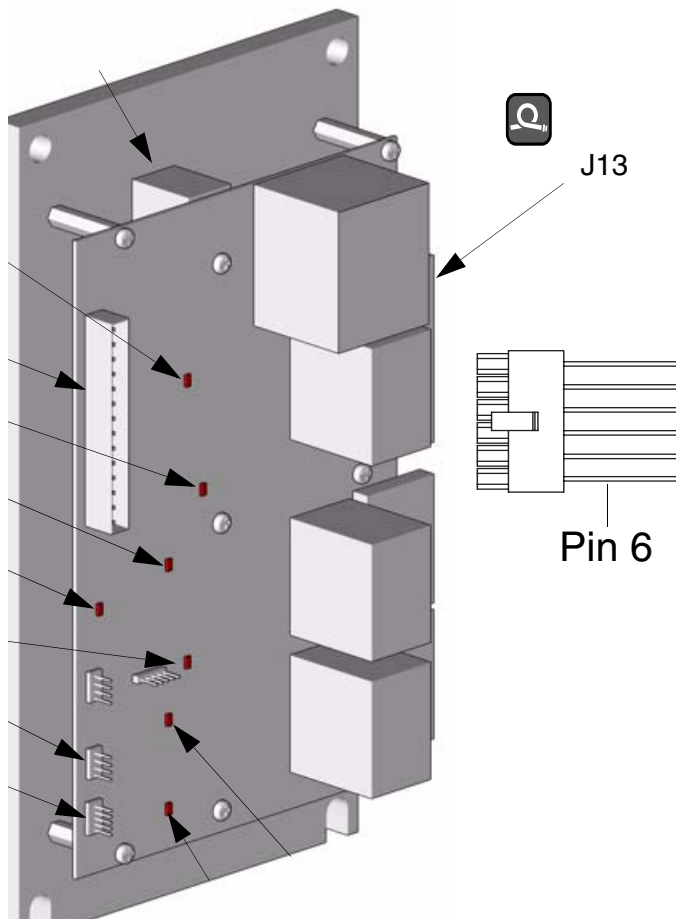


FIG. 1



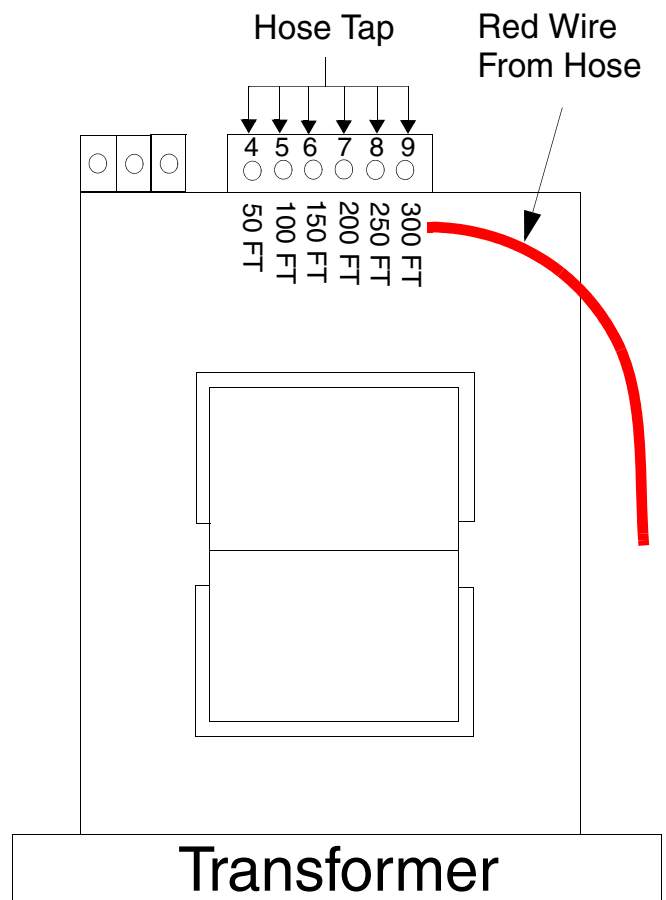

3. With the main power off, the hose plugged in, and wire harness from the connector J13 still removed from the temperature control board:
  - a. Check for continuity between Pin 1 on the J13 harness, and the bottom of the left 20-amp hose breaker. See FIG. 2.
  - b. Check for continuity between Pin 2 on the J13 harness, and one of the leads of the black In-rush limiter located on the upper left hand side the transformer.
  - c. Check for continuity between Pin 3 on the J13 harness, and the bottom of the right 20-amp hose breaker.
  - d. Check for continuity between Pin 4 on the J13 harness, and the opposite lead of the black In-rush limiter from step b, located on the upper left hand side the transformer.
  - e. Check for continuity between Pin 5 on the J13 harness, and the bottom of the 50-amp hose breaker.

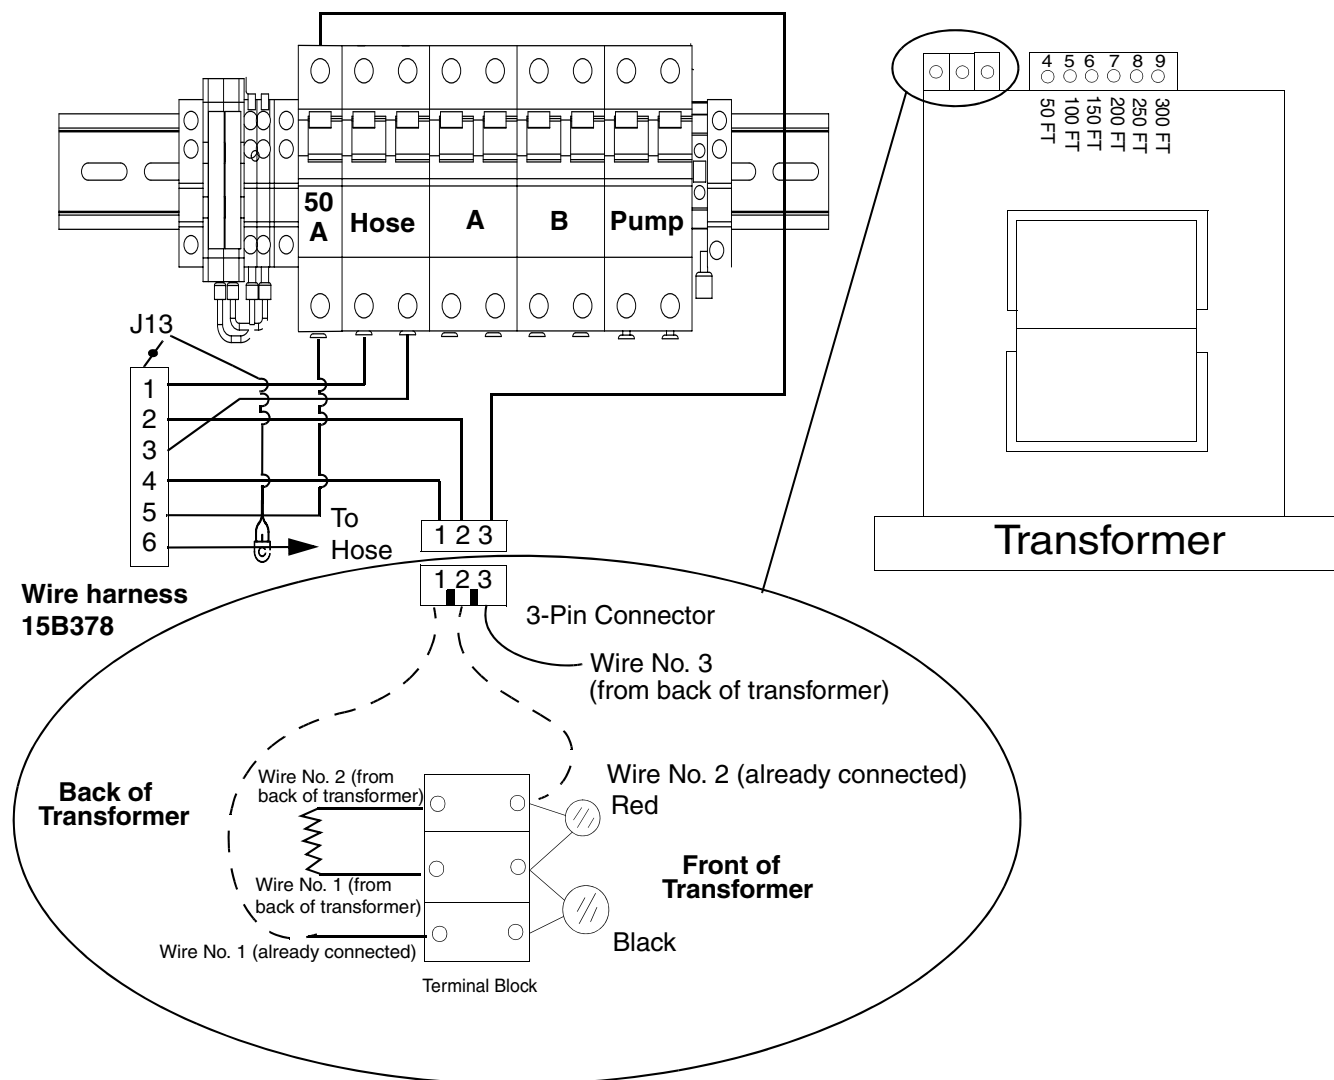


FIG. 2



4. Check 50A (806) and 20A (817A) circuit breakers, page 32.
5. Test current sensor continuity, page 46.
6. With the main power off, test the In-rush current limiter ("black lollipop"), by doing a continuity measurement across the two leads on the In-rush limiter, located on the left hand side of the transformer. See FIG. 3. (There are two different orientations of the In-rush limiter, both located on the left hand side of the transformer). You should have continuity; generally the measurement should read between 5 – 20 ohms. If you don't have continuity, the In-rush current limiter bad – replace the In-rush limiter.

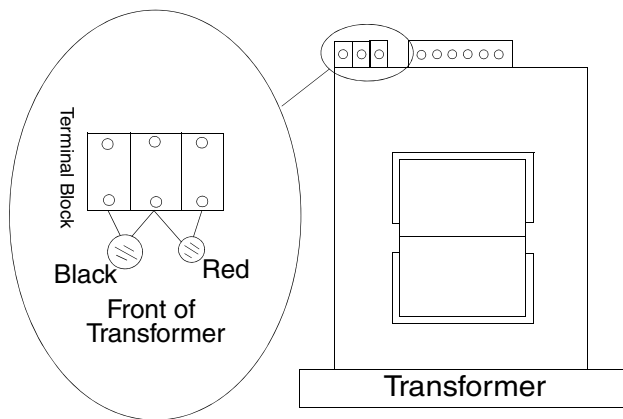


FIG. 3

7. Complete Transformer Primary check:
  - a. Make sure everything is reconnected, **including the hose**.
  - b. Turn the main power on.
  - c. Adjust the hose heat set point below the ambient hose temperature.
  - d. Turn the hose heat on.

### WARNING



Read warnings, page 6. Step e measures line voltage and should be done by a qualified electrician. If work is not performed properly it may cause electric shock or other serious injury.

- e. **Carefully** measure the voltage across the two wires of the red surge suppressor.

If you do not measure line voltage, the Temperature Control Board is bad – replace the Temperature Control Board.

8. Complete **Transformer Secondary Check**, page 49.
9. Perform SCR circuit check, page 44.

## E03 (no lollipops)

Do steps in order. Do not skip any step.

1. Check 50A (806) and 20A (817A) circuit breakers, page 32.
2. Check hose connectors for broken electrical connection, page 43.
3. Do **Transformer Secondary Check**, page 48.
4. Test wire harness continuity.
5. Test complete hose continuity, page 43.
6. Test temperature control board to transformer wire harness continuity, page 38.
7. Test transformer wire harness continuity, page 46.
8. Test current sensor continuity, page 46.
9. (380 V Only) Do In-rush current limiter check, page 46.
10. Do **Transformer Primary Check**, page 48.
11. Perform SCR circuit check, page 44.

## E04: Fluid Temperature Sensor (FTS) or "A" or "B" thermocouple not connected.



The display that is showing the E04 error is the zone that is seeing the error.

"A" and "B" side thermocouple assemblies:

1. Check the electrical connections at the temperature control board. Refer to Table 4, page 38 and Figure 10, page 35.



- a. Remove plug J1 (Green 14-pin terminal block) from the temperature control board and make sure all pins are securely connected.
2. Check the "A" and "B" thermocouples by removing the J1 connector from the temperature control board and check the pins with an ohmmeter.
  - a. "A" thermocouple:
    - With J1 disconnected measure the resistance across pins 7 and 8. It should measure 4 - 6 Ohms. If not, replace the "A" thermocouple.
    - Measure the resistance between Pin 7 and the thermocouple housing. Measure the resistance between Pin 8 and the thermocouple housing. It should be infinity, if not replace the "A" thermocouple.
  - b. "B" thermocouple:
    - With J1 disconnected measure the resistance across pins 10 and 11. It should measure 4 - 6 Ohms. If not, Replace the "B" thermocouple.
    - Measure the resistance between Pin 10 and the thermocouple housing. Then measure between Pin 11 and the thermocouple housing. It should read infinity. If not replace the "B" thermocouple.

**FTS:**

1. Check FTS operation by connecting directly to Reactor.
  - a. Locate the FTS.
  - b. Unplug the FTS electrical connection.
  - c. Plug the Reactor end of the connector directly into the FTS electrical connector.
2. Check cable connections between all hose lengths.
3. Check temperature sensor connection at J1 on temperature control board, page 38. Ensure pins 12, 13 and 14 are connected properly.
4. Check the FTS with an ohmmeter, page 44.
5. Use manual current control mode; see operation manual.
6. Check FTS operation by connecting directly to Reactor.
7. Check cable connections between all hose lengths.

8. Check temperature sensor connection at J1 on temperature control board, page 38.
9. Check thermocouple, page 41. Check FTS, page 44.
10. Use manual current control mode; see operation manual.

## E05: Board overtemperature

The circuit board has its own temp sensor. If it sees the circuit board getting too hot (80°C for >42ms/50ms), it will shut down.


1. Check fan operation.
2. Check electrical cabinet door is properly installed.
3. Check for obstructions blocking cooling holes in bottom of Reactor.
4. Ambient temperature too high. Reduce gun mix chamber size, or move Reactor to a cooler location.




# Motor Control Diagnostic Codes

Motor control diagnostic codes E21 through E29 appear on pressure display.

 
There are two types of motor control codes: alarms and warnings. Alarms take priority over warnings.

 Alarms can also be cleared, except for code 23,

by pressing .


## Alarms

Alarms turn off Reactor. Turn main power OFF



then ON  to clear.

## Warnings

Reactor will continue to run. Press  to clear. A warning will not recur for a predetermined amount of time (varies for different warnings), or until main power

is turned OFF  then ON .

| Code No. | Code Name                   | Alarm (A) or Warning (W)     | Corrective Action page |
|----------|-----------------------------|------------------------------|------------------------|
| 21       | No transducer (component A) | A                            | 16                     |
| 22       | No transducer (component B) | A                            | 16                     |
| 23       | High pressure               | A                            | 16                     |
| 24       | Pressure imbalance          | A/W (to select, see page 34) | 16                     |
| 25       | High line voltage           | A                            | 18                     |
| 26       | Low line voltage            | A                            | 18                     |
| 27       | High motor temperature      | A                            | 18                     |
| 28       | High current                | A                            | 18                     |
| 29       | Brush wear                  | W                            | 19                     |
| 99       | Communication Error 2       |                              |                        |



## E21: No component A transducer

1. Check transducer A connection at J3 on the motor control board, page 35.
2. Reverse A and B transducer connections. If error moves to transducer B (E22), replace transducer A, page 36. If error does not move (stays the same) replace the motor control board.

## E22: No component B transducer

- a. Check transducer B connection at J8 for E-20 and E-XP1 or J5 for E-30 and E-XP2 on the motor control board, page 35.
- b. Reverse A and B transducer connections. If error moves to transducer A (E21), replace transducer B, page 36. If error does not move (stays the same) replace the motor control board.

## E23: High pressure



Relieve pressure. Verify low pressure with analog

gauges. Turn main power OFF then ON



If error persists, do following checks.

1. Check the jumpers and the wiring. Check jumper on motor control board J10 for E20 and E-XP1, or J7 for E30 and E-XP2, pins 7-10, page 34.
2. Remove, clean and re-install the pressure transducer leads

If the jumpers and the wiring are in good working condition and you still have the error, then you will need to replace the “A” and “B” pressure transducers.

3. To determine if it's the “A” or the “B” transducer, you will need a known good Reactor pressure transducer to use as a “test” transducer. The test is done

without removing the existing pressure transducers from the fluid manifold.

- a. Unplug the “A” transducer from the Motor control board socket (page 36) and replace with “test” transducer.
- b. Turn on the Reactor master power.
  - If the error is gone, turn off the Reactor main power, remove test transducer, and replace “A” transducer.
  - If the error persists, unplug the “test” transducer from the “A” socket, and reinstall the “A” pressure transducer back into the “A” socket. Repeat this test procedure on the “B” side.

4. If the error persists and no root cause is found through the above testing, replace the motor control board, page 34.

## E24: Pressure Imbalance

**Pressure Imbalance: There is a pressure difference between the “A” and “B” fluids of more than 50% of the set point pressure.**

“Fast” E24:

- Pump zone is turned on, E24 within 5 - 10 seconds.
- E24 during trigger actuation (pressures are balanced otherwise).

### If gauge pressures are very close

1. Clear the error and run the unit.
2. Check plug J10 (E20/E-XP1) or J7 (E30/E-XP2) or the jumpers 7 to 8, or 9 to 10 on the motor control board.
3. Check pressure transducer performance:

The digital display on a Reactor always shows the higher of the two pressures. As soon as the higher analog pressure drops below the lower analog pressure the digital display will switch to the new highest reading. Determine which transducer is performing poorly.

1. For testing purposes only, find the dip switches labeled SW2 on the motor control board, page 35. Set dipswitch 3 to OFF. This will allow the Reactor to run with a pressure imbalance alarm.



2. Run the unit to build up some pressure (1000 – 1200 psi). Shut down the unit, clear the alarm and power back up. Do not depressurize the unit.
3. Check the analog gauges to see which pressure is higher. Check if the display pressure matches, indicating that the motor control board “sees” that transducer. If not, the motor control board does not “see” that transducer. Check the wire connections and or replace the transducer.
4. With the pump zone off, use the pressure relief valves to slowly relieve the “high” side pressure, while watching the digital display and the analog gauges. Once the higher analog gauge drops below the lower analog pressure the motor control board should start reading the “new” high side pressure (because it is now the higher of the two). Continue dropping the original “high” side pressure - the digital display should stop dropping. Repeat the process to check the other pressure transducer.

The last test determines if the pressure transducer has failed or if the socket on the pressure control board has gone bad.

1. Swap the transducer plug-ins on the motor control board. (J3 and J8 for the E-20 and E-XP1. J3 and J5 for the E30 and E-XP1).
2. Repeat above test.
3. If the problem stays with the same side as before, then the pressure transducer is bad.
4. If the problem switches to the other transducer, then the problem is in the motor control boards socket.

#### If the gauge readings are *not* equal.

1. Clear the error and balance the pressures using the dump valves.
2. If you cannot get the pressures to balance:
  - Check for pump failure.
  - Check for adequate material.
  - Using the feed pump to push fluid out through the gun manifold, check for a plugged fluid path.
  - Run the unit.
  - Check and clean the gun inlet screens.
  - Check and clean the mix chamber “A” and “B” impingement ports as well as the center port. **Note: Some mix chambers have counter bored holes, and require two drill sizes to clean impingement ports completely.**

“Slow” E24:

- When spraying, gradual pressure imbalance and eventual E24.

Possible Causes:

- One side of the Gun is partially blocked.
- The “A” or the “B” pump on the Reactor has failed.
- The “A” or the “B” feed pump has failed.
- The “A” or the “B” feed pump pressure is set too high.
- The “A” or the “B” inlet screen is plugged.
- The hose is not heating properly.
- Kinked supply hose.
- Bottom of the drum is damaged causing a blockage to the inlet of the feed pump.
- The drum is not vented properly.



## E25: High line voltage

Supply voltage too high. Check Reactor voltage requirements, page 73.

## E26: Low line voltage

Supply voltage too low. Check Reactor voltage requirements, page 73.

## E27: High Motor Temperature

1. Motor temperature too high. Reduce pressure, gun tip size, or move Reactor to a cooler location. Allow one hour for cooling.
2. Check fan operation.
3. Ensure there is no obstruction around the fan area that would cause lack of airflow; ensure the motor/fan shroud is installed.
4. Ensure the unit is being operated with the front cover on.
5. Ensure the brush wear/over temp switch wire assembly is plugged into J7 (E-20/E-XP1) or J6 (E-30/E-XP2) of the motor control board.
6. With the main power off, unplug the wire harness from J7 (E-20/E-XP1) or J6 (E-30/E-XP2) on the motor control board and install a jumper wire on pins 1 and 2. Turn the main power back on.

### If E27 is gone:

If the E27 error is gone and the motor is truly not overheated, then the problem can be in the motor/motor wire harness assembly. Measure the resistance between the two yellow wires that go to pins 1 and 2 of the motor connector. If there is an open connection, the thermal overload switch is open or there is a broken wire inside the motor, or a broken wire in the motor harness.

If the E27 error code is still there, double check if pins 1 and 2 are jumpered properly. If jumpered properly, then it would appear that the problem is with in the motor control board.

## E28: High current in motor

Check motor control board:

1. Turn the master power off.
2. Disconnect socket J4 (E-20/E-XP1) J1 (E-30/E-XP2) on the motor control board.
3. Turn the master power back on.
4. If the E28 error did not go away then there is a problem with the motor control board. Replace board, page 34.

Check motor:

1. Check to see if the motor rotates freely.
2. Check to see if the brushes are damage.
3. Check that the voltage going to the motor is good.
4. Check the three wire (yellow, yellow, orange) motor connector to the motor board. A gentle tug on each wire individually at the connector should identify the loose wire. If a wire pulls out, bend the locking tab on the crimp end, insert the wire until it seats and repeat gentle tug.
5. If the above does not resolve the problem, replace the motor, page 33.



## E29: Brush Wear

### CAUTION

Prolonged operation of motor after a brush wear warning may result in failure of motor and motor control board.

1. Check for normal brush wear, which causes the brush sensor to come in contact with the motor commutator. Replace the brushes, page 30.
2. Check spade plug. The spade plug inside the motor housing may be twisted and contacting the commutator side of the brush sensor assembly, causing a false alarm. Follow the orange wire coming from J7 (E-20/E-XP1), or J6 (E-30/E-XP2), up to the spade connector on the motor. Using a flashlight, ensure the spade plug assembly is **not** making contact with the metal housing of the brush assembly.
3. Check wiring. The yellow brush sensor wire coming out of the brush may be routed online with the commutator wiring (thick red wire), causing a false alarm. Reroute the yellow wire coming out of the brush, away from the commutator wiring.
4. Check motor control board.
  - Remove the plug in J7 (E-20/E-XP1), or J6 (E-30/E-XP2). (This will cause an E27 alarm).
  - To remove the E27 alarm, use a jumper wire on the motor control board, across the two pins that the two yellow wires plug into. Then turn the unit on.
  - The E27 as well as the E29 alarm should be gone. If the E27 alarm is not gone double-check your jumper.
  - If the jumper is installed correctly and the E29 alarm is still there, replace the motor control board, page 34.

# Communication Diagnostic Codes

## E30: Momentary loss of communication

Communications between the display and the motor control board or the temperature control board have been momentarily lost. Normally, when communication is lost, the corresponding display will show E99. The corresponding control board will register E30 (The red LED will flash 30 times). If communications are reconnected, the display can show the E30 for a small time (no more than about two seconds). It should not be possible for E30 to be shown continuously, unless there is a loose connection causing the display and the board to continuously lose and regain communication.

Check all wiring between the display and the corresponding control board.

## E99: Loss of communication

Communications between the display and the motor control board or the temperature control board has been lost. When communication is lost, the corresponding display will show E99.

1. Check all wiring between the display and the corresponding control board. Pay close attention to the wire crimping on plug J13 for each board.



### WARNING




Read warnings, page 6. Step 2 measures line voltage and should be done by a qualified electrician. If work is not performed properly it may cause electric shock or other serious injury.



2. Measure the incoming voltage to the board (it should be ~ 230Vac).
3. If it was only receiving 1 leg of the 230Vac the board may light up, and still not function properly. Correct the incoming voltage problem.




# Troubleshooting

| PROBLEM                              | CAUSE   | SOLUTION   |
|--------------------------------------|---|--|
| Reactor does not operate.            | No power.   | Plug in power cord.  |
|                                      |   | Turn main power ON    |
|                                      |   | Turn circuit breakers ON, page 32.   |
|                                      | Red stop button circuit open.                           | Check button connections. See page 50 and electrical diagrams.   |
| Motor does not operate.              | Loose connections.                                      | Check connections at motor control board.  |
|                                      | Circuit breaker tripped.                                | Reset breaker (CB5), page 32. Check 230Vac at output of breaker.   |
|                                      | Worn brushes.   | Check both sides. Length must be 0.7 in. (17 mm) minimum. To replace, page 30.   |
|                                      | Broken or misaligned brush springs.                     | Realign or replace, page 30.   |
|                                      | Brushes or springs binding in brush holder.             | Clean brush holder and align brush leads for free movement.  |
|                                      | Shorted armature.                                       | Replace motor, page 33.  |
|                                      | Check motor commutator for burn spots or other damage.  | Remove motor. Have motor shop resurface commutator, if possible.   |
|                                      | Damaged motor control board.                            | Replace board. See page 34.  |
| Fan not working.                     | Blown fuse.   | Replace, page 37.  |
|                                      | Loose wire.   | Check.   |
|                                      | Defective fan.  | Replace, page 37.  |
| Pump output low.                     | Obstructed fluid hose or gun; fluid hose ID too small.  | Open, clear; use hose with larger ID.  |
|                                      | Worn piston valve or intake valve in displacement pump. | See pump manual.   |
|                                      | Pressure setpoint too high.                             | Reduce setpoint and output will increase.  |
| Fluid leak in pump packing nut area. | Worn throat seals.                                      | Replace. See pump manual.  |
| No pressure on one side.             | Fluid leaking from heater inlet rupture disk (214).     | Check if heater (2) and PRESSURE RELIEF/SPRAY valve (SA or SB) are plugged. Clear. Replace rupture disk (214) with a new one; do not replace with a pipe plug. |





| PROBLEM   | CAUSE   | SOLUTION  |
|---|---|---|
| No display.   | Main power OFF.   | Turn main power ON  .  |
|   | Loose display cable.  | Check cable connections, page 50.   |
|   | Both display boards failed.   | Check boards, replace; page 50.   |
| No temperature display.   | Loose display cable.  | Check cable connections, page 50.   |
|   | Failed temperature control board.   | Open cabinet. Check if board LED is blinking. If not, check power wiring connections to ensure board has power. If board has power and LED is not blinking, replace board, page 38. |
|   | Inadequate power to temperature board.  | Check that power supply meets requirements.   |
|   | Loose power cable (internal to display).  | Check cable connections, page 50.   |
|   | Defective display board.  | Replace, page 50.   |
| No pressure display.  | Loose display cable.  | Check cable connections, page 50.   |
|   | Failed motor control board.   | Open cabinet. Check if board LED is lighted. If not, replace board, page 34.  |
|   | Inadequate power to motor control board.  | Check that power supply meets requirements.   |
|   | Loose power cable.  | Check cable connections, page 50.   |
|   | Defective display board.  | Replace, page 50.   |
|   | Circuit breaker tripped.  | Reset breaker.  |
| Hose display reads 0A on startup.                                     | FTS not installed and  zone off. | Install FTS (see operation manual), or adjust current to desired setting.   |
| Erratic display; display turns on and off.                            | Cable not grounded.   | Ground cable, page 50.  |
|   | Extension cable too long.   | Must not exceed 100 ft (30.5 m).  |
| Display buttons do not work properly; cannot get out of an operation. | Broken membrane switch.   | Replace, page 50.   |
|   | Ribbon cable disconnected or broken.  | Connect cable, or replace.  |
| Red stop button does not work.  | Broken button (fused contact).  | Replace, page 50.   |
|   | Loose wire.   | Check connections, page 50.   |



| PROBLEM                   | CAUSE                                  | SOLUTION  |
|---------------------------|--|---|
| No heat in A or B zones.  | Circuit breaker(s) tripped.            | Reset breaker CB3 or CB4, page 32.  |
|                           | Heat turned off.                       | Press <b>A</b> or <b>B</b> zone  keys.   |
|                           | Temperature control alarm.             | Check temperature displays for diagnostic code, page 10.  |
|                           | Defective heater.                      | Replace, page 40. Check resistance.   |
|                           | Loose connectors or wire nuts.         | Check connections.  |
|                           | Failed temperature control board.      | Open cabinet. Check if board LED is blinking. If not, check power wiring connections to ensure board has power. If board has power and LED is not blinking, replace board, page 38. |
| Low heat in A or B zones. | A and B temperature setpoints too low. | Check setpoint. Increase if necessary.  |
|                           | Flow too high.                         | Use smaller mix chamber. Decrease pressure.   |
|                           | Defective heater.                      | Replace, page 40. Check resistance.   |
|                           | Loose connectors or wire nuts.         | Check connections.  |
|                           | Low voltage.                           | Check that power supply meets requirements.   |
|                           | Overheated temperature control board.  | Check fan operation.  |
|                           |  | Check if door is open; close.   |
|                           |  | Check that cooling holes are not clogged or obstructed.   |
|                           | Fluid too cold.                        | Preheat fluid.  |



| PROBLEM        | CAUSE  | SOLUTION  |
|----------------|--|---|
| No hose heat.  | Loose hose electrical connections.   | Check connections. Repair as necessary.   |
|                | Circuit breakers tripped.  | Reset breakers (CB1 or CB2), page 32.   |
|                | Hose zone not turned on.   | Press  zone  key. |
|                | A and B temperature setpoints too low.   | Check. Increase if necessary.   |
|                | Failed temperature control board.  | Open cabinet. Check if board LED is blinking. If not, check power wiring connections to ensure board has power. If board has power and LED is not blinking, replace board, page 38.     |
|                | 380 V Only. In-rush Current Limiter contactor not closing when hose heat is turned on. | Check to see if contactor is snapping shut. If not check fuse item 120614. Replace if blown. In not blown move to transformer checks.   |
| Low hose heat. | A and B temperature setpoints too low.   | Increase A and B setpoints. Hose designed to maintain temperature, not increase temperature.  |
|                | Hose temperature setpoint too low.   | Check. Increase if necessary to maintain heat.  |
|                | Flow too high.   | Use smaller mix chamber. Decrease pressure.   |
|                | Low current; FTS not installed.  | Install FTS, see operation manual.  |
|                | Hose heat zone not turned on long enough.  | Allow hose to heat up, or preheat fluid.  |
|                | Loose hose electrical connections.   | Check connections. Repair as necessary.   |



# Repair

## Pump Removal

### WARNING




Pump rod and connecting rod move during operation. Moving parts can cause serious injury such as pinching or amputation. Keep hands and fingers away from connecting rod during operation.

See manual 309577 for pump repair instructions.


1. Shut off **A** , **B** , and  heat zones.

2. Flush pump, page 8.

3. If pumps are not parked, press  Trigger gun until pumps stop.


4. Turn main power OFF  . Disconnect power supply.

5. Shut off both feed pumps. Close both fluid inlet ball valves (B).

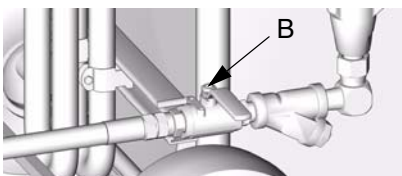

TI4174a


6. Turn both PRESSURE RELIEF/SPRAY valves (SA, SB) to PRESSURE RELIEF. Route fluid to waste containers or supply tanks. Ensure gauges drop to 0.

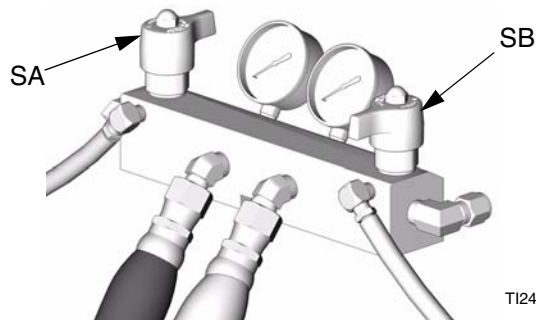


TI2481A

Use dropcloth or rags to protect Reactor and surrounding area from spills.



 Steps 7-9 apply to pump A. See FIG. 4. To disconnect pump B, go to steps 10 and 11.


7. Disconnect fittings at fluid inlet (C) and outlet (D, out of view). Also disconnect steel outlet tube from heater inlet.
8. Disconnect tubes (T). Remove tube fittings (U) from wet-cup.
9. Loosen locknut (G) by hitting firmly with a non-sparking hammer. Unscrew pump far enough to separate and push up finger guard (P), to expose rod retaining pin. Push retaining wire clip up. Push pin out. Continue unscrewing pump.

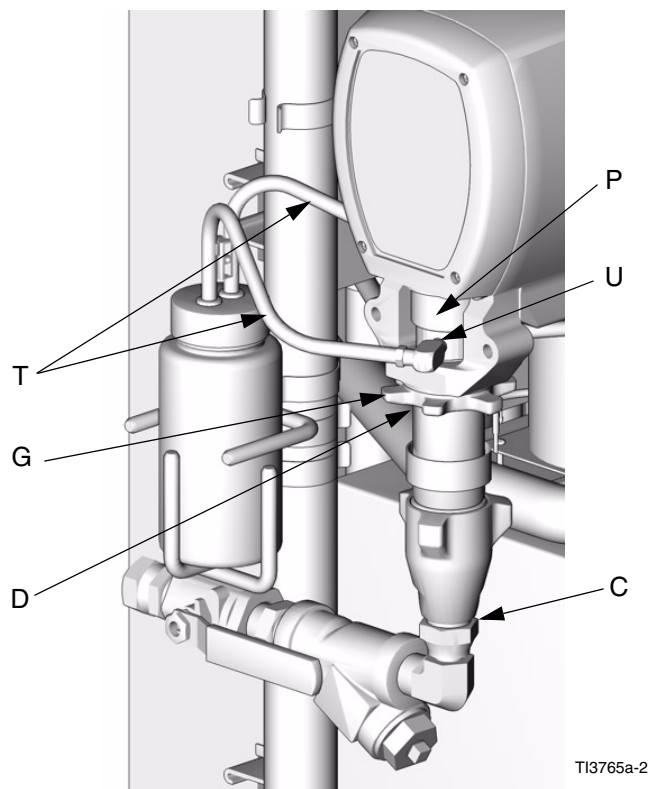

**FIG. 4. Disconnect Pump A**

 Steps 10 and 11 apply to pump B. See FIG. 5.


10. Disconnect fluid inlet (C) and outlet (D). Also disconnect steel outlet tube from heater inlet.
11. Push retaining wire clip (E) up. Push pin (F) out. Loosen locknut (G) by hitting firmly with a non-sparking hammer. Unscrew pump.

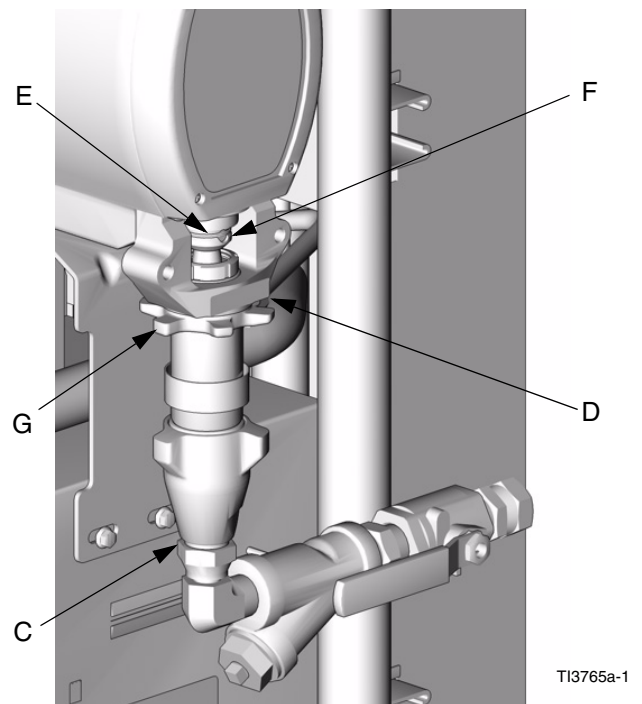


**FIG. 5. Disconnect Pump B**



## Pump Installation

 Steps 1-5 apply to pump B. See FIG. 6. To reconnect pump A, go to step 6 on page 27.

1. Ensure locknut (G) is screwed on pump with flat side up. Screw pump into bearing housing (M) until pin holes align. Push pin (F) in. Pull retaining wire clip (E) down.
2. Continue screwing pump into housing until fluid outlet (D) is aligned with steel tube and top threads are  $\pm 1/16$  in. (2 mm) of bearing face (N).
3. Tighten locknut (G) by hitting firmly with a non-sparking hammer.
4. Reconnect fluid inlet (C) and outlet (D).
5. Go to step 13, page 27.

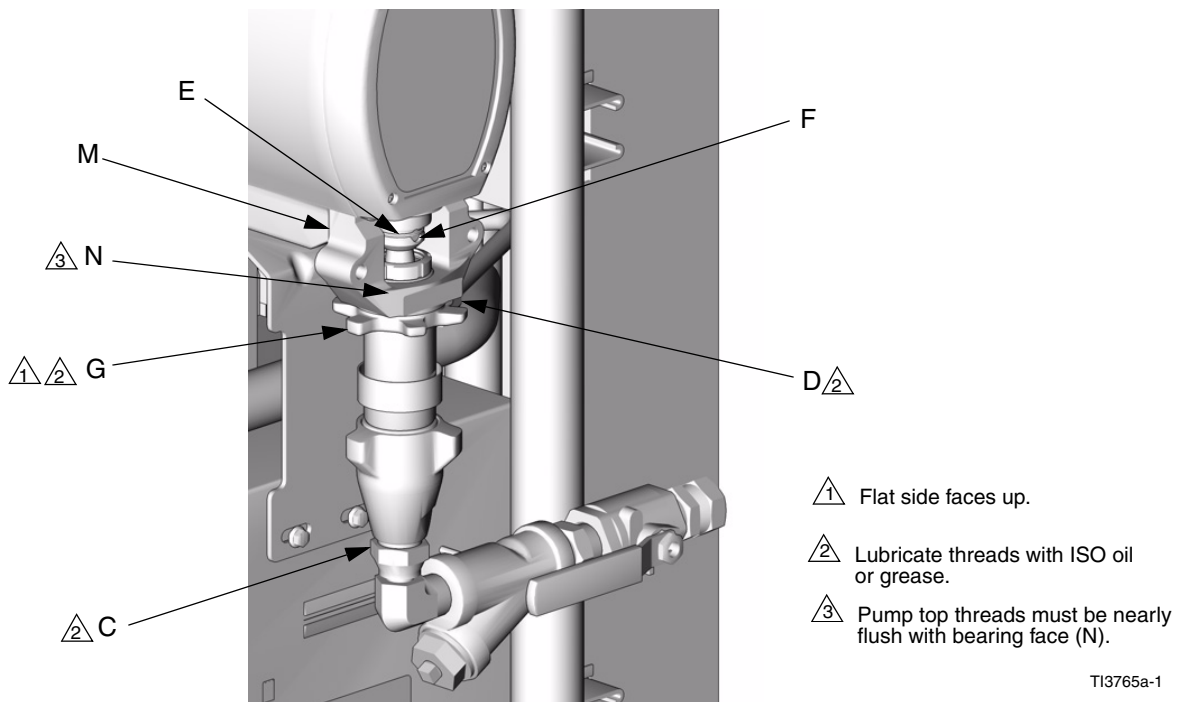

TI3765a-1

**FIG. 6. Reconnect Pump B**





Steps 6-12 apply to pump A only. See FIG. 7.

6. Ensure star-shaped locknut (G) is screwed on pump with flat side up. Carefully twist and extend displacement rod 2 in. (51 mm) above wet-cup.
7. Start threading pump into bearing housing (M). Place finger guard (P) over rod when it is accessible through window of bearing housing. When pin holes align, insert pin. Pull retaining wire clip down.



Finger guard is not used on Model E-30.

8. Seat finger guard (P) on wet-cup. Continue threading pump into bearing housing (M) until top threads are +/- 1/16 in. (2 mm) of bearing face (N). Ensure that barbed fittings at wet-cup flush ports are accessible.

9. Connect component A outlet tube loosely at pump and at heater. Line up tube, then tighten fittings securely.
10. Tighten star-shaped locknut (G) by hitting firmly with a non-sparking hammer.
11. Apply thin film of TSL to barbed fittings. Using two hands, support tubes (T) while pushing straight onto barbed fittings. **Do not let tubes kink or buckle.** Secure each tube with a wire tie between two barbs.
12. Reconnect fluid inlet (C).
13. Purge air and prime the system. See Reactor operation manual.



Flat side faces up.




Lubricate threads with ISO oil or grease.



Pump top threads must be nearly flush with bearing face (N).



Finger guard (P) not used on Model E-30.

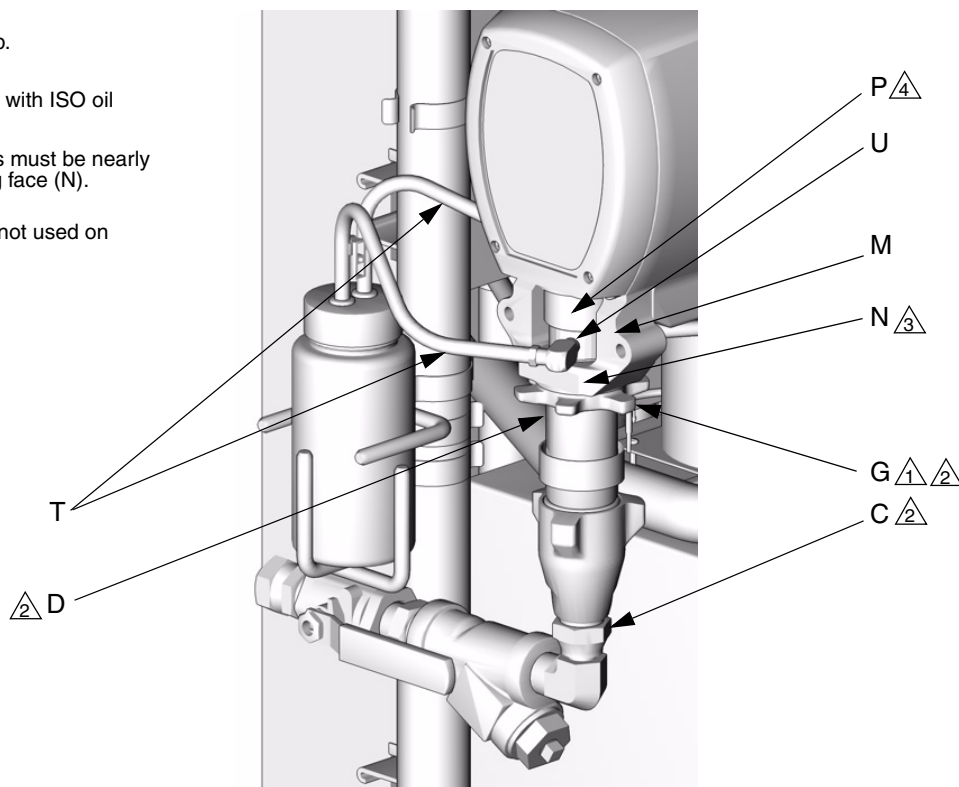

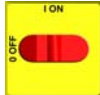

TI3765a-2

FIG. 7. Reconnect Pump A



# Drive Housing


## Removal


1. Turn main power OFF  . Disconnect power supply.
  2. Relieve pressure, page 9.
  3. Remove screws (38) and motor shield (9), page 53.
  4. Remove screws (309) and front cover (317), FIG. 8.
-  Examine bearing housing (303) and connecting rod (305). If these parts need replacing, first remove the pump (306), page 24.
5. Disconnect pump inlet and outlet lines. Remove screws (313), washers (315), and bearing housing (303).

### CAUTION



Do not drop gear cluster (304) when removing drive housing (302). Gear cluster may stay engaged in motor front end bell (R) or drive housing.

6. Remove screws (312, 319) and washers (314) and pull drive housing (302) off motor (301).

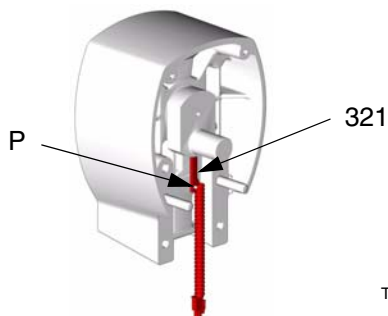 The A side drive housing includes cycle counter switch (321). If replacing this housing, remove pins (P) and switch. Reinstall pins and switch on new drive housing. Switch wires connect to J10 pins 5 and 6 on motor control board, page 34.




TI3250a

2. Install one bronze washer (308) in drive housing, then install steel washers (307, 318) as shown.
  3. Install second bronze washer (308) on gear cluster (304) and insert gear cluster in drive housing.
-  Drive housing crankshaft (S) must be in line with crankshaft at other end of motor.
4. Push drive housing (302) onto motor (301). Install screws (312, 319) and washers (314).
-  If bearing housing (303), connecting rod (305), or pump (306) were removed, reassemble rod in housing and install pump, page 24.
5. Install bearing housing (303), screws (313), and washers (315). Pumps must be in phase (both at same position in stroke).
  6. Install front cover (317) and screws (309).
  7. Install motor shield (9) and screws (38).

## Installation

1. Apply grease liberally to washers (307, 308, 318), all gears, and inside drive housing (302).



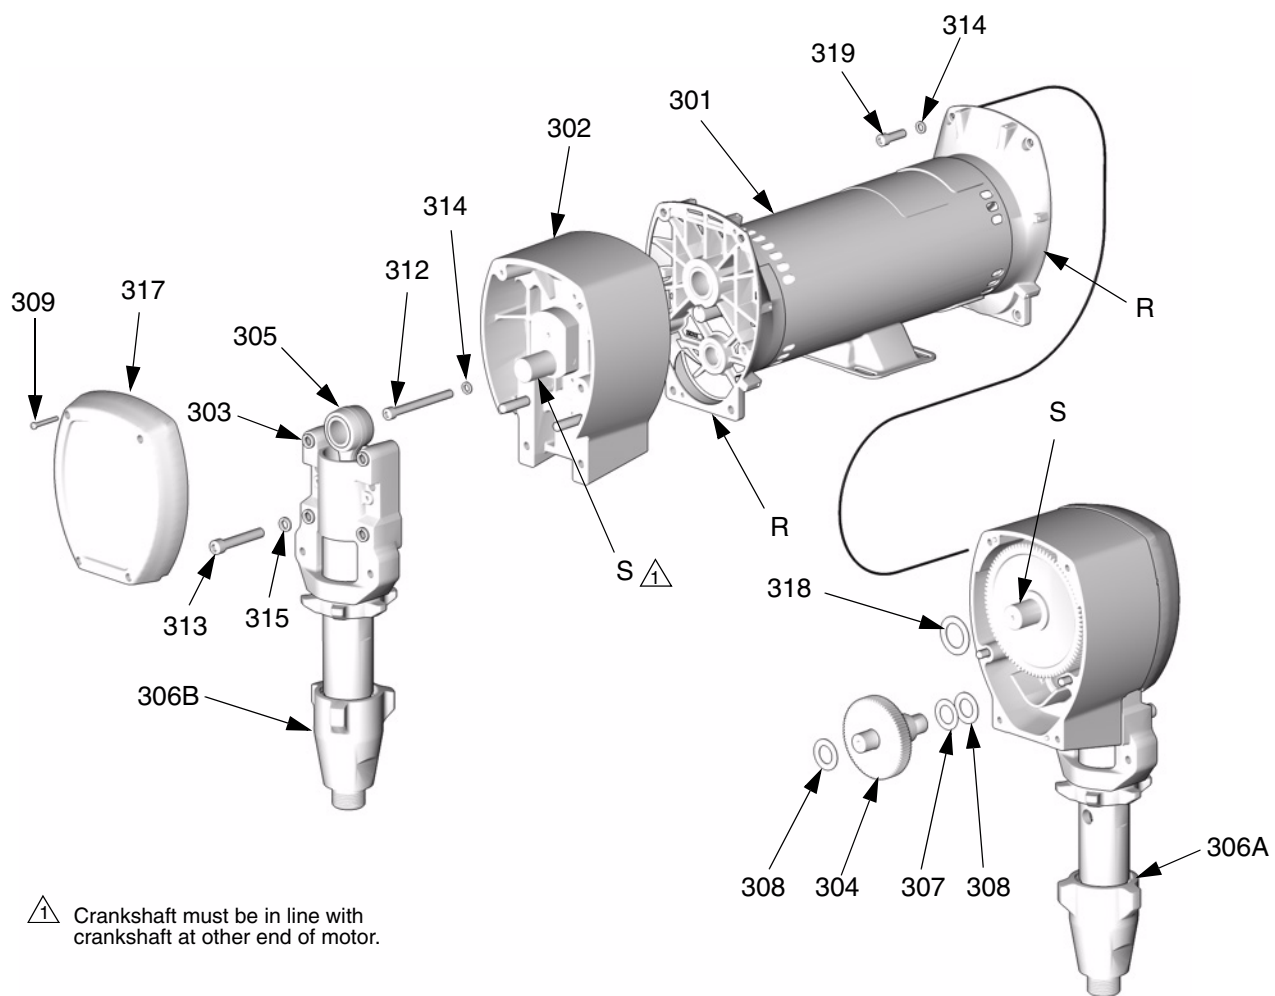


TI3152A

**FIG. 8. Drive Housing**





# Motor Brushes

## Brush Removal

 Replace brushes worn to less than 1/2 in. (13 mm). Brushes wear differently on each side of motor; check both sides. Brush Repair Kit 234037 is available.


1. Turn main power OFF . Disconnect power supply.


 **WARNING**




Read warnings, page 6. Wait 5 min for stored voltage to discharge (E-30 and E-XP2 models only).

2. Relieve pressure, page 9.
3. Remove motor cover, screw, and washers. Remove inspection covers, screws, and gaskets from each end of motor.
4. Push in spring clip (C) to release hooks (H) from brush holder. Pull out clip and spring (S).

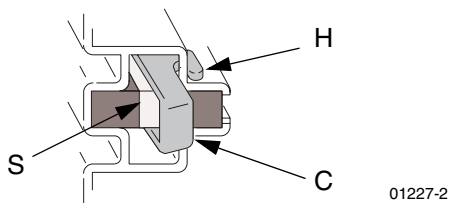

 One brush has a wire on top for brush wear signal. Note which side of motor it is on. Unplug at spade connector provided.

5. Loosen terminal screw (R). Pull away brush lead (L), being careful motor lead terminal (T) remains in place. Remove and discard brush (B).

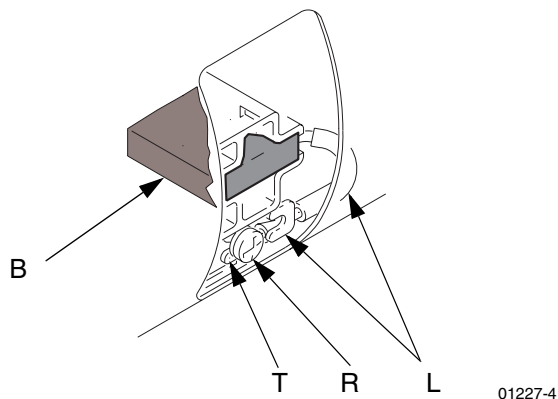


6. Inspect commutator for excessive pitting, burning, or gouging. Black color on commutator is normal. Have commutator resurfaced by qualified motor repair shop if brushes wear too quickly.
7. Repeat for other side.


## Brush Installation

### CAUTION

When installing brushes, follow steps carefully. Improper installation damages parts beyond use.


 Install brush with wires on same side of motor as before. Plug spade terminal into connector.

1. Install new brush (B) so lead (L) is in long slot (D) of holder.

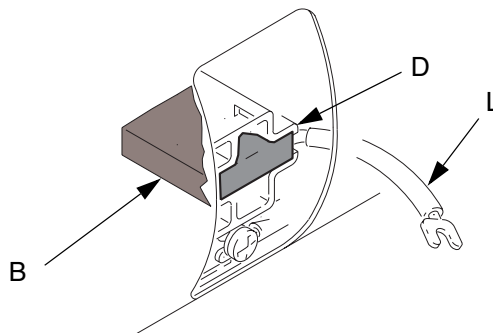




2. Slide terminal (L) under terminal screw (R). Make sure motor lead terminal (T) is still connected at screw. Tighten screw.

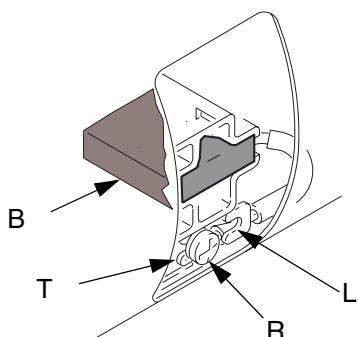


01227-4

3. Install spring (S) so it will uncoil onto brush (B), as shown. Spring will be damaged if installed backwards.

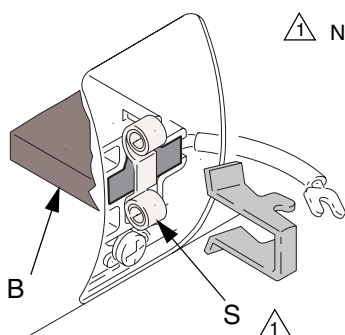


01227-6

4. Install spring clip (C) and push in until hooks (H) catch slots in housing. Incorrect installation may jam clip

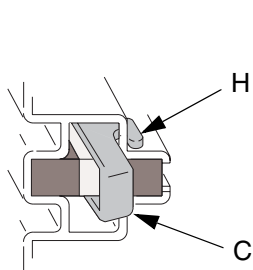

01227-2

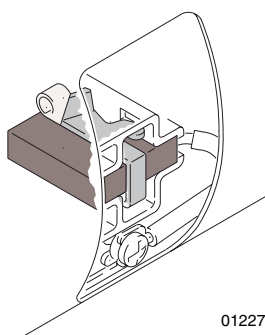

01227-6

### ⚠ WARNING




Do not touch brushes, leads, springs, or brush holders while equipment is plugged in, to reduce the risk of electric shock and serious injury.

### ⚠ CAUTION

Do not run pumps dry for more than 30 sec while checking brushes, to avoid damaging pumps.


5. Reinstall brush inspection covers, gaskets, and screws. Reinstall motor cover, screws, washers, and drive housing/pump assemblies.
6. Test brushes with both pump pins (F) disconnected, page 24.


Select J 1 (jog mode). Press motor  to start motor. Slowly increase jog setting to J 6. Inspect brush and commutator contact area for excessive arcing. Arcs should not "trail" or circle around commutator surface.


Run motor for 20-30 min at J 6 to seat brushes.



# Circuit Breaker Module

1. Turn main power OFF . Disconnect power supply. Turn circuit breakers on to test.

 **WARNING**



Read warnings, page 6. Wait 5 min for stored voltage to discharge (E-30 and E-XP2 models only).

2. Relieve pressure, page 9.


3. Using an ohmmeter, check for continuity across circuit breaker (top to bottom). If no continuity, trip breaker, reset, and retest. If still no continuity, replace breaker as follows:
- a. Refer to electrical diagrams and to TABLE 1. Disconnect wires and remove bad breaker.

b. Install new breaker and reconnect wires.

Table 1: Circuit Breakers, see FIG. 9

| Ref. No. | Size        | Component                       |
|----------|-------------|---------------------------------|
| 806      | 50 A        | Hose/Transformer Secondary Side |
| 817A     | 20 A        | Transformer Primary             |
| 804A     | 25 or 40 A* | Heater A                        |
| 804B     | 25 or 40 A* | Heater B                        |
| 817B     | 20 A        | Motor/Pumps                     |

\* Depending on model.

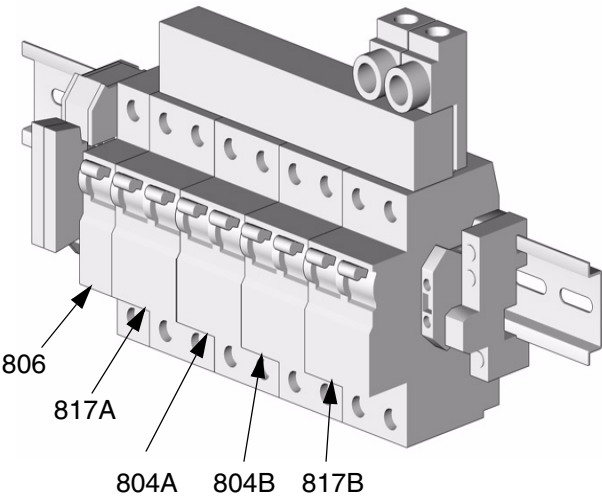

TI2514A

**NOTE:** To reference cables and connectors, see the electrical diagrams and the parts drawings on pages 68-70.

FIG. 9. Circuit Breaker Module



# Electric Motor

## Removal

1. Turn main power OFF  . Disconnect power supply.



### WARNING



Read warnings, page 6. Wait 5 min for stored voltage to discharge (E-30 and E-XP2 models only).

2. Relieve pressure, page 9.
3. Remove drive housing/pump assemblies, page 28.
4. Disconnect motor cables as follows:
  - a. Refer to electrical diagrams. Motor control board is on right side inside cabinet, see page 34.
  - b. Unplug motor power harness from connector J4 on board. See FIG. 10, page 35.
  - c. Unplug 3-pin connector J7 from board.
  - d. Thread cables through top of cabinet to free motor.



### CAUTION

Motor is heavy. Two people may be required to lift.

5. Remove screws holding motor to cabinet. Lift motor off unit.

## Installation

1. Place motor on unit. Thread motor cables into cabinet and into bundles as before. See electrical diagrams.
2. Fasten motor with screws.
3. Plug 3-pin connector J7 to board.

4. Plug motor power harness to connector J4 on board.
5. Install drive housing/pump assemblies, page 28.
6. Return to service.



## Motor Control Board



Motor control board has one red LED (D11 for 245980, D7 for 245981). Power must be on to check. See FIG. 10 for location. Function is:

- Startup: 1 blink for 60 Hz, 2 blinks for 50 Hz.
- Motor running: LED on.
- Motor not running: LED off.
- Diagnostic code (motor not running): LED blinks diagnostic code (for example, E21=21 blinks).

### CAUTION

Before handling board, put on a static conductive wrist strap to protect against static discharge which can damage board. Follow instructions provided with wrist strap.



1. Turn main power OFF. Disconnect power supply.

### WARNING



Read warnings, page 6. Wait 5 min for stored voltage to discharge (E-30 and E-XP2 models only).

2. Relieve pressure, page 9.
3. Refer to electrical diagrams. Motor control board is on right side inside cabinet.
4. Put on static conductive wrist strap.
5. Disconnect all cables and connectors from board.
6. Remove nuts (42) and take entire motor control assembly to workbench.
7. Remove screws and take board off heatsink.

8. Set DIP switch (SW2) on new board. See below for factory settings. See FIG. 10 for location on board.

### WARNING



Read warnings, page 6. To prevent overpressurization, DIP switch 2 must be set to ON for Models E-20 and E-30.

- Switch 1: not used.
  - Switch 2: ON for Models E-20 and E-30, OFF for Models E-XP1 and E-XP2.
  - Switch 3: ON for pressure imbalance alarm, OFF for pressure imbalance warning.
  - Switch 4: not used.
9. Install new board in reverse order. Apply thermal heatsink compound to mating surfaces of board and heatsink.



Order Part No. 110009 Thermal Compound.

**Table 2: Motor Control Board Connectors**

| Model E-20 and E-XP1 | Model E-30 and E-XP2 | Pin  | Description                                    |
|----------------------|----------------------|------|--|
| J1                   | N, L                 | n/a  | Main motor power                               |
| J3                   | J3                   | n/a  | Transducer A                                   |
| J4                   | J1                   | n/a  | Motor output                                   |
| J7                   | J6                   | 1, 2 | Motor thermal overload signal                  |
|                      |                      | 3    | Brush wear signal                              |
| J8                   | J5                   | n/a  | Transducer B                                   |
| J10                  | J7                   | 1-4  | Not used                                       |
|                      |                      | 5, 6 | Cycle switch signal                            |
|                      |                      | 7-10 | Jumper 15C866 (available in repair kit 246961) |
| J12                  | J12                  | n/a  | Data reporting                                 |
| J13                  | J13                  | n/a  | To display board                               |




## 245980 Motor Control, for E-20 and E-XP1

### DIP Switch (SW2) Settings

#### Model E-20

ON

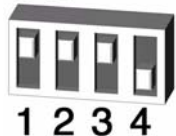


TI3178b-3

#### Model E-XP1

ON



TI3178b-4

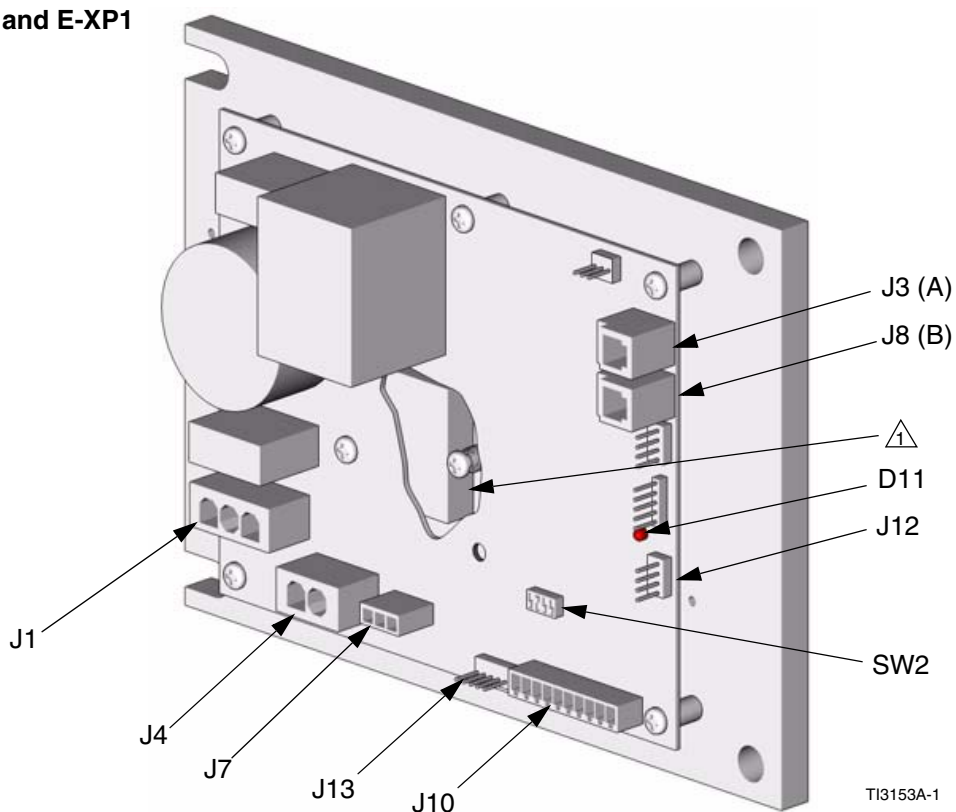

## 245981 Motor Control, for E-30 and E-XP2

### DIP Switch (SW2) Settings

#### Model E-30

1 2 3 4



ON

TI3178b-2


#### Model E-XP2

1 2 3 4



ON

TI3178b-1

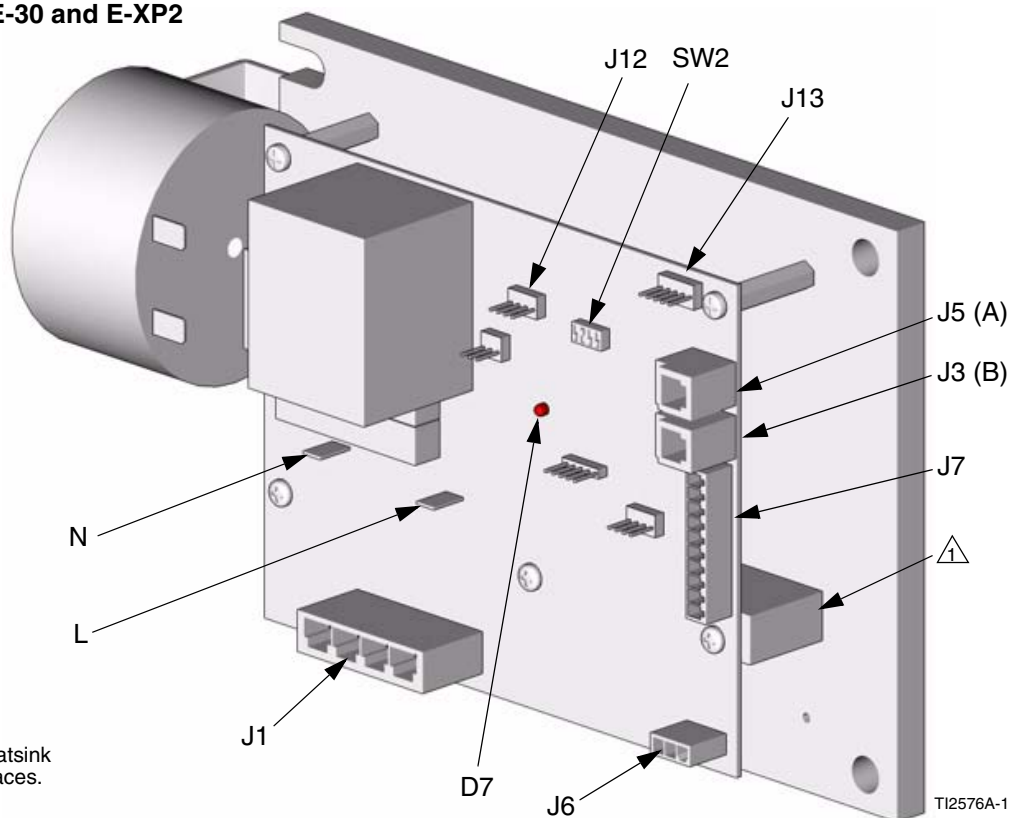

⚠ Apply 110009 thermal heatsink compound to mating surfaces.


**FIG. 10. Motor Control Board**



# Transducers

1. Turn main power OFF  . Disconnect power supply.


**⚠ WARNING**



Read warnings, page 6. Wait 5 min for stored voltage to discharge (E-30 and E-XP2 models only).

2. Relieve pressure, page 9.
3. Refer to electrical diagrams. Motor control board is on right side inside cabinet.

4. Disconnect transducer cables at board; see FIG. 10, page 35. Reverse A and B connections and check if diagnostic code follows, page 16.
5. If transducer fails test, thread cable through top of cabinet. Note path as cable must be replaced in same way.
6. Install o-ring (720) on new transducer (706), FIG. 11.
7. Install transducer in manifold. Mark end of cable with tape (red=transducer A, blue=transducer B).
8. Route cable into cabinet and thread into bundle as before.
9. Connect transducer cable at board; see FIG. 10, page 35.

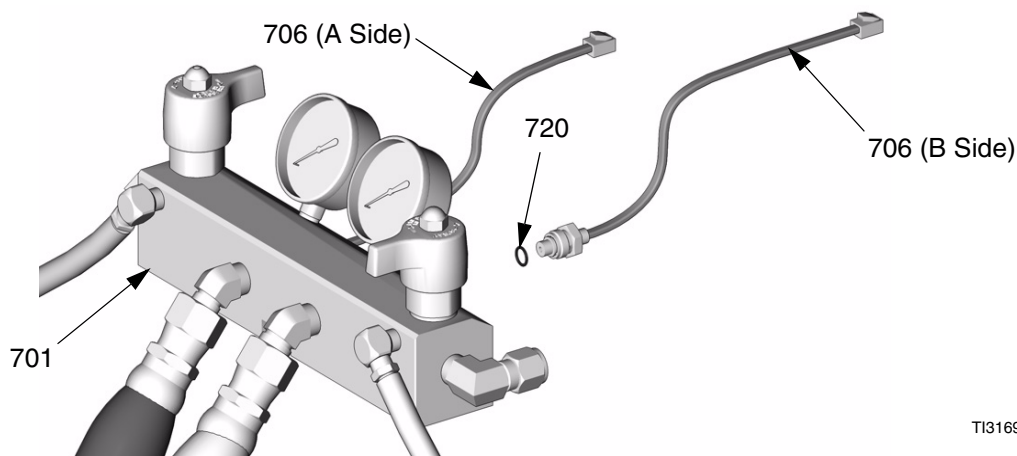

TI3169a

**FIG. 11. Transducers**



# Fan

1. Turn main power OFF . Disconnect power supply.




## WARNING



Read warnings, page 6. Wait 5 min for stored voltage to discharge (E-30 and E-XP2 models only).

2. Relieve pressure, page 9.
3. Check fuses (F) at left of breaker module, FIG. 12. Replace if blown. If good, continue with step 4.
4. Refer to electrical diagrams. Disconnect fan wires from fuses (F). Thread wires through top of cabinet.
5. Remove fan.
6. Install fan in reverse order.

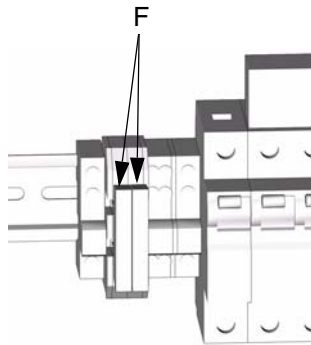

TI2514A-1

**FIG. 12. Fan Fuses**



# Temperature Control Board



Temperature control board has seven green LEDs. Power must be on to check. See FIG. 10 for location.

**Table 3: Temperature Control Board LEDs**

| LED | Status            | Function  |
|-----|-------------------|---|
| D26 | blinks            | Board powered                                       |
| D14 | on                | Zone A turned on                                    |
| D13 | cycles on and off | Zone A powered, LED cycles as temperature cycles    |
| D18 | on                | Zone B turned on                                    |
| D19 | cycles on and off | Zone B powered, LED cycles as temperature cycles    |
| D27 | on                | Hose zone turned on                                 |
| D15 | cycles on and off | Hose zone powered, LED cycles as temperature cycles |

## CAUTION

Before handling board, put on a static conductive wrist strap to protect against static discharge which can damage board. Follow instructions provided with wrist strap.

1. Turn main power OFF . Disconnect power supply.

## WARNING



Read warnings, page 6. Wait 5 min for stored voltage to discharge (E-30 and E-XP2 models only).

2. Relieve pressure, page 9.
3. Refer to electrical diagrams. Temperature control board is on left side inside cabinet.
4. Put on static conductive wrist strap.
5. Disconnect all cables and connectors from board, FIG. 13.

6. Remove nuts and take entire temperature control assembly to workbench.
7. Remove screws and take board off heatsink.
8. Install new board in reverse order. Apply thermal heatsink compound to mating surfaces of board and heatsink.




Order Part No. 110009 Thermal Compound.


**Table 4: Temperature Control Board Connectors**

| Connector | Pin  | Description              |
|-----------|------|--------------------------|
| J1        | 1, 2 | Overtemperature switch A |
|           | 3, 4 | Overtemperature switch B |
|           | 5, 6 | Current sensor           |
|           | 7    | Thermocouple A, red      |
|           | 8    | Thermocouple A, yellow   |
|           | 9    | Not used                 |
|           | 10   | Thermocouple B, red      |
|           | 11   | Thermocouple B, yellow   |
|           | 12   | FTS, silver              |
|           | 13   | FTS, red                 |
|           | 14   | FTS, purple              |
| J2        | n/a  | To A heaters             |
| J5        | n/a  | To display board         |
| J8        | n/a  | Data reporting           |
| J9        | n/a  | To B heaters             |
| J13       | n/a  | To heated hose           |



## 245979 Temperature Control Board

 Apply 110009 thermal heatsink compound to mating surfaces.

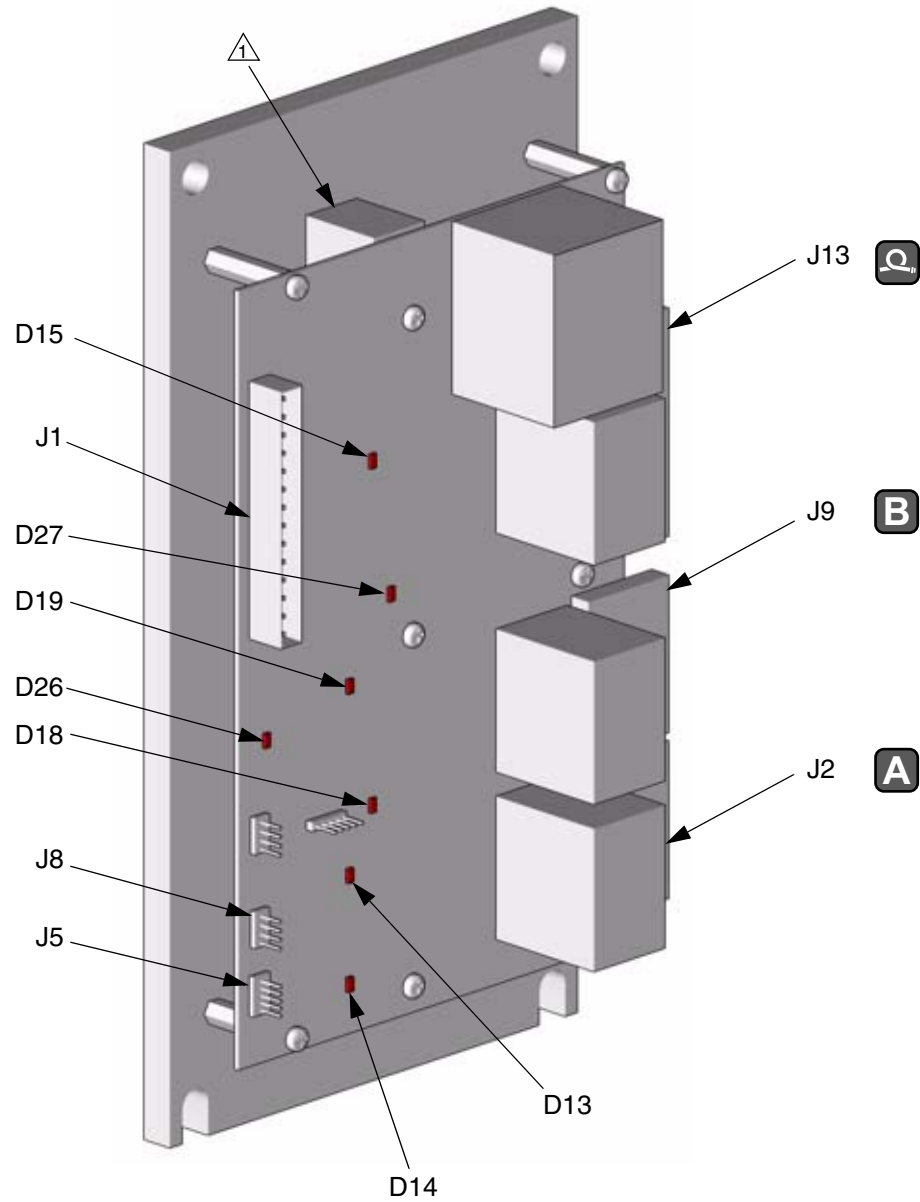

TI2572a

**FIG. 13. Temperature Control Board**



# Heater

## Heater Element

1. Turn main power OFF  . Disconnect power supply.


2. Relieve pressure, page 9.

### WARNING



Read warnings, page 7. Wait for heaters to cool before repairing.

3. Wait for heaters to cool.
4. See FIG. 14. Remove tape and wire connector (63, not shown), and disconnect heater element wires (W) from heater wire harness. Test with ohmmeter. Resistance must be 21-25 ohms for 2550W element, and 30-34 ohms for 1500W element.
5. If heater fails test, remove temperature sensor (211) to avoid damage.
6. Remove heater element (207) from tube (201). Be careful not to spill any fluid left in tube.
7. Install new heater element (207), holding mixer (202) so it does not interfere with Thermocouple (P).
8. Reinstall temperature sensor, page 41.
9. Reconnect wires and secure with connector (63) and electrical tape.

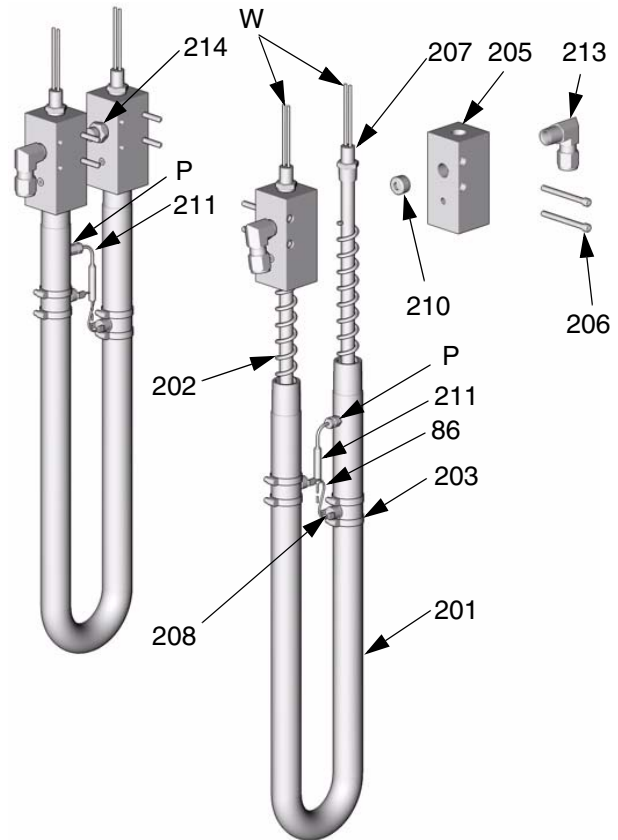

TI2512b

**FIG. 14. Heater (Model 245962 Shown)**



## Thermocouple

1. Turn main power OFF . Disconnect power supply.

2. Relieve pressure, page 9.



### WARNING



Read warnings, page 7. Wait for heaters to cool before repairing.

3. Wait for heaters to cool.
4. Disconnect thermocouple wires from J1 on temperature control board. See TABLE 4, page 38 and FIG. 13, page 39.
5. See FIG. 15. Test with ohmmeter. Between wires (S), resistance must be approximately 6 ohms. Between tip (T) and wires, resistance must be infinity ( $\infty$ ).
6. If thermocouple fails test, feed wires out of cabinet. Note path as wires must be replaced in the same way.
7. Loosen ferrule nut (N). Remove thermocouple (211) from heater tube (201), then remove sensor housing (H).
8. Replace thermocouple, FIG. 15.
  - a. Remove protective tape from thermocouple tip (T).
  - b. To ensure mixer (202) is out of the way, insert 1/4 in. drill bit into heater tube (201) to a minimum depth of 0.81 in. (20.6 mm). If minimum is not achieved, mixer must be moved before proceeding.
  - c. Apply PTFE tape and thread sealant to male threads and tighten thermocouple housing (H) into tube (201).
  - d. Push in thermocouple (211) so tip (T) contacts heater element (207), avoiding mixer (202).

- e. Tighten ferrule nut (N), holding thermocouple (T) against heater element.


9. Route wires into cabinet and thread into bundle as before. Reconnect wires to board.
10. Turn on heaters A and B simultaneously to test. Temperatures should rise at same rate (30°F, +/- 4°). If one heater is low, loosen ferrule nut (N) and tighten sensor housing (H) to ensure thermocouple tip (T) contacts element (207).



Apply PTFE tape and thread sealant.



Apply 110009 thermal heatsink compound.

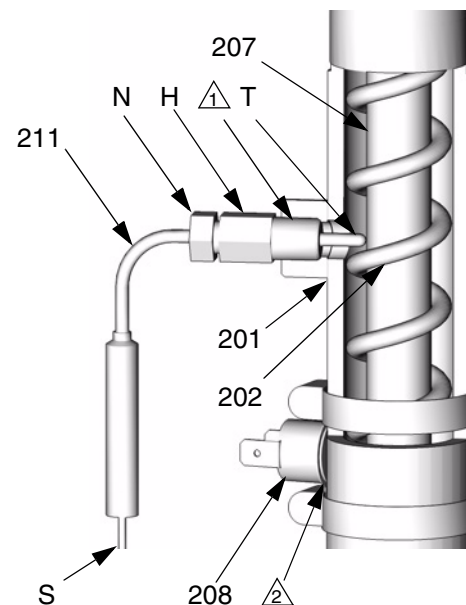

TI3249a

**FIG. 15. Thermocouple**



## Overtemperature Switch

1. Turn main power OFF  . Disconnect power supply.

2. Relieve pressure, page 9.



### WARNING



Read warnings, page 7. Wait for heaters to cool before repairing.


3. Wait for heaters to cool.
4. Disconnect one leadwire from overtemperature switch (208), FIG. 15. Test across switch with ohmmeter. Resistance must be approximately 0 ohms.
5. If switch fails test, cut off clamps with wire clippers. Remove switch. Install new switch in same location on tube (201) and secure with hose clamps (203). Reconnect wires.




If wires need replacement, disconnect from temperature control board. See TABLE 4, page 38 and FIG. 13, page 39.




# Heated Hose

 Refer to the heated hose manual 309572 for hose replacement parts.

## Check Hose Connectors

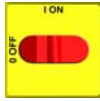
1. Turn main power OFF  . Disconnect power supply.

2. Relieve pressure, page 9.

 Whip hose must be connected.


3. Disconnect hose electrical connector (D) at Reactor, FIG. 16.
4. Using an ohmmeter, check between the two terminals of hose connector (D). There should be continuity.
5. If hose fails test, retest at each length of hose, including whip hose, until failure is isolated.

## Check FTS Cables

1. Turn main power OFF  . Disconnect power supply.
2. Relieve pressure, page 9.
3. Disconnect FTS cable (F) at Reactor, FIG. 16.
4. Test with ohmmeter between pins of cable connector.


| Pins   | Result   |
|--------|--|
| 1 to 2 | approximately 35 ohms per 50 ft (15.2 m) of hose, plus approximately 10 ohms for FTS |
| 1 to 3 | infinity ( $\infty$ )  |


5. If cable fails test, retest at FTS, page 44.

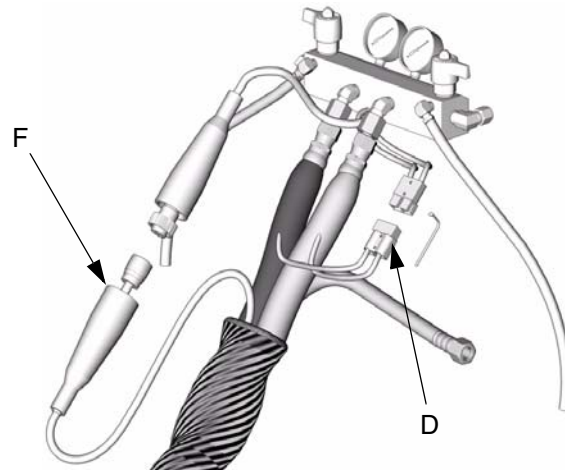


TI2726a

**FIG. 16. Heated Hose**

 When inserting contact into connector (D) ensure that notch of contact snaps over edge of spring clip as shown in the cutaway drawing. See FIG. 17.

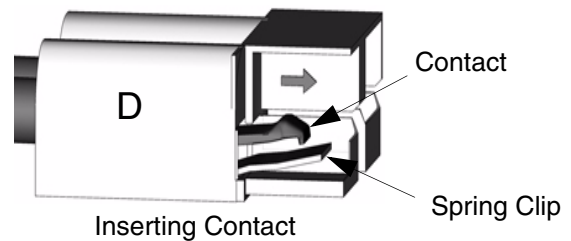

TI8367

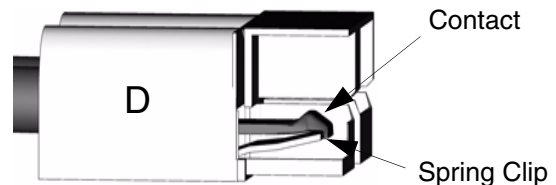

Contact fully inserted and correctly snapped onto spring clip.


TI8368A

**FIG. 17 Connector**



# Fluid Temperature Sensor (FTS)

## Test/Removal

1. Turn main power OFF . Disconnect power supply.
2. Relieve pressure, page 9.
3. Remove tape and protective covering from FTS (X), FIG. 18. Disconnect hose cable (F). Test with ohmmeter between pins of cable connector.

| Pins                               | Result                |
|------------------------------------|-----------------------|
| 1 to 2                             | approximately 10 ohms |
| 1 to 3                             | infinity ( $\infty$ ) |
| 3 to FTS groundscrew               | 0 ohms                |
| 1 to FTS component A fitting (ISO) | infinity ( $\infty$ ) |

4. If FTS fails test, replace FTS.
5. Disconnect air hoses (C, L), and electrical connectors (D).
6. Disconnect FTS from whip hose (W) and fluid hoses (A, B).
7. Remove ground wire (K) from ground screw on underside of FTS.
8. Remove FTS probe (H) from component A (ISO) side of hose.

## Installation

 
### CAUTION

To prevent damage to probe, do not kink or excessively bend whip hose. Do not coil hose tighter than the minimum bend radius of 3 ft (0.9 m). Do not subject hose to excessive weight, impact, or other abuse.

1. Carefully extend FTS probe (H). Do not bend or kink probe. Insert in component A (ISO) side of main hose.

2. Connect whip hose ground wire (K) to ground screw on underside of FTS.
3. Install FTS in reverse order of removal. Leave slack (G) in cables as stress relief, to prevent cable failure.
4. Secure hose and cable connections with tape and install protective covering.

## SCR Circuit check – ON position:

1. Ensure that all harnesses, cables, and connectors are properly connected. Connect hose.
2. Connect power supply. Turn main power ON .
3. Set hose heat target temperature above ambient hose temperature

4. Turn on heat zone by pressing .

### WARNING



 
Read warnings, page 6. Step 5 measures line voltage and should be done by a qualified electrician. If work is not performed properly it may cause electric shock or other serious injury.

5. Carefully measure the voltage at the white Anderson connector for the hose.

You should read:

50' = 20 VAC  
 100' = 34 VAC  
 150' = 48 VAC  
 200' = 62 VAC  
 250' = 76 VAC  
 300' = 90 VAC

## SCR Circuit check - OFF position

1. Ensure that all harnesses, cables, and connectors are properly connected. Connect hose.
2. Connect power supply. Turn main power ON .
3. Set hose heat target temperature below ambient hose temperature.



4. Turn on heat zone by pressing




# **WARNING**



Read warnings, page 6. Step 5 measures line voltage and should be done by a qualified electrician. If work is not performed properly it may cause electric shock or other serious injury.

5. Carefully measure the voltage at the white Anderson connector for the hose. You should not get a voltage reading. If you do get a voltage reading, the SCR on the circuit board has been damaged and the board needs to be replaced.

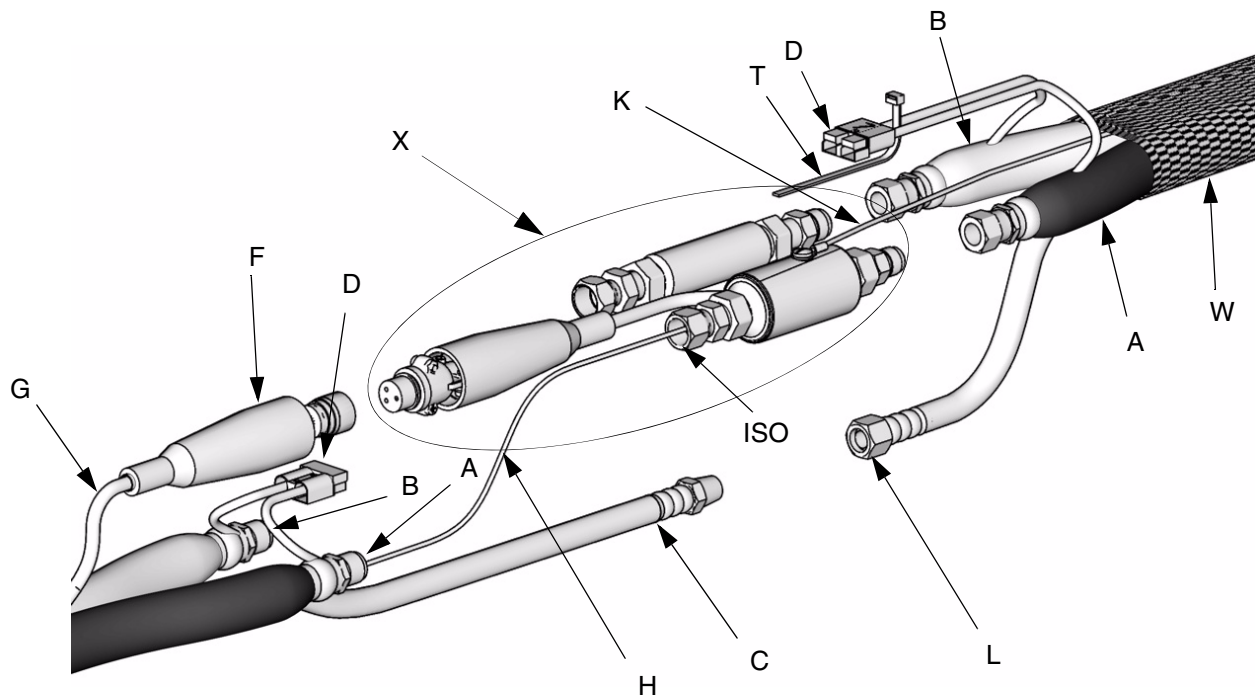


TI9582a1

**FIG. 18. Fluid Temperature Sensor and Heated Hoses**

 


# Wire Harness Check

## Test Hose Continuity

1. Turn main power OFF . Disconnect power supply. Leave hose plugged in.
2. See FIG. 19. Disconnect 6-pin transformer connector (P) from J13 at temperature control board. Remove red wire from transformer hose length tap you are using (R).
3. Using an ohmmeter, check between pin 6 (P6) of connector (not board) and red wire (R). There should be continuity.
4. If test fails, trace wires until failure is located.

## Test Temperature Control Board to Transformer Wire Harness Continuity

1. Turn main power OFF . Disconnect power supply. Leave hose plugged in.
2. See FIG. 19. Disconnect 6-pin transformer connector (P) from J13 at temperature control board.
3. Check for continuity between:
  - a. Connector pin 1 (P1) and T1 on 20A hose circuit breaker (817A).
  - b. Connector pin 3 (P3) and T2 on 20A hose circuit breaker (817A).
  - c. Connector pin 5 (P5) and T3 on 50A hose circuit breaker (806).


## (380 V Only) In-rush Current Limiter Test

1. Ensure all harnesses, cables and connectors are properly connected. Connect hose.
2. Connect main power supply. Turn main power on.
3. Turn on hose heat by pressing hose heat button




4. Contactor in front of transformer should snap shut.
5. If contactor does not close, turn main power off and check fuse item 120614. If blown replace.
6. If contactor does not close when hose heat is turned on with new fuse move to transformer checks.
7. If fuse continually blows, replace In-rush limiter kit 288359.

## Test Current Sensor Continuity

1. Turn main power OFF . Disconnect power supply.
2. Disconnect 14-pin connector from J1 on temperature control board, page 38.
3. Using an ohmmeter, test for continuity across pins 5 and 6 of connector (not board). Reading should be 20-25 ohms. If not, replace current sensor (32). See FIG. 19.

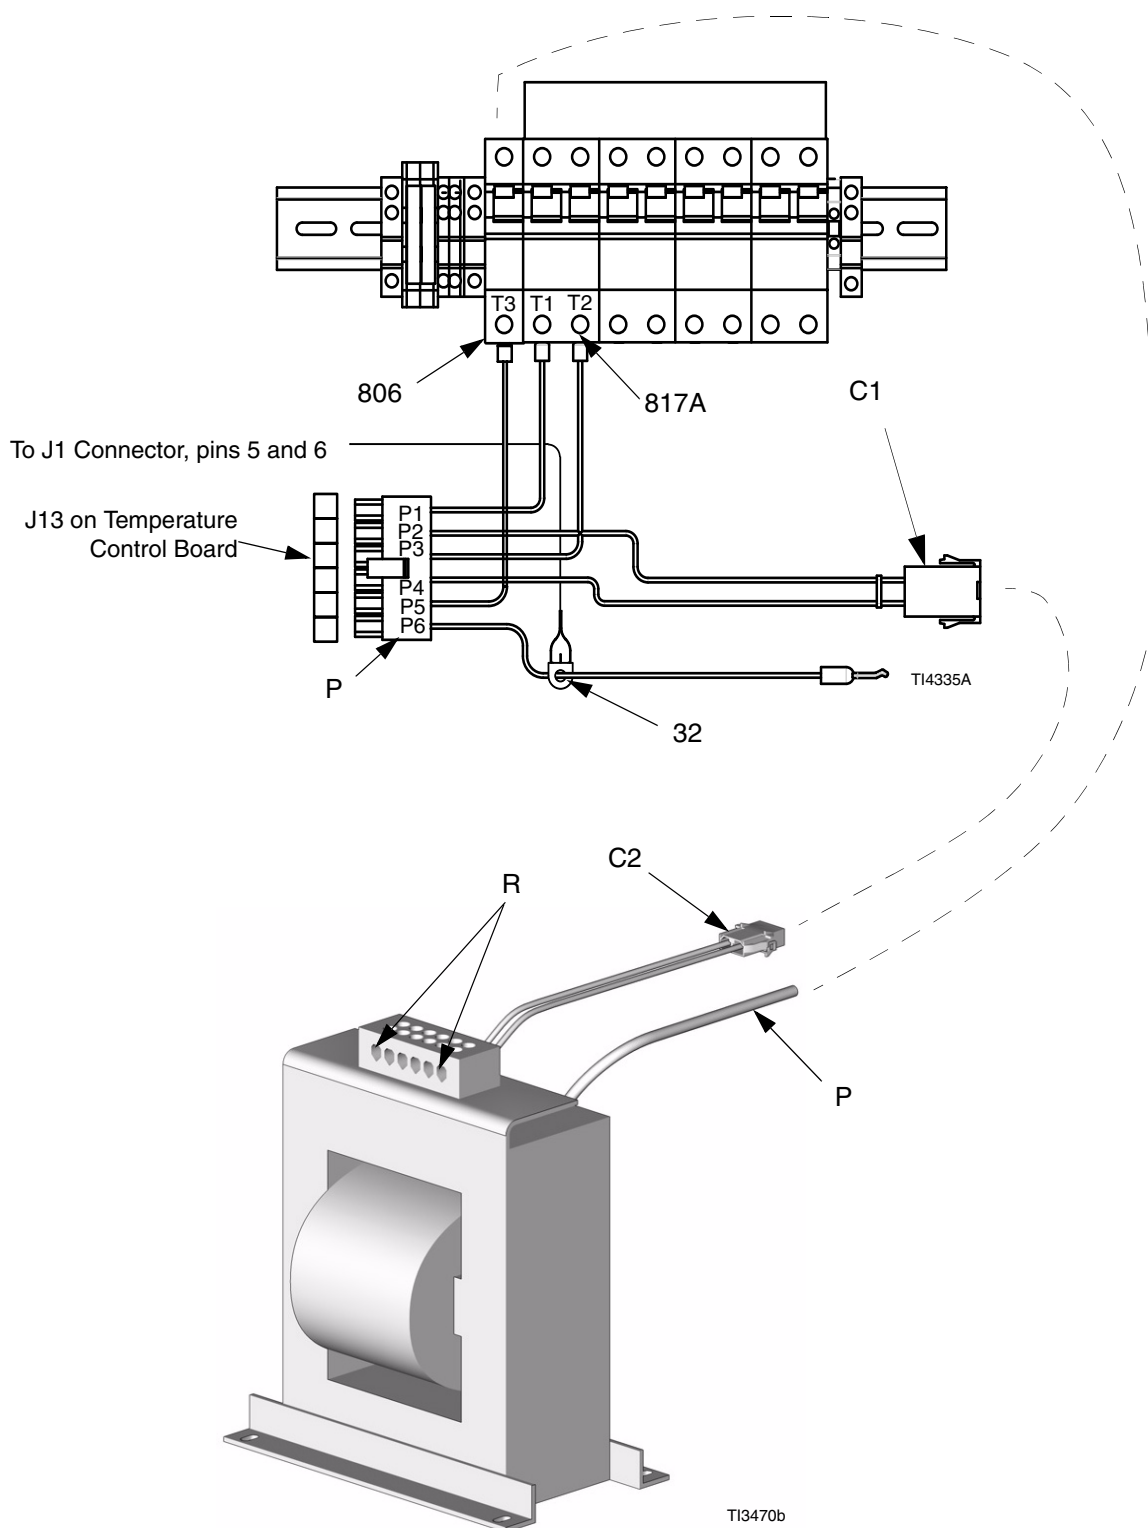

**Detail B: Circuit Breaker Module and Hose Heat Wire Harness**

**Part No. 15B352 Transformer (Models E-30 and E-XP2) shown**

**FIG. 19. Transformer Continuity Tests**





## Transformer Primary Check

1. Ensure that all harnesses, cables, and connectors are properly connected. Connect hose.
2. Disconnect wire harness (C1) from wire harness (C2).
3. Connect power supply. Turn main power ON



4. Set hose heat target temperature below current hose temperature.

5. Turn on  heat zone by pressing .

### WARNING



Read warnings, page 6. Step 6 measures line voltage and should be done by a qualified electrician. If work is not performed properly it may cause electric shock or other serious injury.

6. See FIG. 19, Detail B. Measure voltage across pins P2 and P4 of six-pin connector on temperature control board. Measurement should be line voltage. If not, replace temperature control board, page 38.



## Transformer Secondary Check

1. Ensure that all harnesses, cables, and connectors are properly connected. Connect hose.

2. Connect power supply. Turn main power ON



3. Set hose heat target temperature below current hose temperature.

4. Turn on  heat zone by pressing .

### WARNING



Read warnings, page 6. Step 5 measures line voltage and should be done by a qualified electrician. If work is not performed properly it may cause electric shock or other serious injury.

5. See FIG. 20, Detail B. Measure voltage across transformer hose tap (R) currently in use and top terminal (T4) on 50A hose circuit breaker (806). See TABLE 5 for readings. If the reading is correct, the transformer is good. If the reading is wrong, conduct transformer primary check, page 48. If after doing primary check you have line voltage but not secondary voltage, then replace transformer, page 49.

**Table 5: Transformer Voltage Readings**

| Transformer Tap | Reading (VAC) |
|-----------------|---------------|
| 50'             | 20            |
| 100'            | 34            |
| 150'            | 48            |
| 200'            | 62            |
| 250'            | 76            |
| 300'            | 90            |



## Replace Transformer



Use this procedure to replace transformer.

1. Turn main power OFF . Disconnect power supply.




### WARNING



Read warnings, page 6. Wait 5 min for stored voltage to discharge (E-30 and E-XP2 models only).

2. Open Reactor cabinet.
3. Remove bolts holding transformer to cabinet floor. Slide transformer forward.
4. Unplug 2-pin wire harness connector (C) from wire harness coming from temperature control board.
5. Disconnect the transformers secondary common wire (P) from T4 at 50 amp circuit breaker (806).
6. Remove transformer from cabinet.
7. Install new transformer in reverse order.

### Detail B: Circuit Breaker Module

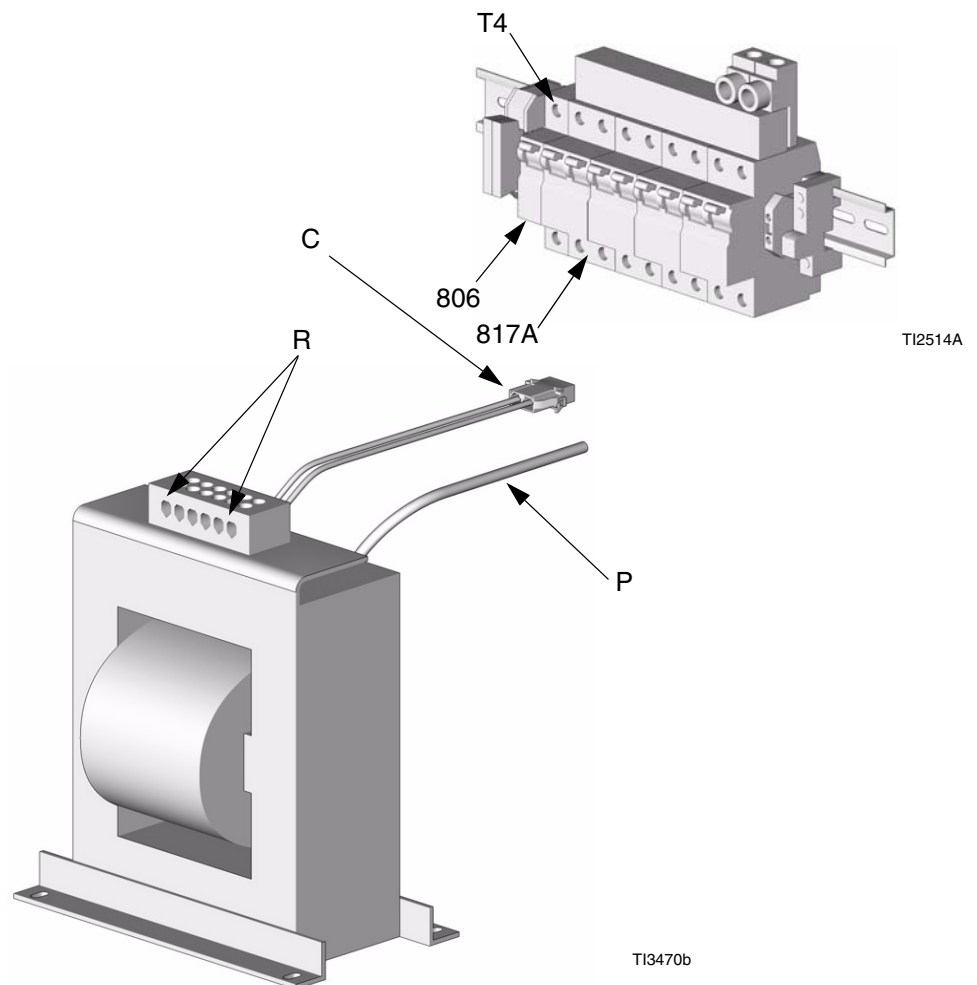

Part No. 15B352 Transformer (Models E-30 and E-XP2) shown

FIG. 20. Transformer



# Display Module

## Temperature and Pressure Displays

### ⚠ CAUTION

Before handling board, put on a static conductive wrist strap to protect against static discharge which can damage board. Follow instructions provided with wrist strap.

1. Turn main power OFF  . Disconnect power supply.

### ⚠ WARNING



Read warnings, page 6. Wait 5 min for stored voltage to discharge (E-30 and E-XP2 models only).


2. Relieve pressure, page 9.
3. Refer to electrical diagrams.
4. Put on static conductive wrist strap.
5. Disconnect main display cable (20) at lower left corner of display module, FIG. 21.
6. Remove screws (409, 410) and cover (404).



If replacing both displays, label temperature display cables TEMP and pressure display cables PUMP before disconnecting.

7. Disconnect cable connectors J1 and J13 from back of temperature display (401) or pressure display (402).
8. Disconnect ribbon cable(s) (R) from back of display.
9. Remove nuts (408) and plate (405).
10. Disassemble display, see detail in FIG. 21.
11. Replace board (401a or 402a) or membrane switch (401b or 402b) as necessary.
12. Reassemble in reverse order, see FIG. 21. Apply medium strength thread sealant where shown. Be sure display cable ground wire (G) is secured


between cable bushing and cover (404) with screws (412). Also check ground connection at rear of Reactor, see below.

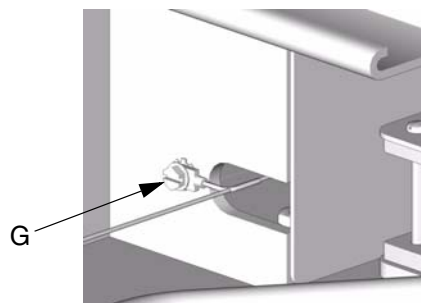

TI3743a



△ Apply medium strength thread sealant.

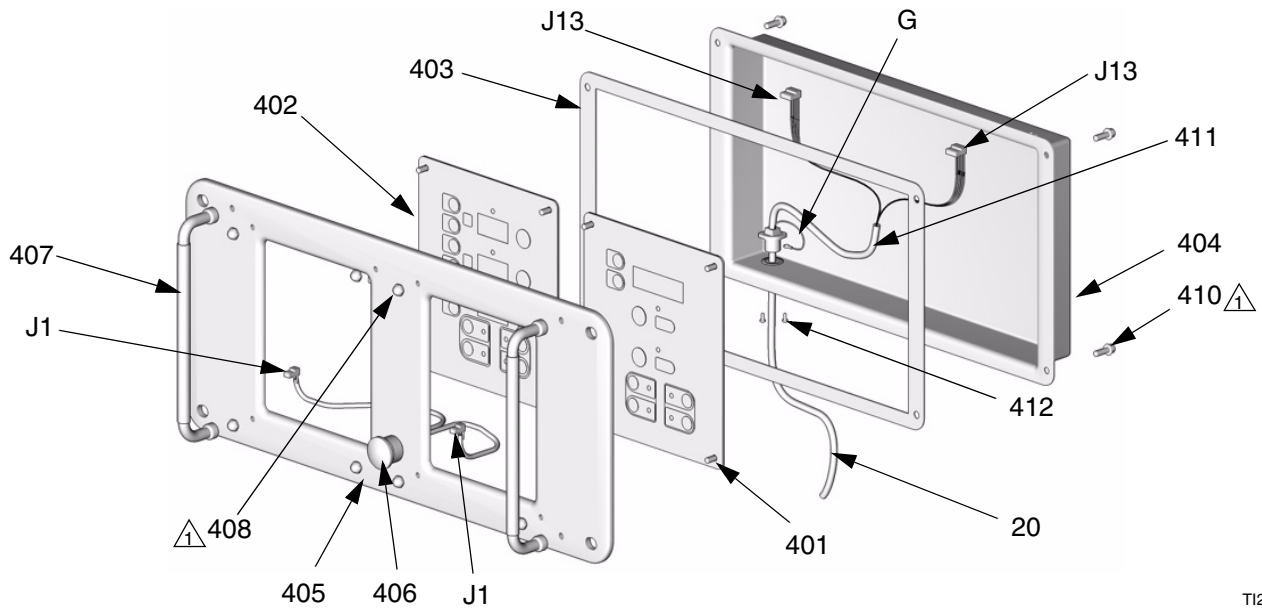


TI2574A

### Detail of Membrane Switches and Display Boards

#### Temperature Display

#### Pressure Display

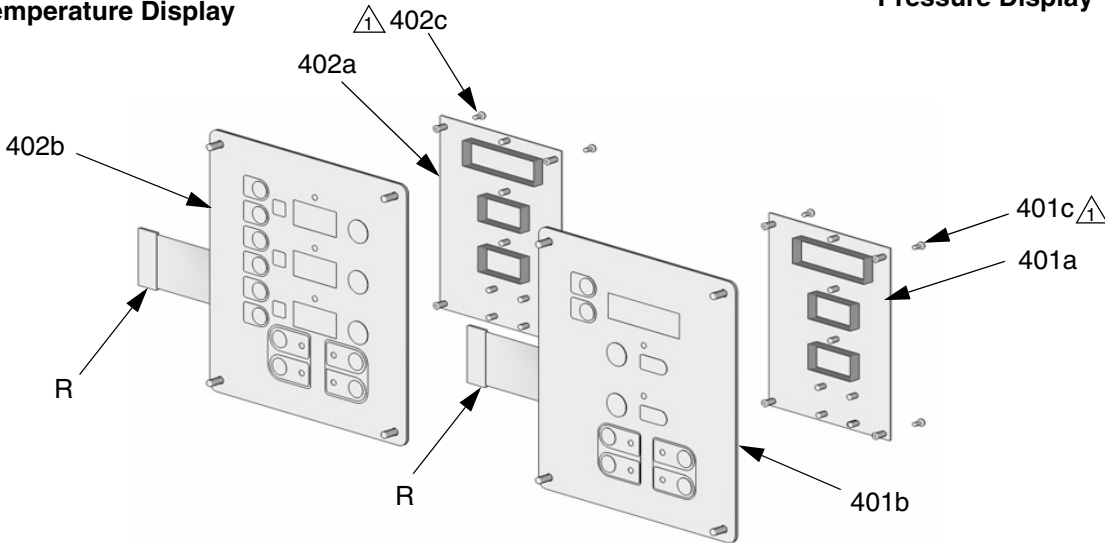

TI3172a

FIG. 21. Display Module



## Red Stop Button

### CAUTION

Before handling board, put on a static conductive wrist strap to protect against static discharge which can damage board. Follow instructions provided with wrist strap.

1. Turn main power OFF  . Disconnect power supply.

### WARNING






Read warnings, page 6. Wait 5 min for stored voltage to discharge (E-30 and E-XP2 models only).

2. Relieve pressure, page 9.
3. Refer to electrical diagrams.
4. Put on static conductive wrist strap.
5. Remove screws (409, 410) and cover (404), FIG. 21.
6. Disconnect button cable connectors J1 from back of temperature display (401) and pressure display (402).
7. Remove red stop button (406).
8. Reassemble in reverse order. Be sure display cable ground wire (G) is secured between cable bushing and cover (404) with screws (412).





# Parts

## Reactor Assembly (Model E-XP1 Shown)

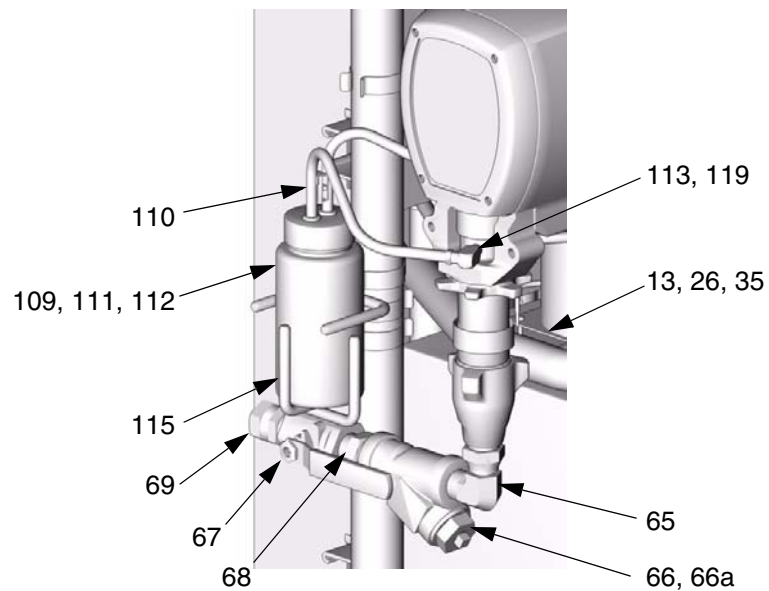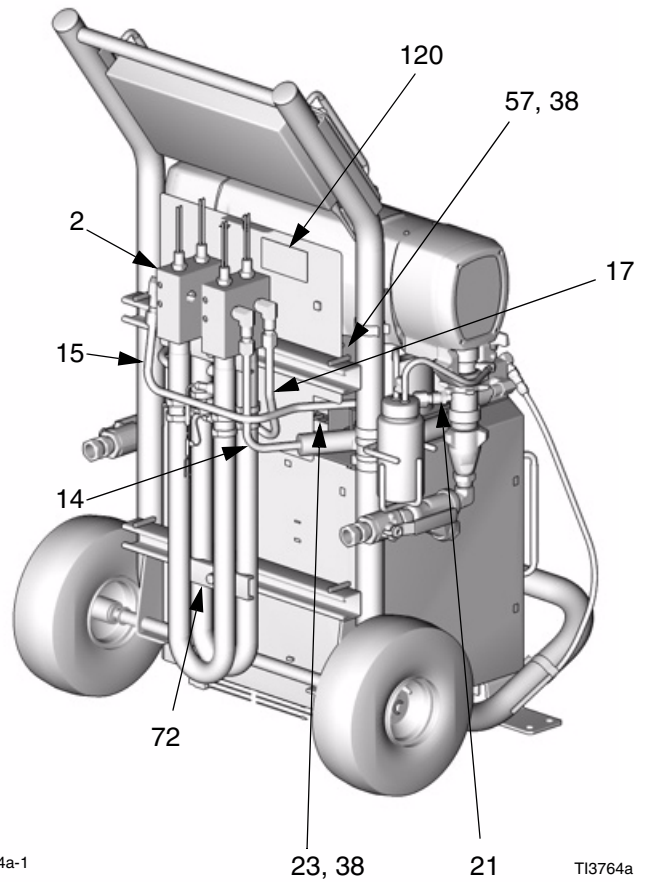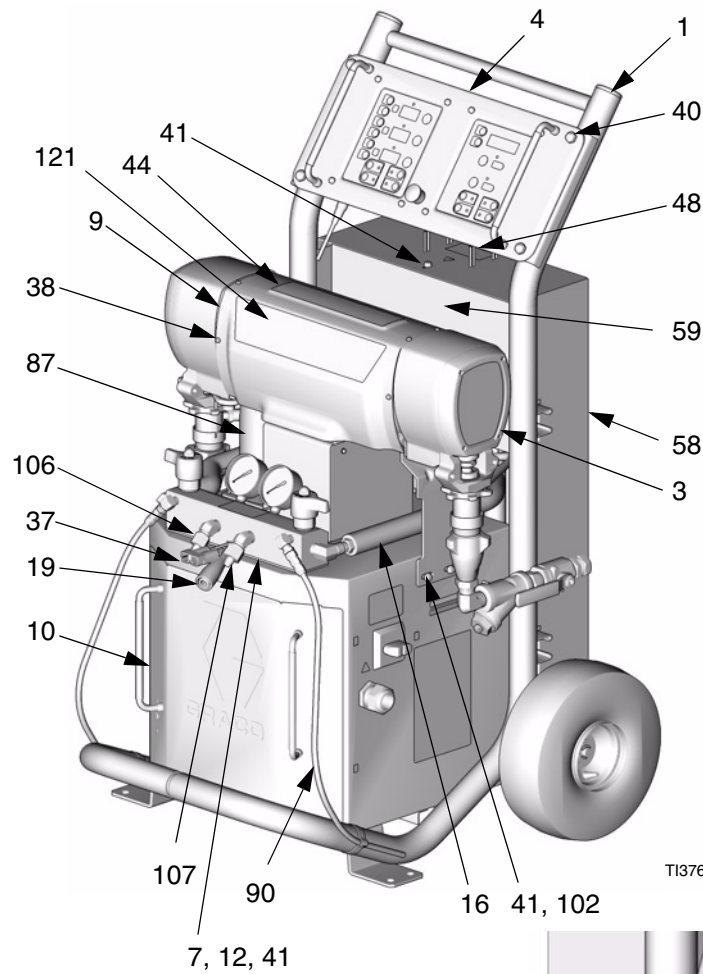



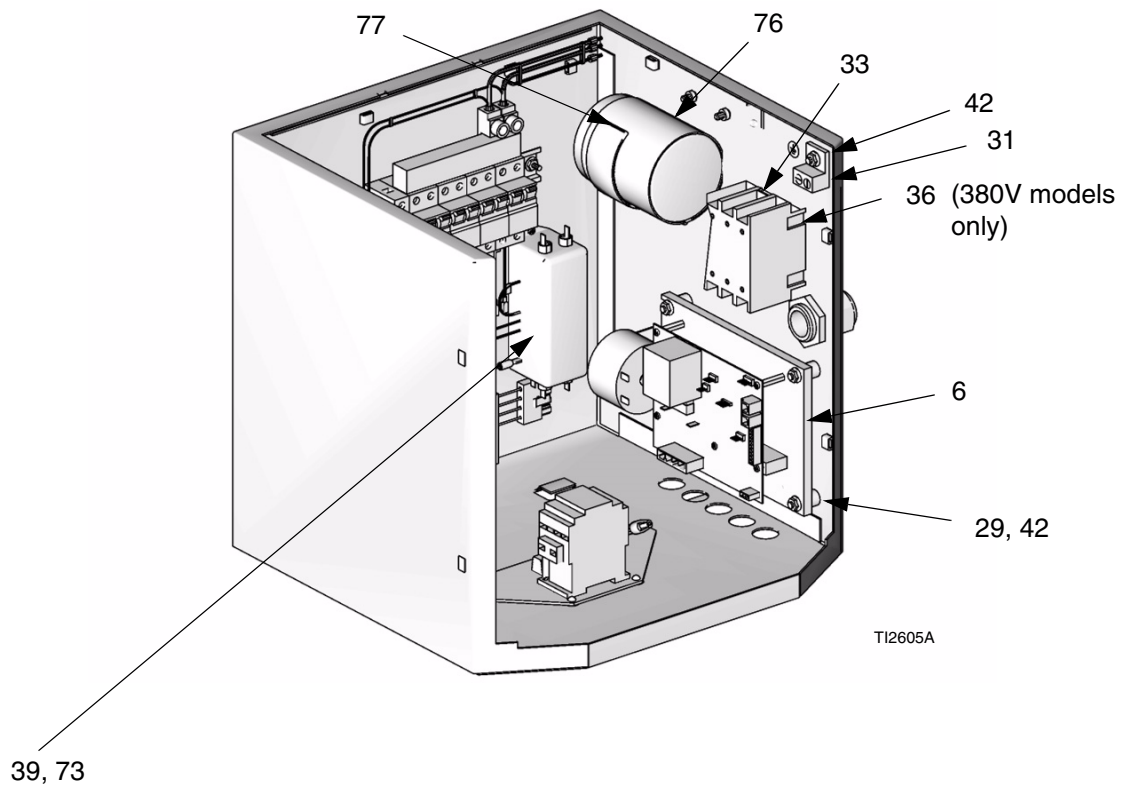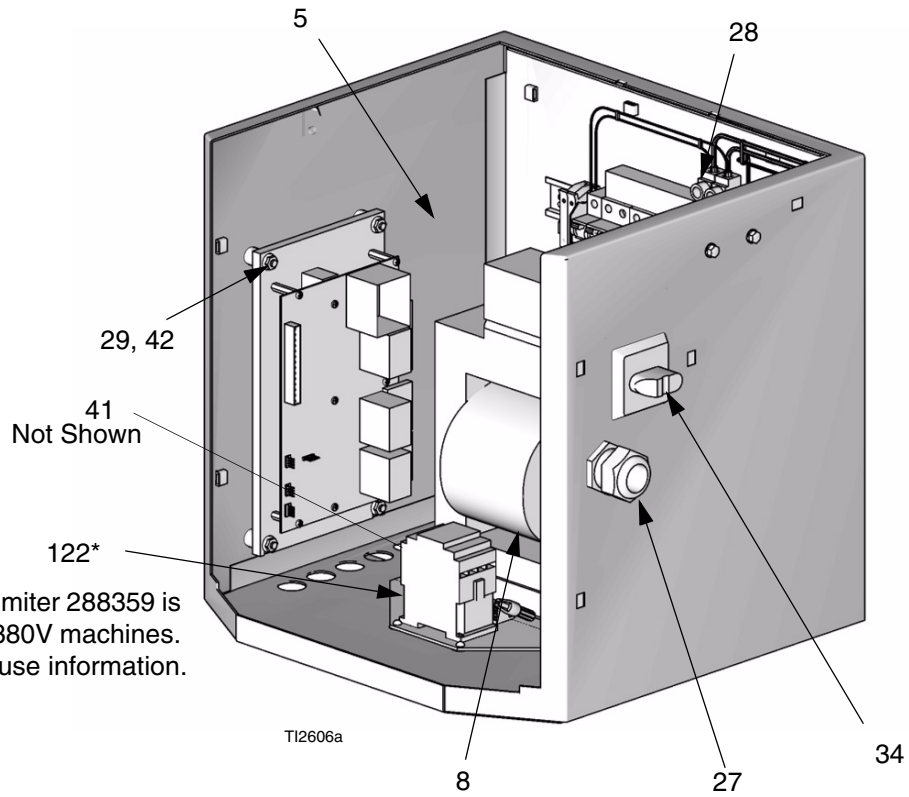



# Reactor Assembly

## Common Parts

See pages 56 through 58 for parts that vary by model.

| Ref.<br>No. | Part No. | Description  | Qty | Ref.<br>No. | Part No. | Description   | Qty |
|-------------|----------|--|-----|-------------|----------|---|-----|
| 1           | 245954   | FRAME; page 59   | 1   | 58          | 15B797   | COVER, heater, back   | 1   |
| 2           |          | HEATER; page 56 and 58                                     | *   | 59          | 15B798   | COVER, heater, front  | 1   |
| 3           |          | MODULE, proportioner; page 56 and 58                       | *   | 60▲         | 15B679   | LABEL, warning  | 1   |
| 4           | 245974   | DISPLAY; page 63   | 1   | 61          | 113505   | NUT, hex, keps; 10-24   | 6   |
| 5           | 245979   | CONTROL, temperature; page 64                              | 1   | 62          | 112776   | WASHER, plain; no. 10   | 2   |
| 6           |          | CONTROL, motor; page 56 and 58                             | *   | 63          | 117722   | CONNECTOR, wire; not shown, see electrical diagrams                           | 4   |
| 7           | 246154   | MANIFOLD, fluid; page 67                                   | 1   | 65          |          | ELBOW, swivel; 3/4 npt(m) x 1" npt(f); 57 and 58                              | *   |
| 8           |          | TRANSFORMER; page 56 and 58                                | *   | 66          | 101078   | Y-STRAINER; includes 66a  | 2   |
| 9           |          | SHIELD; page 56 and 58                                     | *   | 66a         | 180199   | ELEMENT, 20 mesh; not shown   | 1   |
| 10          | 246976   | DOOR, cabinet  | 1   | 67          | 109077   | VALVE, ball; 3/4 npt (fbc)  | 2   |
| 11          | 261669   | SENSOR, fluid temperature                                  | 1   | 68          | C20487   | NIPPLE; 3/4 npt   | 2   |
| 12          | 15B456   | GASKET, manifold   | 1   | 69          | 157785   | UNION, swivel; 3/4 npt(m) x 3/4 npsm(f)                                       | 2   |
| 13          | 115834   | FAN  | 1   | 71          |          | SCREW, machine; 6-32  | 2   |
| 14          |          | TUBE, heater component A; page 56 and 58                   | *   | 72          |          | BRACKET, heater; page 57 and 58   | *   |
| 15          |          | TUBE, pump, component A; page 56 and 58                    | *   | 73          |          | WASHER, lock; page 57 and 58  | *   |
| 16          |          | TUBE, heater component B; page 56 and 58                   | *   | 76          |          | CAPACITOR; page 57 and 58   | *   |
| 17          |          | TUBE, pump, component B; page 56 and 58                    | *   | 77          |          | BRACKET; page 57 and 58   | *   |
| 18          | 15B374   | CABLE, overtemperature; not shown, see electrical diagrams | 1   | 79          | 112512   | FERRULE   | 2   |
| 19          | 15B380   | CABLE, hose control; not shown, see electrical diagrams    | 1   | 86          |          | CABLE, overtemperature, jumper; page 57 and 58                                | *   |
| 20          | 15B383   | CABLE, display   | 1   | 87          | 15B807   | SHIELD, fan   | 1   |
| 21          |          | CONNECTOR, tube; page 56 and 58                            | *   | 88          | 186494   | CLIP, spring  | 6   |
| 22          | 116773   | CONNECTOR, plug  | 1   | 89          | 205447   | COUPLING, hose  | 2   |
| 23          | C38163   | WASHER, lock, external tooth                               | 1   | 90          | 054826   | TUBE, low pressure; 1/4 in. (6 mm) ID; 3/8 in. (16 mm) OD; 4 ft (1.2 m); PTFE | 1   |
| 24          | 15B361   | BOOT, wire feed through                                    | 1   | 92          |          | CABLE, harness, power; 57 and 58  | *   |
| 25          | 15B510   | PLATE, cover, wire   | 1   | 95          |          | BOLT, hex hd; 3/8-16 (E-XP2 models) (all other models)                        | 4   |
| 26          | 15B360   | GASKET, fan  | 1   | 96          |          | LOCKWASHER; 3/8; page 57 and 58   | *   |
| 27          | 117682   | STRAIN RELIEF  | 1   | 97          |          | NUT, channel; page 57 and 58  | *   |
| 28          |          | MODULE, breaker; page 56 and 58                            | *   | 102         |          | STRAP, motor; page 57 and 58  | *   |
| 29          | 116149   | SPACER   | 8   | 106         | 117502   | REDUCER; #5 x #8 JIC  | 1   |
| 31          | 117666   | TERMINAL, ground   | 1   | 107         | 117677   | REDUCER; #6 x #10 JIC   | 1   |
| 32          | 15B388   | SENSOR, current, hose; not shown, see electrical diagrams  | 1   | 109         | 246928   | RESERVOIR; includes 110-119; see 309911                                       | 1   |
| 33          | 117564   | SWITCH, disconnect   | 1   | 110         | 054826   | TUBE; PTFE; 1/4 in. (6 mm) ID; 2 ft (0.6 m)                                   | 2   |
| 34          | 117545   | SWITCH, main power   | 1   | 111         | 118433   | VALVE, check  | 1   |
| 35          | 117723   | SCREW, machine; 6-32 x 2 in. (51 mm)                       | 4   | 112         | 118432   | VALVE, check  | 1   |
| 36          |          | SWITCH, added pole; 380V; page 56 and 58                   | *   | 113         | 116746   | FITTING, barbed   | 2   |
| 37          | 15B396   | WIRE, hose   | 1   | 115         | 15C568   | BRACKET, reservoir  | 1   |
| 38          | 115492   | SCREW, machine; 8-32 x 0.345 in. (9 mm)                    | 13  | 116         | 186494   | CLIP, spring  | 1   |
| 39          |          | FILTER; 230V; page 56 and 58                               | *   | 117         | 206995   | THROAT SEAL LIQUID; 1 qt (1 liter)  | 1   |
| 40          | 117623   | NUT, cap; 3/8-16   | 4   | 119         | 191892   | ELBOW; 1/8 npt (m x f)  | 2   |
| 41          | 113796   | SCREW, flanged, hex hd; 1/4-20 x 3/4 in. (19 mm)           | 15  | 120▲        | 171001   | LABEL, warning  | 1   |
| 42          | 115942   | NUT, hex flange; 1/4-20                                    | 15  | 121         |          | LABEL; page 57 and 58   | *   |
| 44          | 15B536   | LABEL, diagnostic codes                                    | 1   | 122         |          | In-rush Current Limiter; page 57 and 58                                       | *   |
| 45          | 189930   | LABEL, caution   | 3   |             |          |   |     |
| 48▲         | 189285   | LABEL, caution   | 3   |             |          |   |     |
| 51▲         |          | LABEL, warning; page 57 and 58                             | *   |             |          |   |     |
| 52          |          | CABLE, harness, filter; page 57 and 58                     | *   |             |          |   |     |
| 53          | 15B593   | SHIELD, membrane switch; pack of 10                        | 1   |             |          |   |     |
| 57          | 15B775   | COVER, wire access   | 2   |             |          |   |     |

▲ Replacement Warning labels, signs, tags, and cards are available at no cost.

\* See quantity on referenced pages.



## Parts that Vary by Model

Use the tables on this and the next 2 pages to find parts that vary by model. Find the ref. no. of part in left column, and Reactor model in top row. Intersection is correct part no.

See page 55 for parts common to all models.

| Ref. No. | Description                   | Reactor Models  |                |                |                    |                 |                |                |                    |                 |                |                |                    | Qty |
|----------|-------------------------------|-----------------|----------------|----------------|--------------------|-----------------|----------------|----------------|--------------------|-----------------|----------------|----------------|--------------------|-----|
|          |                               | 246024<br>E-XP1 | 246025<br>E-20 | 246026<br>E-30 | 246028<br>E-XP2    | 246029<br>E-XP1 | 246030<br>E-20 | 246031<br>E-30 | 246032<br>E-XP2    | 246033<br>E-XP1 | 246034<br>E-20 | 246035<br>E-30 | 246036<br>E-XP2    |     |
| 2        | HEATER; pages 59, 35          | 245962          | 245975         | 245962         | 245963<br>(qty: 2) | 245962          | 245975         | 245962         | 245963<br>(qty: 2) | 245962          | 245975         | 245962         | 245963<br>(qty: 2) | 1   |
| 3        | MODULE, proportioner; page 61 | 245956          | 245956         | 245957         | 245959             | 245956          | 245956         | 245957         | 245959             | 245956          | 245956         | 245957         | 245959             | 1   |
| 6        | CONTROL, motor; page 65       | 245980          | 245980         | 245981         | 245981             | 245980          | 245980         | 245981         | 245981             | 245980          | 245980         | 245981         | 245981             | 1   |
| 8        | TRANSFORMER;                  | 15B351          | 15B351         | 15B352         | 15B352             | 15B351          | 15B351         | 15B352         | 15B352             | 15B351          | 15B351         | 15B352         | 15B352             | 1   |
| 9        | SHIELD                        | 276878          | 276878         | 276879         | 276879             | 276878          | 276878         | 276879         | 276879             | 276878          | 276878         | 276879         | 276879             | 1   |
| 14       | TUBE, heater, component A     | 15B481          | 15B481         | 15B481         | 15B685             | 15B481          | 15B481         | 15B481         | 15B685             | 15B481          | 15B481         | 15B481         | 15B685             | 1   |
| 15       | TUBE, pump, component A       | 15B367          | 15B367         | 15B480         | 15B686             | 15B367          | 15B367         | 15B480         | 15B686             | 15B367          | 15B367         | 15B480         | 15B686             | 1   |
| 16       | TUBE, heater, component B     | 15B483          | 15B483         | 15B483         | 15B687             | 15B483          | 15B483         | 15B483         | 15B687             | 15B483          | 15B483         | 15B483         | 15B687             | 1   |
| 17       | TUBE, pump, component B       | 15B369          | 15B369         | 15B482         | 15B688             | 15B369          | 15B369         | 15B482         | 15B688             | 15B369          | 15B369         | 15B482         | 15B688             | 1   |
| 21       | CONNECTOR, tube               | 117555          | 117555         | 117594         | 117594             | 117555          | 117555         | 117594         | 117594             | 117555          | 117555         | 117594         | 117594             | 2   |
| 28       | MODULE, breaker; page 68      | 246090          | 246090         | 246090         | 246092             | 246096          | 246096         | 246096         | 246098             | 246087          | 246087         | 246087         | 246089             | 1   |
| 36       | SWITCH, added pole; 380V      |                 |                |                |                    | 117553          | 117553         | 117553         | 117553             |                 |                |                |                    | 1   |
| 39       | FILTER; 230V                  |                 |                | 117667         | 117667             |                 |                | 117667         | 117667             |                 |                | 117667         | 117667             | 1   |



| Ref. No. | Description                                       | Reactor Models  |                |                |                 |                 |                |                |                 |                 |                |                |                 | Qty |
|----------|---|-----------------|----------------|----------------|-----------------|-----------------|----------------|----------------|-----------------|-----------------|----------------|----------------|-----------------|-----|
|          |   | 246024<br>E-XP1 | 246025<br>E-20 | 246026<br>E-30 | 246028<br>E-XP2 | 246029<br>E-XP1 | 246030<br>E-20 | 246031<br>E-30 | 246032<br>E-XP2 | 246033<br>E-XP1 | 246034<br>E-20 | 246035<br>E-30 | 246036<br>E-XP2 |     |
| 51▲      | LABEL, warning                                    |                 |                | 198278         | 198278          |                 |                | 198278         | 198278          |                 |                | 198278         | 198278          | 1   |
| 52       | CABLE, harness, filter                            |                 |                | 15B385         | 15B385          |                 |                | 15B385         | 15B385          |                 |                | 15B385         | 15B385          | 1   |
| 65       | ELBOW, swivel; 3/4 npt(m) x 3/4 npt(f)            | 160327          | 160327         |                | 160327          | 160327          | 160327         |                | 160327          | 160327          | 160327         |                | 160327          | 2   |
|          | ELBOW, swivel; 3/4 npt(m) x 1" npt(f)             |                 |                | 118463         |                 |                 |                | 118463         |                 |                 |                | 118463         |                 | 2   |
| 72       | BRACKET, heater                                   | 15C733          | 15C733         | 15C733         |                 | 15C733          | 15C733         | 15C733         |                 | 15C733          | 15C733         | 15C733         |                 | 2   |
|          | BRACKET, heater                                   |                 |                |                | 15C733          |                 |                |                | 15C733          |                 |                |                | 15C733          | 4   |
| 73       | WASHER, lock                                      |                 |                | 103181         | 103181          |                 |                | 103181         | 103181          |                 |                | 103181         | 103181          | 2   |
| 76       | CAPACITOR   |                 |                | 244733         | 244733          |                 |                | 244733         | 244733          |                 |                | 244733         | 244733          | 1   |
| 77       | BRACKET   |                 |                | 197999         | 197999          |                 |                | 197999         | 197999          |                 |                | 197999         | 197999          | 1   |
| 86       | CABLE, overtemperature, jumper; see pages 59, 60) | 15B769          | 15B769         | 15B769         |                 | 15B769          | 15B769         | 15B769         |                 | 15B769          | 15B769         | 15B769         |                 | 2   |
|          | CABLE, overtemperature, jumper; see page 60)      |                 |                |                | 15B769          |                 |                |                | 15B769          |                 |                |                | 15B769          | 4   |
| 92       | CABLE, harness, power; see pages 68-70            | 15B511          | 15B511         |                |                 | 15B511          | 15B511         |                |                 | 15B511          | 15B511         |                |                 | 1   |
|          | CABLE, harness, power; see pages 68-70            |                 |                | 15B382         | 15B382          |                 |                | 15B382         | 15B382          |                 |                | 15B382         | 15B382          | 1   |
| 96       | LOCKWASHER; 3/8                                   | 100133          | 100133         | 100133         |                 | 100133          | 100133         | 100133         |                 | 100133          | 100133         | 100133         |                 | 2   |
|          | LOCKWASHER; 3/8                                   |                 |                |                | 100133          |                 |                |                | 100133          |                 |                |                | 100133          | 4   |
| 97       | NUT, channel                                      | 118446          | 118446         | 118446         |                 | 118446          | 118446         | 118446         |                 | 118446          | 118446         | 118446         |                 | 2   |
|          | NUT, channel                                      |                 |                |                | 118446          |                 |                |                | 118446          |                 |                |                | 118446          | 4   |
| 102      | STRAP, motor                                      | 15B107          | 15B107         | 15B108         | 15B108          | 15B107          | 15B107         | 15B108         | 15B108          | 15B107          | 15B107         | 15B108         | 15B108          | 1   |
| 121      | LABEL   | 15B811          | 15B537         | 15B538         | 15B544          | 15B811          | 15B537         | 15B538         | 15B544          | 15B811          | 15B537         | 15B538         | 15B544          | 1   |
| 122*     | In-rush Current Limiter; page 54                  |                 |                |                |                 | 288359          | 288359         | 288359         | 288359          |                 |                |                |                 |     |

\* Uses 1.6Amp, Slo-Blow Fuse 120614. **This fuse must be slow blow for In-rush Current Limiter to function properly.**



## Reactor Assembly Parts Continued

| Ref. No. | Description                                       | Reactor Models                 |                                |                                | Qty |
|----------|---|--------------------------------|--------------------------------|--------------------------------|-----|
|          |   | 248657<br>E-30<br>w/15.3<br>kW | 248658<br>E-30<br>w/15.3<br>kW | 248659<br>E-30<br>w/15.3<br>kW |     |
| 2        | HEATER; pages 59, 35                              | 245963                         | 245962                         | 245962                         | 2   |
| 3        | MODULE, proportioner; page 61                     | 245957                         | 245957                         | 245957                         | 1   |
| 6        | CONTROL, motor; page 65                           | 245981                         | 245981                         | 245981                         | 1   |
| 8        | TRANSFORMER;                                      | 15B352                         | 15B352                         | 15B352                         | 1   |
| 9        | SHIELD  | 276879                         | 276879                         | 276879                         | 1   |
| 14       | TUBE, heater, component A                         | 15B685                         | 15B685                         | 15B685                         | 1   |
| 15       | TUBE, pump, component A                           | 15B686                         | 15B686                         | 15B686                         | 1   |
| 16       | TUBE, heater, component B                         | 15B687                         | 15B687                         | 15B687                         | 1   |
| 17       | TUBE, pump, component B                           | 15B688                         | 15B688                         | 15B688                         | 1   |
| 21       | CONNECTOR, tube                                   | 117594                         | 117594                         | 117594                         | 2   |
| 28       | MODULE, breaker; page 68                          | 246090                         | 246089                         | 246098                         | 1   |
| 36       | SWITCH, added pole; 380V                          |                                |                                | 117553                         | 1   |
| 39       | FILTER; 230V                                      | 117667                         | 117667                         | 117667                         | 1   |
| 51▲      | LABEL, warning                                    | 198278                         | 198278                         | 198278                         | 1   |
| 52       | CABLE, harness, filter                            | 15B385                         | 15B385                         | 15B385                         | 1   |
| 65       | ELBOW, swivel; 3/4 npt(m) x 3/4 npt(f)            |                                |                                |                                |     |
|          | ELBOW, swivel; 3/4 npt(m) x 1" npt(f)             | 118463                         | 118463                         | 118463                         | 2   |
| 72       | BRACKET, heater                                   |                                |                                |                                |     |
|          | BRACKET, heater                                   | 15C733                         | 15C733                         | 15C733                         | 2   |
| 73       | WASHER, lock                                      | 103181                         | 103181                         | 103181                         | 2   |
| 76       | CAPACITOR   | 244733                         | 244733                         | 244733                         | 1   |
| 77       | BRACKET   | 197999                         | 197999                         | 197999                         | 1   |
| 86       | CABLE, overtemperature, jumper; see pages 59, 60) |                                |                                |                                |     |
|          | CABLE, overtemperature, jumper; see page 60)      | 15B769                         | 15B769                         | 15B769                         | 4   |

| Ref. No. | Description                            | Reactor Models                 |                                |                                | Qty |
|----------|--|--------------------------------|--------------------------------|--------------------------------|-----|
|          |  | 248657<br>E-30<br>w/15.3<br>kW | 248658<br>E-30<br>w/15.3<br>kW | 248659<br>E-30<br>w/15.3<br>kW |     |
| 92       | CABLE, harness, power; see pages 68-70 |                                |                                |                                |     |
|          | CABLE, harness, power; see pages 68-70 | 15B382                         | 15B382                         | 15B382                         | 1   |
| 96       | LOCKWASHER; 3/8                        |                                |                                |                                |     |
|          | LOCKWASHER; 3/8                        | 100133                         | 100133                         | 100133                         | 4   |
| 97       | NUT, channel                           |                                |                                |                                |     |
|          | NUT, channel                           | 118446                         | 118446                         | 118446                         | 4   |
| 102      | STRAP, motor                           | 15B108                         | 15B108                         | 15B108                         | 1   |
| 121      | LABEL                                  | 15B538                         | 15B538                         | 15B538                         | 1   |
| 122*     | In-rush Current Limiter; page 54       |                                |                                | 288359                         | 1   |


\* Uses 1.6Amp, Slo-Blow Fuse 120614. **This fuse must be slow blow for In-rush Current Limiter to function properly.**

▲Additional warning labels are available at no cost.



## Reactor Frame

### 245954 Frame

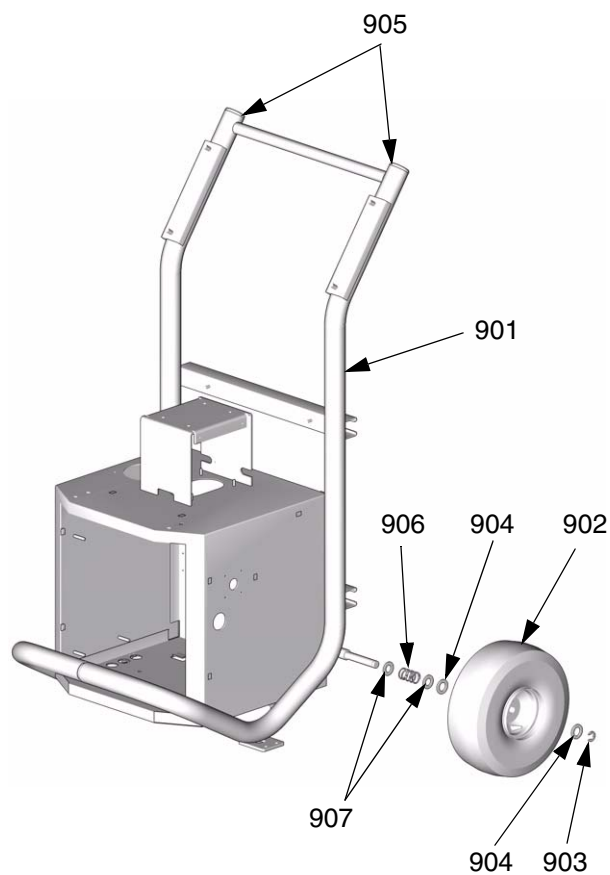


TI2513A

| Ref. No. | Part No. | Description         |
|----------|----------|---------------------|
| 901      | 246204   | FRAME               |
| 902      | 116478   | WHEEL               |
| 903      | 101242   | RING, retaining     |
| 904      | 116477   | WASHER, flat; nylon |
| 905      | 112125   | PLUG                |
| 906      | 116411   | SPRING              |
| 907      | 154636   | WASHER, flat        |

## Fluid Heater

### 245962 10.2 kW Heater, for E-30 and E-XP1 Reactor

\* Ref. No. 86 not included with heater.  
Order separately, see page 57.

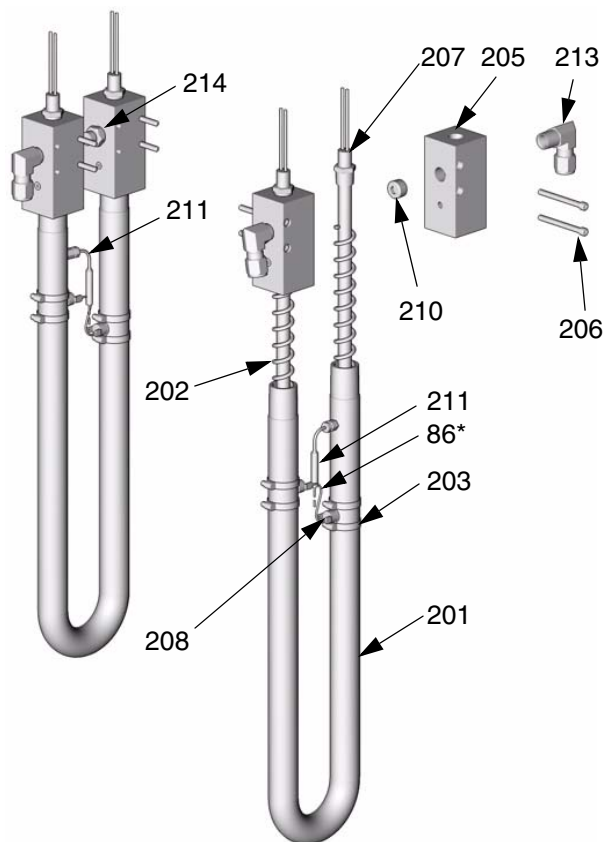


TI2512b

| Ref. No. | Part No. | Description                              | Qty |
|----------|----------|--|-----|
| 201      | 15B134   | HOUSING                                  | 2   |
| 202      | 15B135   | MIXER                                    | 4   |
| 203      | 117464   | CLAMP                                    | 8   |
| 205      | 15B132   | MANIFOLD                                 | 4   |
| 206      | 107218   | SCREW                                    | 8   |
| 207      | 15B138   | HEATER, immersion; 2550 W; 230v          | 4   |
| 208      | 15B137   | SWITCH, overtemperature                  | 4   |
| 210      | 100361   | PLUG                                     | 2   |
| 211      | 117484   | THERMOCOUPLE                             | 2   |
| 213      | 117532   | ELBOW; 1/2 npt x 1/2 in. (13 mm) OD tube | 4   |
| 214      | 248187   | RUPTURE DISK KIT; see 309969             | 2   |



## 245963 7.65 kW Heater, for E-XP2 and E-30, with 15.3kW of heat, Reactor (2 required)

\* Ref. No. 86 not included with heater.  
Order separately, see page 57.

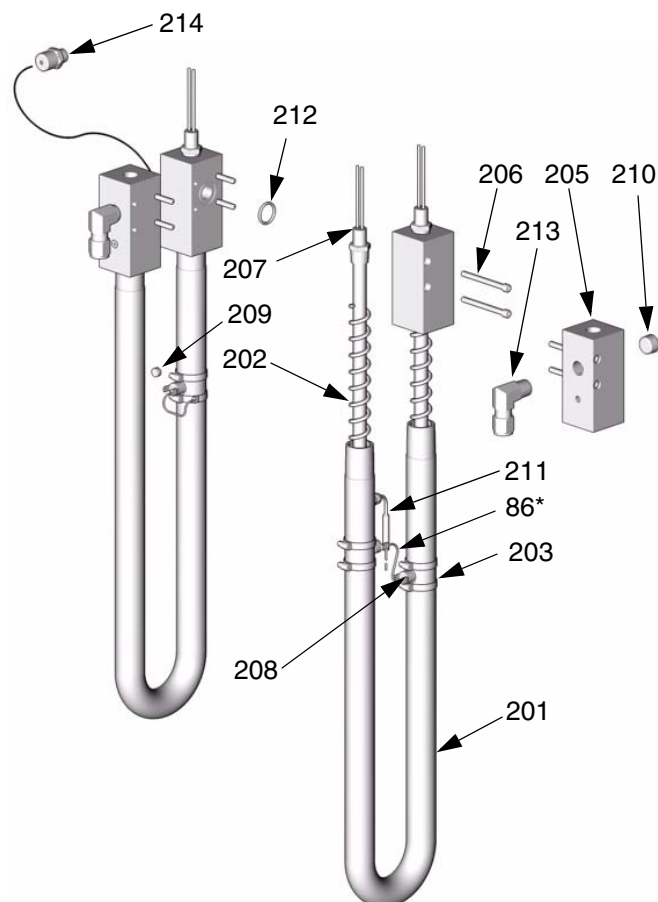


TI2578b

| Ref. No. | Part No. | Description                              | Qty |
|----------|----------|--|-----|
| 201      | 15B134   | HOUSING                                  | 2   |
| 202      | 15B135   | MIXER                                    | 3   |
| 203      | 117464   | CLAMP                                    | 6   |
| 204      | 15B133   | CROSSOVER                                | 2   |
| 205      | 15B132   | MANIFOLD                                 | 2   |
| 206      | 107218   | SCREW                                    | 8   |
| 207      | 15B138   | HEATER, immersion; 2550 W; 230v          | 3   |
| 208      | 15B137   | SWITCH, overtemperature                  | 3   |
| 209      | 100139   | PLUG                                     | 1   |
| 210      | 100361   | PLUG                                     | 2   |
| 211      | 117484   | THERMOCOUPLE                             | 1   |
| 212      | 117466   | O-RING                                   | 1   |
| 213      | 117532   | ELBOW; 1/2 npt x 1/2 in. (13 mm) OD tube | 2   |
| 214      | 248187   | RUPTURE DISK KIT; see 309969             | 1   |

## 245975 6 kW Heater, for E-20 Reactor

\* Ref. No. 86 not included with heater.  
Order separately, see page 57.

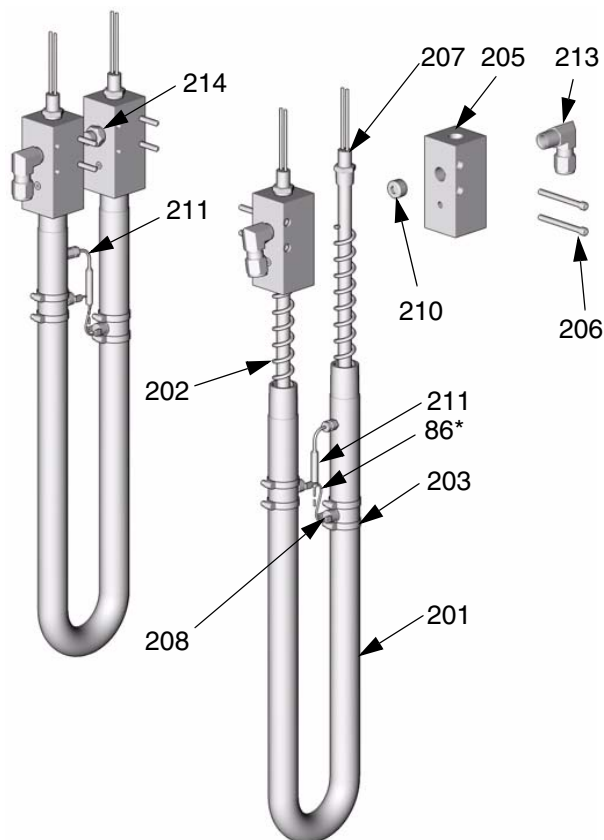

TI2512b

| Ref. No. | Part No. | Description                              | Qty |
|----------|----------|--|-----|
| 201      | 15B134   | HOUSING                                  | 2   |
| 202      | 15B135   | MIXER                                    | 4   |
| 203      | 117464   | CLAMP                                    | 8   |
| 205      | 15B132   | MANIFOLD                                 | 4   |
| 206      | 107218   | SCREW                                    | 8   |
| 207      | 15B140   | HEATER, immersion; 1500 W; 230v          | 4   |
| 208      | 15B137   | SWITCH, overtemperature                  | 4   |
| 210      | 100361   | PLUG                                     | 2   |
| 211      | 117484   | THERMOCOUPLE                             | 2   |
| 213      | 117532   | ELBOW; 1/2 npt x 1/2 in. (13 mm) OD tube | 4   |
| 214      | 248187   | RUPTURE DISK KIT; see 309969             | 2   |




# Proportioner Module

245956 Module, for E-20 and E-XP1


245957 Module, for E-30

245959 Module, for E-XP2

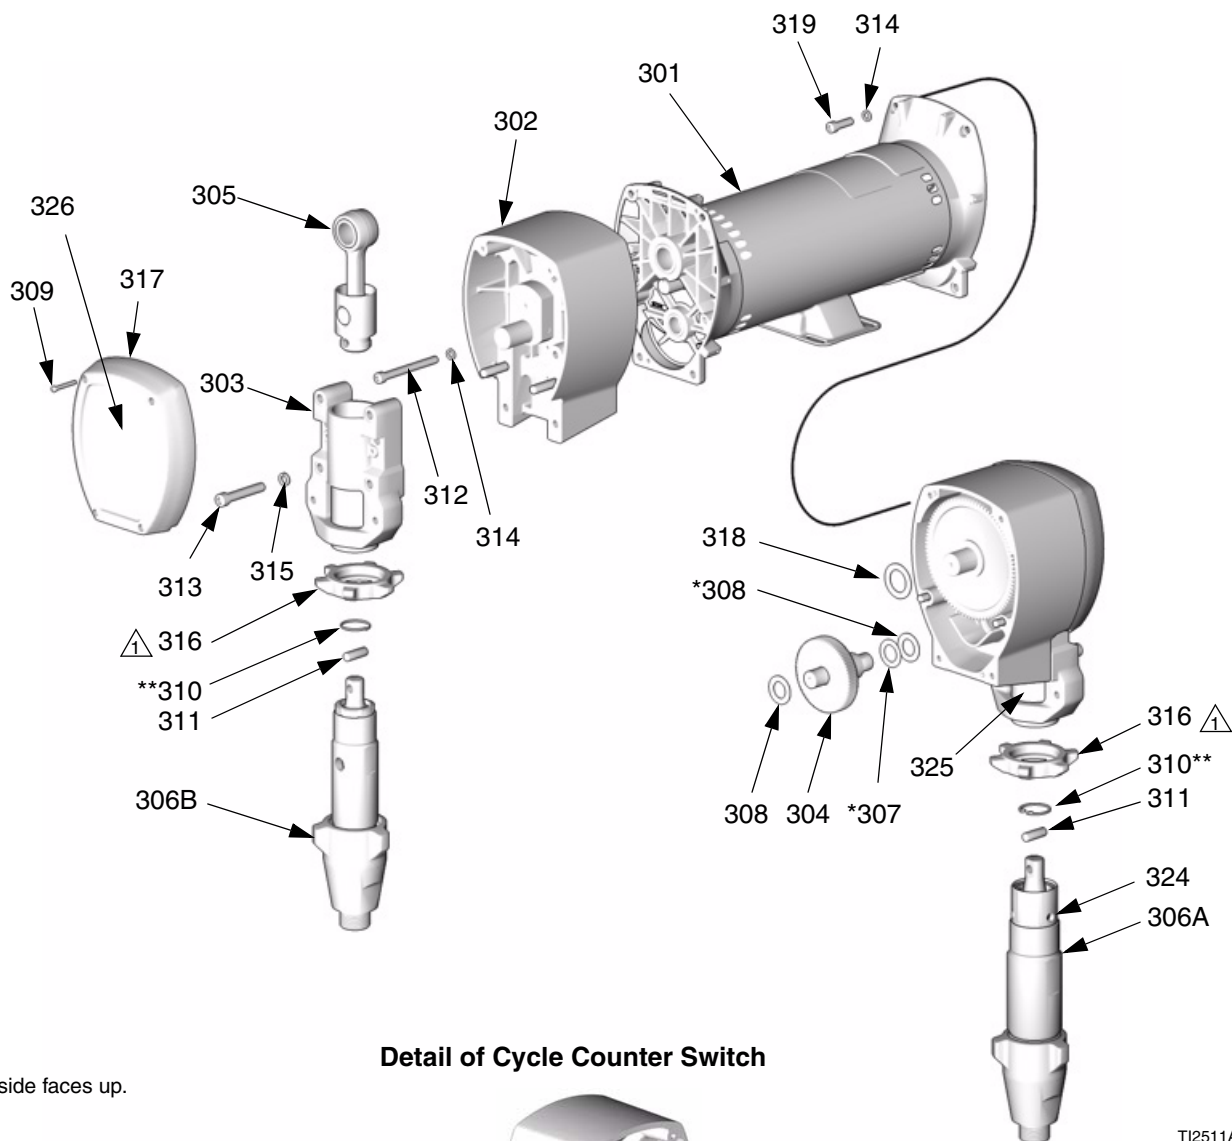

△ Flat side faces up.

## Detail of Cycle Counter Switch

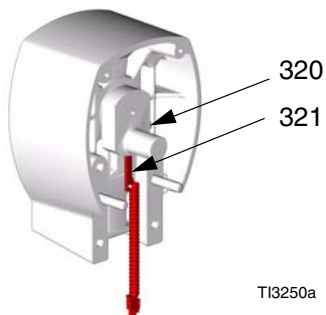

TI3250a

TI2511A




**245956 Module, for E-20 and E-XP1****245957 Module, for E-30****245959 Module, for E-XP2**

| Ref.<br>No. | Part No. | Description  | Qty | Ref.<br>No.   | Part No. | Description  | Qty |
|-------------|----------|--|-----|---|----------|--|-----|
| 301         | 245965   | MOTOR; 245956  | 1   | 323   | 100643   | SCREW, cap, socket-hd; 1/4-20 x 1 in. (25 mm); 245956              | 4   |
|             | 245966   | MOTOR; 245957, 245959  | 1   |   | 102962   | SCREW, cap, socket-hd; 5/16-18 x 1-1/4 in. (31 mm); 245957, 245959 | 4   |
| 302         | 245968   | HOUSING, drive; 245956   | 2   | 324   | 104765   | PLUG   | 2   |
|             | 245969   | HOUSING, drive; 245957, 245959                                     | 2   | 325   | 15C587   | GUARD, finger; 245956  | 1   |
| 303         | 240523   | HOUSING, bearing; 245956   | 2   |   | 15C588   | GUARD, finger; 245959  | 1   |
|             | 241015   | HOUSING, bearing; 245959   | 2   | 326   | 15B532   | LABEL; 245956  | 1   |
|             | 245927   | HOUSING, bearing; 245957   | 2   |   | 15B534   | LABEL; 245957, 245959  | 1   |
| 304         | 244264   | GEAR; includes items 307, 308; 245956                              | 2   | * Parts included in Gear Kit 244264 (245956) or 244265 (245957, 245959).            |          |  |     |
|             | 244265   | GEAR; includes items 307, 308; 245957, 245959                      | 2   | ** Parts included in Connecting Rod Kit 241008 (245956) or 241279 (245957, 245959). |          |  |     |
| 305         | 241008   | ROD, connecting; includes item 310; 245956                         | 2   |   |          |  |     |
|             | 241279   | ROD, connecting; includes item 310; 245957, 245959                 | 2   |   |          |  |     |
| 306A        | 246830   | PUMP, displacement, component A; 245956; see 309577                | 1   |   |          |  |     |
|             | 246831   | PUMP, displacement, component A; 245959; see 309577                | 1   |   |          |  |     |
|             | 246832   | PUMP, displacement, component A; 245957; see 309577                | 1   |   |          |  |     |
| 306B        | 245970   | PUMP, displacement, component B; 245956; see 309577                | 1   |   |          |  |     |
|             | 245971   | PUMP, displacement, component B; 245959; see 309577                | 1   |   |          |  |     |
|             | 245972   | PUMP, displacement, component B; 245957; see 309577                | 1   |   |          |  |     |
| 307*        | 114699   | WASHER, thrust; steel  | 2   |   |          |  |     |
| 308*        | 114672   | WASHER, thrust; bronze   | 4   |   |          |  |     |
| 309         | 114418   | SCREW, self-tapping; 8-32 x 1 in. (25 mm); 245956                  | 8   |   |          |  |     |
|             | 114818   | SCREW, self-tapping; 8-32 x 1-1/4 in. (31 mm); 245957, 245959      | 8   |   |          |  |     |
| 310**       | 176817   | CLIP, wire; 245956   | 2   |   |          |  |     |
|             | 183169   | CLIP, wire; 245957, 245959   | 2   |   |          |  |     |
| 311         | 176818   | PIN; 245956  | 2   |   |          |  |     |
|             | 183210   | PIN; 245957, 245959  | 2   |   |          |  |     |
| 312         | 107218   | SCREW, cap, socket-hd; 1/4-20 x 2-3/4 in. (70 mm); 245956          | 4   |   |          |  |     |
|             | 114686   | SCREW, cap, socket-hd; 5/16-18 x 3-1/4 in. (83 mm); 245957, 245959 | 4   |   |          |  |     |
| 313         | 107210   | SCREW, cap, socket-hd; 3/8-16 x 1-1/2 in. (38 mm); 245956          | 8   |   |          |  |     |
|             | 114666   | SCREW, cap, socket-hd; 3/8-16 x 2-1/4 in. (57 mm); 245957, 245959  | 8   |   |          |  |     |
| 314         | 105510   | WASHER, lock; 1/4; 245956  | 12  |   |          |  |     |
|             | 104008   | WASHER, lock; 5/16; 245957, 245959                                 | 12  |   |          |  |     |
| 315         | 106115   | WASHER, lock; 3/8 size   | 8   |   |          |  |     |
| 316         | 192723   | NUT, retaining; 245956   | 2   |   |          |  |     |
|             | 193031   | NUT, retaining; 245959   | 2   |   |          |  |     |
|             | 193394   | NUT, retaining; 245957   | 2   |   |          |  |     |
| 317         | 179899   | COVER; 245956  | 2   |   |          |  |     |
|             | 241308   | COVER; 245957, 245959  | 2   |   |          |  |     |
| 318         | 116191   | WASHER, thrust; 245956   | 2   |   |          |  |     |
|             | 116192   | WASHER, thrust; 245957, 245959                                     | 2   |   |          |  |     |
| 319         | 100644   | SCREW, cap, socket-hd; 1/4-20 x 3/4 in. (19 mm); 245956            | 4   |   |          |  |     |
|             | 101864   | SCREW, cap, socket-hd; 5/16-18 x 1 in. (25 mm); 245957, 245959     | 4   |   |          |  |     |
| 320         | 116618   | MAGNET   | 1   |   |          |  |     |
| 321         | 117770   | SWITCH, cycle counter  | 1   |   |          |  |     |




# Display

## 245974 Display

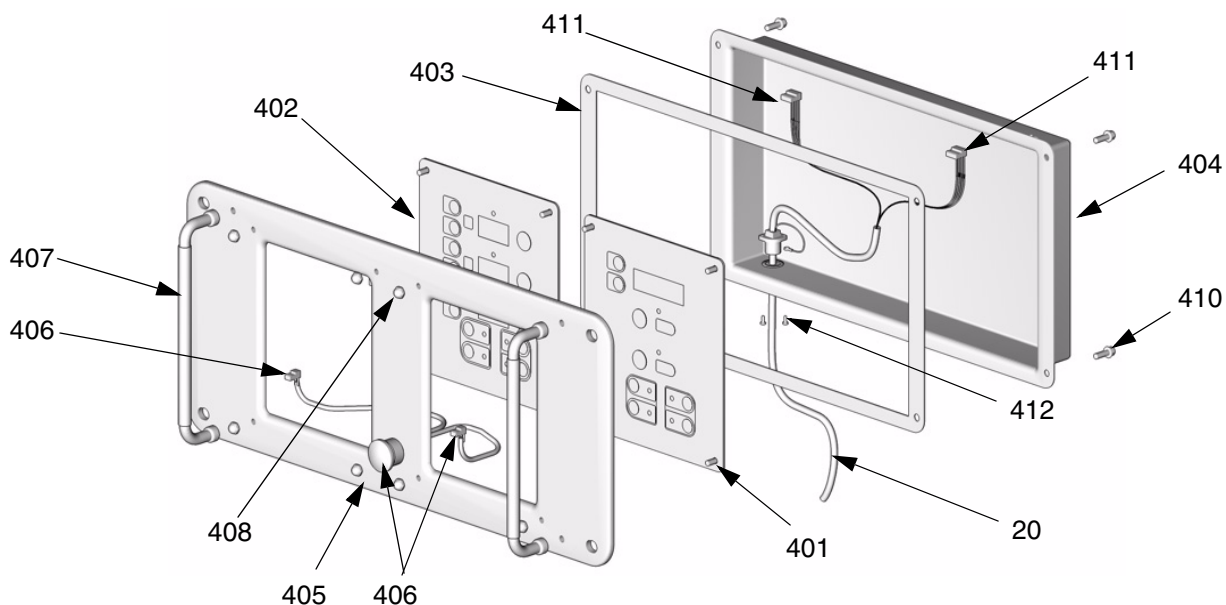

TI2574A

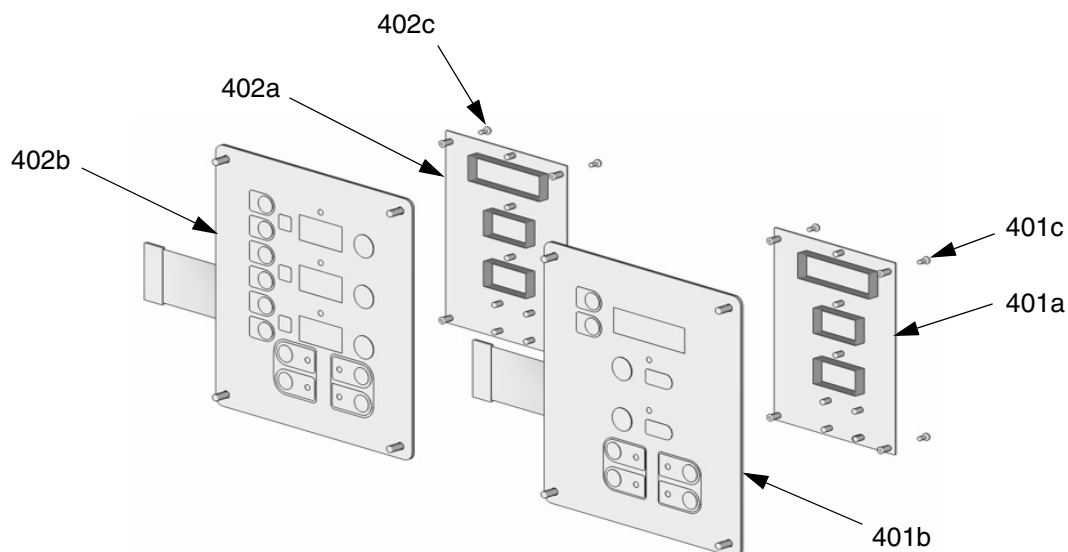

TI3172a


| Ref. No. | Part No. | Description                              | Qty | Ref. No. | Part No. | Description                             | Qty |
|----------|----------|--|-----|----------|----------|---|-----|
| 401      | 245978   | DISPLAY, pressure; includes 401a-401c    | 1   | 406      | 246287   | HARNESS, wire, red stop button          | 1   |
| 401a     | 246130   | . BOARD, circuit                         | 1   | 407      | 117499   | HANDLE                                  | 2   |
| 401b     | 246478   | . SWITCH, membrane                       | 1   | 408      | 117523   | NUT, cap; 10-24                         | 8   |
| 401c     | 112324   | . SCREW                                  | 4   | 410      |          | SCREW, machine, pan-hd; M5 x 0.8; 16 mm | 4   |
| 402      | 245977   | DISPLAY, temperature; includes 402a-402c | 1   | 411      | 15B386   | CABLE, display                          | 1   |
| 402a     | 246130   | . BOARD, circuit                         | 1   | 412      | 195853   | SCREW, machine; M2.5 x 6                | 2   |
| 402b     | 246479   | . SWITCH, membrane                       | 1   |          |          |   |     |
| 402c     | 112324   | . SCREW                                  | 4   |          |          |   |     |
| 403      | 15B293   | GASKET                                   | 1   |          |          |   |     |
| 404      | 15B292   | COVER                                    | 1   |          |          |   |     |
| 405      | 15B291   | PLATE                                    | 1   |          |          |   |     |



# Temperature Control

## 245979 Temperature Control

 Apply 110009 thermal heatsink compound to mating surfaces.

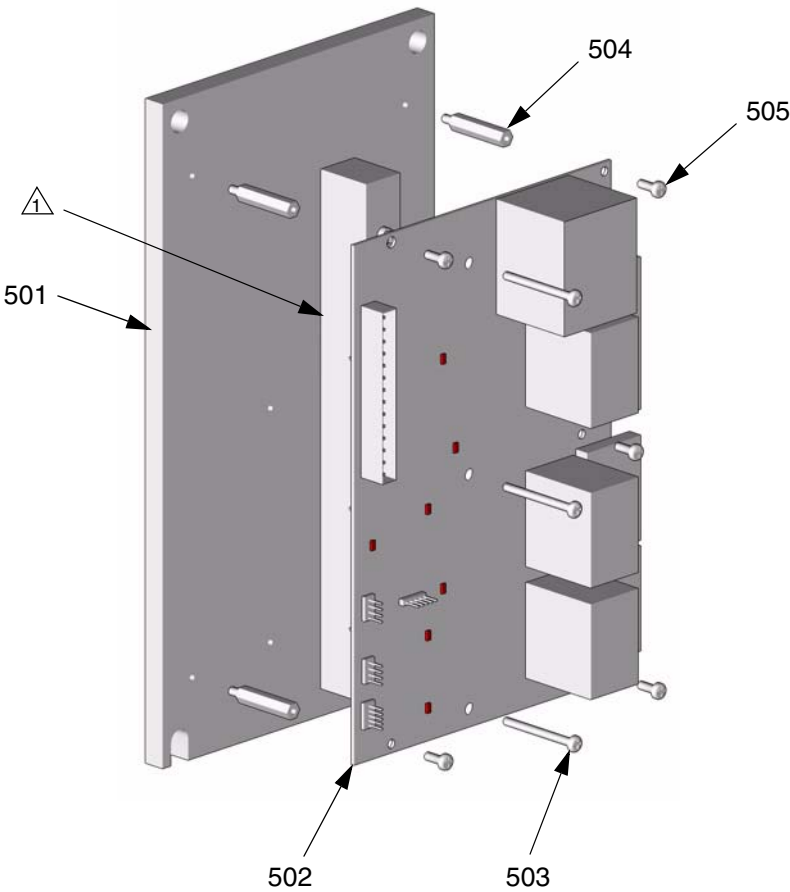


TI2575A-1

| Ref. |          |  |     |
|------|----------|--|-----|
| No.  | Part No. | Description                            | Qty |
| 501  | 15B779   | HEAT SINK                              | 1   |
| 502  | 246194   | BOARD, temperature control             | 1   |
| 503  | 117683   | SCREW, 6-32 x 1-1/2 in. (38 mm)        | 2   |
| 504  | 117526   | SPACER                                 | 5   |
| 505  |          | SCREW, machine; 6-32 x 3/8 in. (10 mm) | 5   |



# Motor Control

## 245980 Motor Control, for E-20 and E-XP1

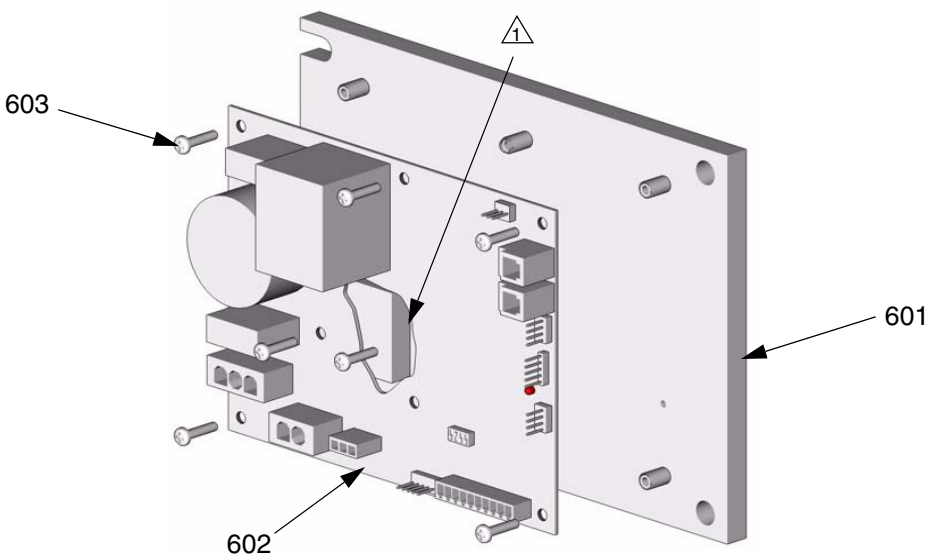

TI3153A

 Apply 110009 thermal heatsink compound to mating surfaces.

| Ref. | No. | Part No. | Description          | Qty |
|------|-----|----------|----------------------|-----|
|      | 601 | 15B297   | HEAT SINK            | 1   |
|      | 602 | 246195   | BOARD, motor control | 1   |
|      | 603 | 107156   | SCREW, machine; 6-32 | 7   |




245981 Motor Control, for E-30 and E-XP2

- 1

Apply 110009 thermal heatsink compound to mating surfaces.
- 2

Motor harness (609) plugs in here.

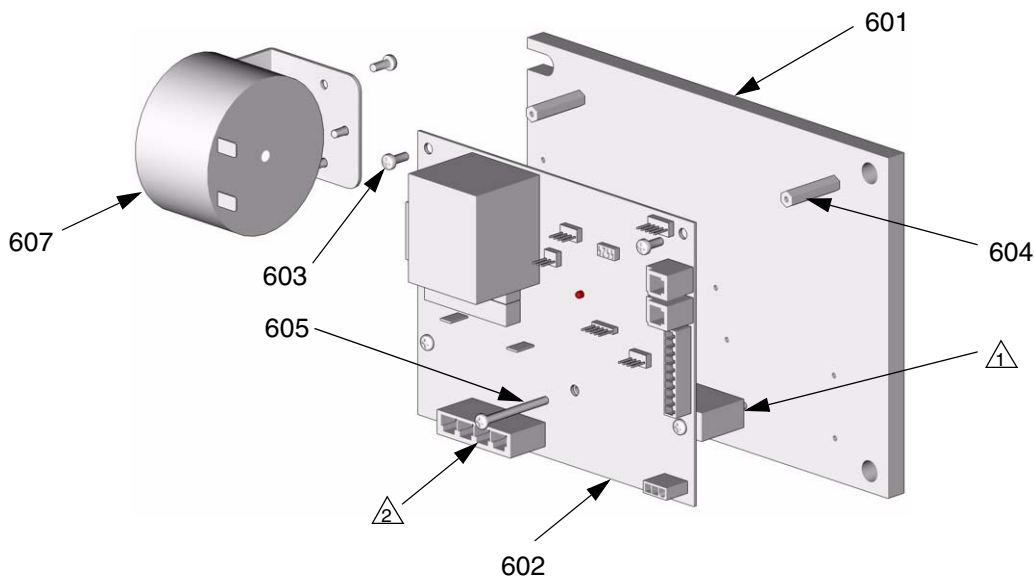

TI2576A


| Ref. No. | Part No. | Description                               | Qty |
|----------|----------|---|-----|
| 601      | 15B297   | HEAT SINK                                 | 1   |
| 602      | 246196   | BOARD, motor control                      | 1   |
| 603      |          | SCREW, machine;<br>6-32 x 3/8 in. (10 mm) | 6   |
| 604      | 117526   | SPACER                                    | 3   |
| 605      | 117683   | SCREW, 6-32 x 1-1/2 in. (38 mm)           | 2   |
| 607      | 15C007   | INDUCTOR                                  | 1   |
| 609      | 15B408   | CABLE, harness, motor                     | 1   |



# Fluid Manifold

## 246154 Fluid Manifold

- ① Apply 113500 thread lock (blue).
- ② Torque to 355-395 in-lb (40.1-44.6 N•m).
- ③ Apply PTFE tape or thread sealant to tapered threads.
- ④ Torque to 175-195 in-lb (19.8-22.0 N•m).
- ⑤ Lubricate ends of spring when assembling.
- ⑥ Assemble valves (702) and handles (709) with handles facing away from each other.
- ⑦ Assemble seat (707) with lapped seat facing valve (702).
- ⑧ Apply grease (118665) to seat (707) and seal (708) prior to inserting into valve (702) to aid retention during assembly to manifold (701).

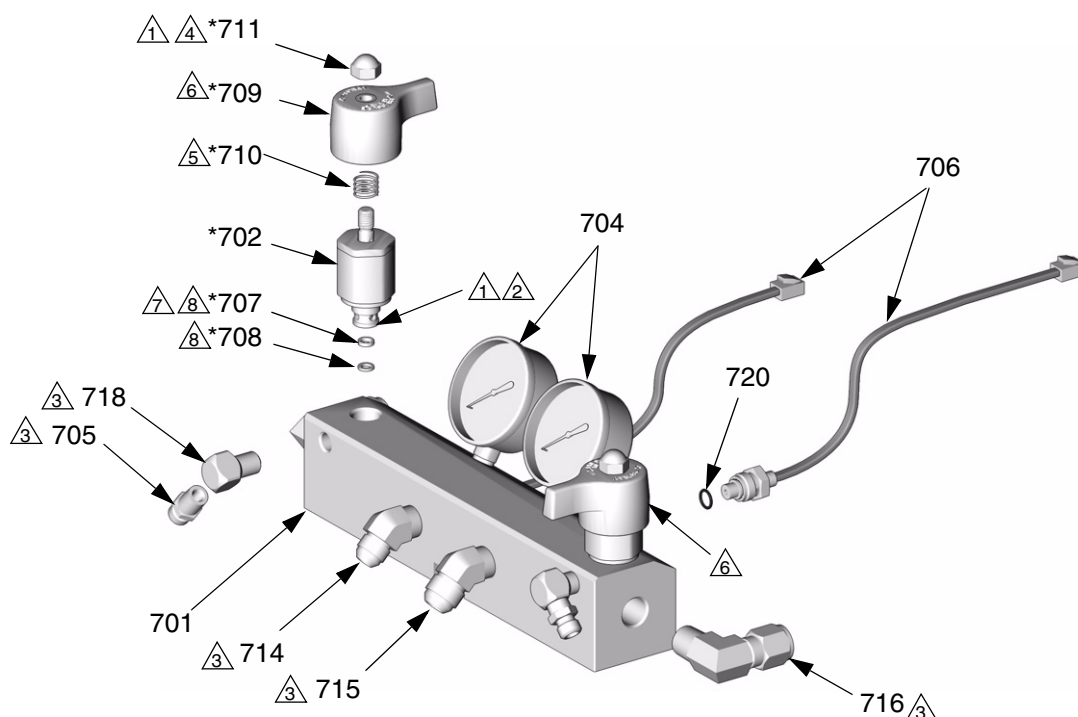

TI2573A

| Ref. No. | Part No. | Description                       |
|----------|----------|-----------------------------------|
| 701      | 15B332   | MANIFOLD; aluminum                |
| 702*     | 246161   | VALVE, pressure relief/spray      |
| 704      | 102814   | GAUGE; 5000 psi (35 MPa, 350 bar) |
| 705      | 162453   | NIPPLE; 1/4 npt x 1/4 npsm        |
| 706      | 246123   | TRANSDUCER, pressure control      |
| 707*     | 193709   | SEAT, valve; carbide              |
| 708*     | 193710   | SEAL, seat; nylon                 |
| 709*     | 15B287   | HANDLE, valve                     |
| 710*     | 114708   | SPRING                            |
| 711*     | 117623   | NUT, cap; 3/8-16                  |
| 714      | 117556   | ELBOW, 45°; #8 JIC x 1/2 npt      |

| Ref. No. | Part No. | Description                                 | Qty |
|----------|----------|---|-----|
| 715      | 117557   | ELBOW, 45°; #10 JIC x 1/2 npt               | 1   |
| 716      | 117532   | ELBOW; 1/2 npt(m) x 1/2 in. (13 mm) OD tube | 2   |
| 718      | 100840   | ELBOW, street; 1/4 npsm x 1/4 npt           | 2   |
| 720      | 111457   | O-RING; PTFE                                | 2   |
| 721▲     | 189285   | LABEL, caution                              | 1   |


\* Included in Repair Kit 246842 (purchase separately).

▲ Replacement Warning labels, signs, tags, and cards are available at no cost.




# Circuit Breaker Modules

## 230V, 3 Phase Circuit Breaker Modules

 For wiring and cable connections, refer to electrical diagrams supplied. See page 71 for parts list.


### Part No. 246087 (E-20, E-30, E-XP1)

\* Ref. No. 92 not included with module.  
Order separately, see page 57.

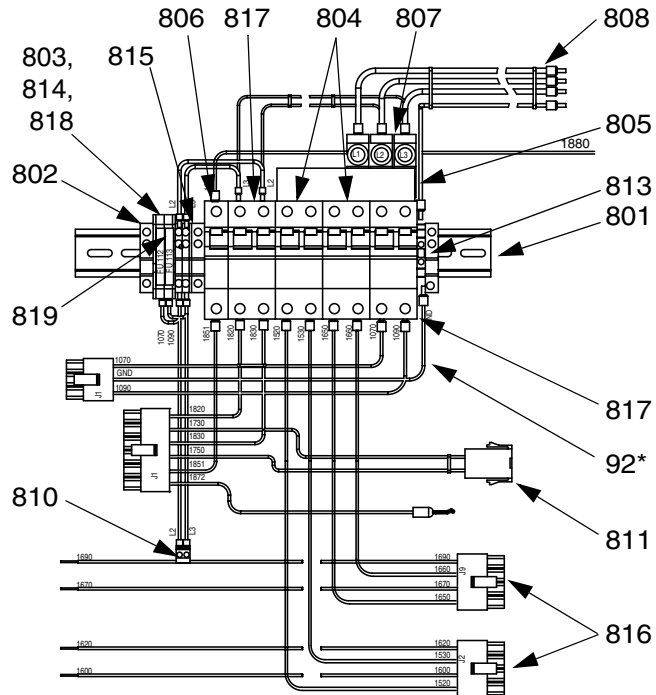

### Part No. 246089 (E-XP2)

\* Ref. No. 92 not included with module.  
Order separately, see page 57.

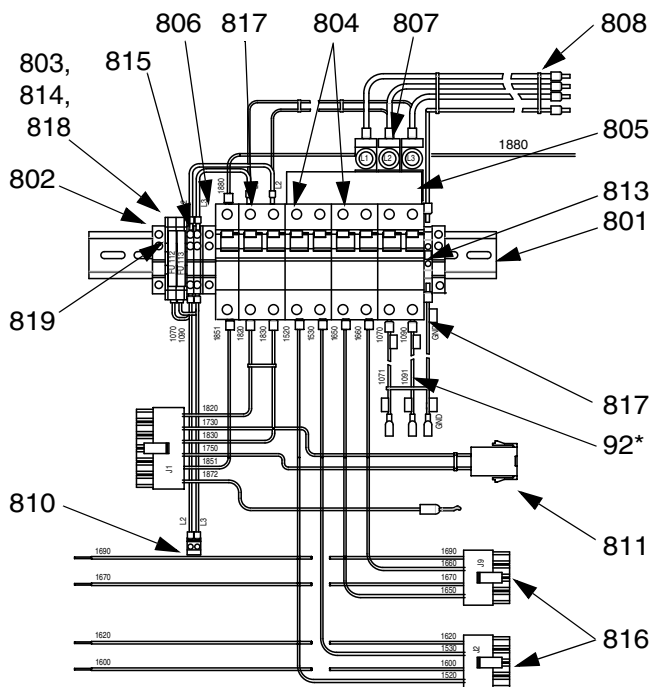




## 230V, 1 Phase Circuit Breaker Modules




For wiring and cable connections, refer to electrical diagrams supplied. See page 71 for parts list.

**Part No. 246090 (E-20, E-30, E-XP1)**

- \* Ref. No. 92 not included with module.  
Order separately, see page 57.

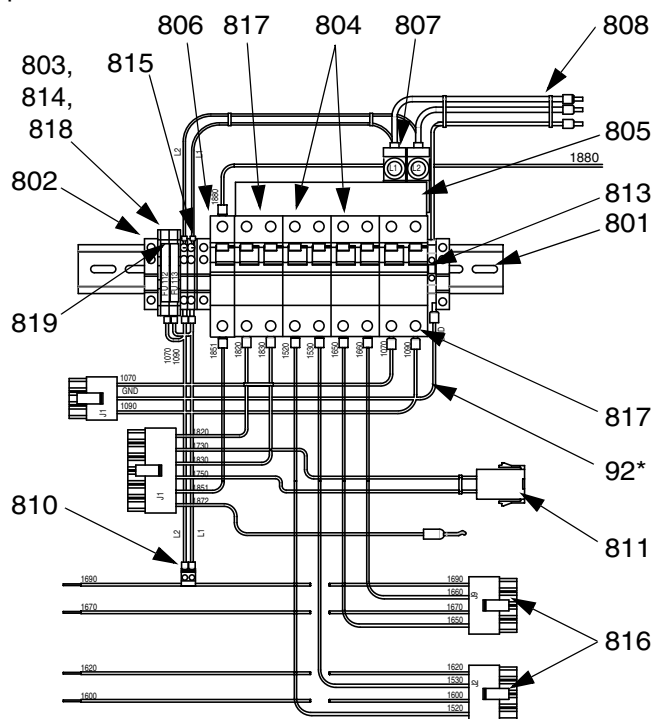
**Part No. 246092 (E-XP2)**

- \* Ref. No. 92 not included with module.  
Order separately, see page 57.

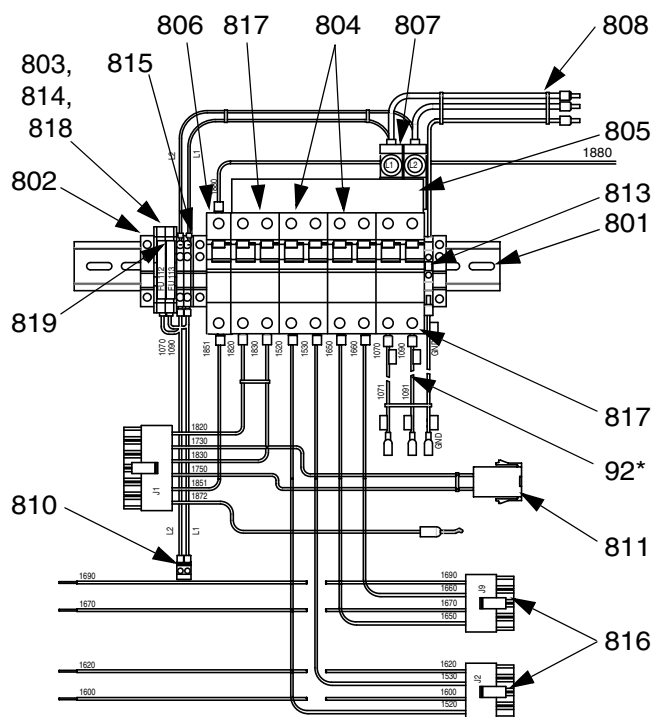




## 380V, 3 Phase Circuit Breaker Modules

 For wiring and cable connections, refer to electrical diagrams supplied. See page 71 for parts list.

### Part No. 246096 (E-20, E-30, E-XP1)

\* Ref. No. 92 not included with module.  
Order separately, see page 57.

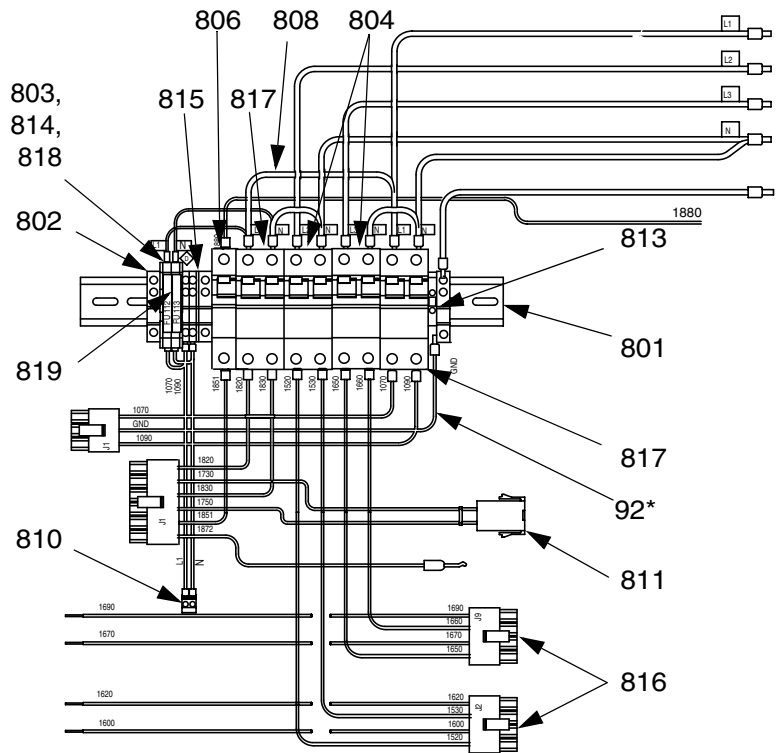



## Circuit Breaker Modules Parts List

| Ref. No. | Description   | Breaker Modules     |                                       |                     |                     |                                       |                     |                     |                                       |                     | Qty |
|----------|---|---------------------|---------------------------------------|---------------------|---------------------|---------------------------------------|---------------------|---------------------|---------------------------------------|---------------------|-----|
|          |   | 246087<br>230V, 3 Ø | 246087<br>230V, 3 Ø<br>(E-30<br>only) | 246089<br>230V, 3 Ø | 246090<br>230V, 1 Ø | 246090<br>230V, 1 Ø<br>(E-30<br>only) | 246092<br>230V, 1 Ø | 246096<br>380V, 3 Ø | 246096<br>380V, 3 Ø<br>(E-30<br>only) | 246098<br>380V, 3 Ø |     |
| 801      | RAIL, mounting  | buy<br>locally      | buy<br>locally                        | buy<br>locally      | buy<br>locally      | buy<br>locally                        | buy<br>locally      | buy<br>locally      | buy<br>locally                        | buy<br>locally      | 1   |
| 802      | CLAMP, end  | 112446              | 112446                                | 112446              | 112446              | 112446                                | 112446              | 112446              | 112446                                | 112446              | 3   |
| 803      | TERMINAL, base, fuse plug                                 | 117798              | 117798                                | 117798              | 117798              | 117798                                | 117798              | 117798              | 117798                                | 117798              | 2   |
| 804      | BREAKER, dual; 25A  | 117591              | 117591                                |                     | 117591              | 117591                                |                     | 117591              | 117591                                |                     | 2   |
|          | BREAKER, dual; 40A  |                     |                                       | 117505              |                     |                                       | 117505              |                     |                                       | 117505              | 2   |
| 805      | BAR, power buss, 3 Ø                                      | 117805              | 117805                                | 117805              |                     |                                       |                     |                     |                                       |                     | 1   |
|          | BAR, power buss, 1 Ø                                      |                     |                                       |                     | 117678              | 117678                                | 117678              |                     |                                       |                     | 1   |
| 806      | BREAKER, single; 50A                                      | 117503              | 117503                                | 117503              | 117503              | 117503                                | 117503              | 117503              | 117503                                | 117503              | 1   |
| 807      | CONNECTOR, power lug                                      | 117679              | 117679                                | 117679              |                     |                                       |                     |                     |                                       |                     | 3   |
|          | CONNECTOR, power lug                                      |                     |                                       |                     | 117679              | 117679                                | 117679              |                     |                                       |                     | 2   |
| 808      | CABLE, harness; 230V, 3 Ø                                 | 15B387              | 15B387                                | 15B387              |                     |                                       |                     |                     |                                       |                     | 1   |
|          | CABLE, harness; 230V, 1 Ø                                 |                     |                                       |                     | 117674              | 117674                                | 117674              |                     |                                       |                     | 1   |
|          | CABLE, harness; 380V, 3 Ø                                 |                     |                                       |                     |                     |                                       |                     | 15B377              | 15B377                                | 15B377              | 1   |
| 810      | CABLE, harness, power temp                                | 15B375              | 15B375                                | 15B375              | 15B375              | 15B375                                | 15B375              | 15B375              | 15B375                                | 15B375              | 1   |
| 811      | CABLE, hose, heat   | 15B378              | 15B378                                | 15B378              | 15B378              | 15B378                                | 15B378              | 15B378              | 15B378                                | 15B378              | 1   |
| 813      | BLOCK, terminal ground                                    | 112443              | 112443                                | 112443              | 112443              | 112443                                | 112443              | 112443              | 112443                                | 112443              | 1   |
| 814      | FUSE, fan; 5 x 20 mm<br>Bussman GDA-2A or equiv-<br>alent | 115216              | 115216                                | 115216              | 115216              | 115216                                | 115216              | 115216              | 115216                                | 115216              | 2   |
| 815      | TERMINAL, end cover                                       | 117807              | 117807                                | 117807              | 117807              | 117807                                | 117807              | 117807              | 117807                                | 117807              | 1   |
| 816      | CABLE, harness, heat A/B                                  | 15B376              | 15B376                                | 15B376              | 15B376              | 15B376                                | 15B376              | 15B376              | 15B376                                | 15B376              | 2   |
| 817      | BREAKER, dual; 20A  | 117711              | 117711                                | 117711              | 117711              | 117711                                | 117711              | 117711              | 117711                                | 117711              | 2   |
| 818      | TERMINAL, end cover                                       | 117797              | 117797                                | 117797              | 117797              | 117797                                | 117797              | 117797              | 117797                                | 117797              | 1   |
| 819      | FUSE, plug  | 117799              | 117799                                | 117799              | 117799              | 117799                                | 117799              | 117799              | 117799                                | 117799              | 2   |


\* Not included with module. Order separately.



## 248669 Conversion Kit

Convert and phase E-XP2 to an E-30 with 15.3kW of heat by changing pump lowers, bearings, and changing the Motor Control DIP settings to that of an E-30. For removal and installation of pump lowers and bearings, see **Pump Removal**, page 24. For changing Motor Control DIP settings, see **Motor Control Board**, page 34.

| Ref. No. | Part No. | Description                                 | Qty |
|----------|----------|---|-----|
| 65       | 118463   | ELBOW, swivel; 3/4 npt(m) x 1 in. npt(f)    | 2   |
| 303      | 245927   | HOUSING, bearing                            | 2   |
| 306A     | 246832   | PUMP, displacement, component A; see 309557 | 1   |
| 306B     | 245972   | PUMP, displacement, component B; see 309577 | 1   |
| 316      | 193394   | NUT, retaining                              | 2   |

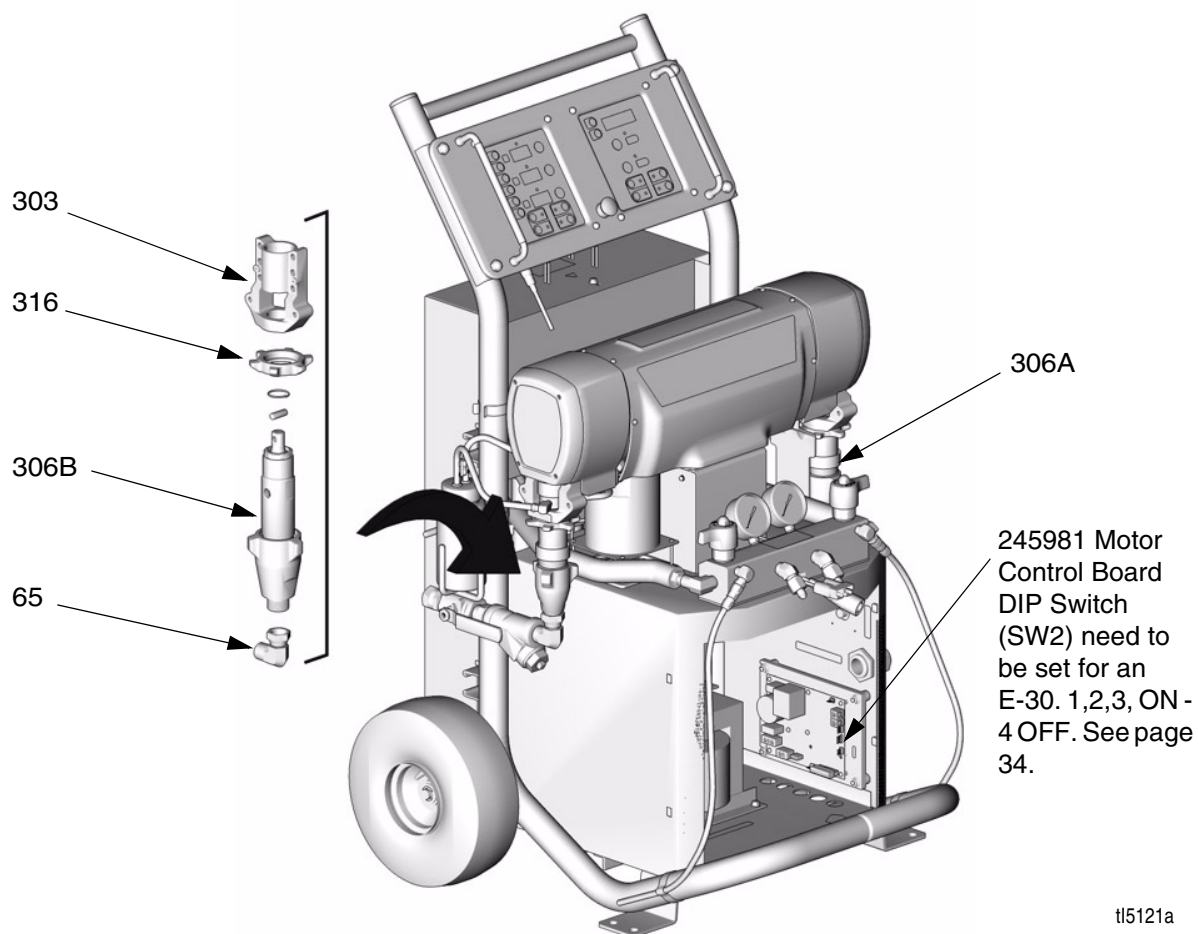



# Technical Data

| Category                           | Data  |
|------------------------------------|---|
| Maximum Fluid Working Pressure     | Models E-20 and E-30: 2000 psi (14 MPa, 140 bar)<br>Model E-XP1: 2500 psi (17.2 MPa, 172 bar)<br>Model E-XP2: 3500 psi (24.1 MPa, 241 bar)  |
| Maximum Fluid Temperature          | 190°F (88°C)  |
| Maximum Output                     | Model E-20: 20 lb/min (9 kg/min)<br>Model E-30: 30 lb/min (13.5 kg/min)<br>Model E-XP1: 1 gpm (3.8 liter/min)<br>Model E-XP2: 2 gpm (7.6 liter/min)   |
| Output per Cycle (A and B)         | Model E-20 and E-XP1: .0104 gal. (.0395 liter)<br>Model E-30: .0272 gal. (0.1034 liter)<br>Model E-XP2: .0203 gal. (.0771 liter)  |
| Line Voltage Requirement           | Part Nos. 246024, 246025, 246026, 246028, 248657: 195-264 Vac, 50/60 Hz<br>Part Nos. 246029, 246030, 246031, 246032, 248659: 338-457 Vac, 50/60 Hz<br>Part Nos. 246033, 246034, 246035, 246036, 248658: 195-264 Vac, 50/60 Hz   |
| Amperage Requirement               | See page 3.   |
| Heater Power                       | Model E-20: 6000 Watts<br>Model E-30 and E-XP1: 10200 Watts<br>Models E-XP2 and E-30 with 15.3kW of heat: 15300 Watts   |
| Sound Power, per ISO 9614-2        | Model E-20: 80 dB(A) at 2000 psi (14 MPa, 140 bar), 0.5 gpm (1.9 lpm)<br>Model E-30: 93.5 dB(A) at 1000 psi (7 MPa, 70 bar), 3.0 gpm (11.4 lpm)<br>Model E-XP1: 80 dB(A) at 2000 psi (14 MPa, 140 bar), 0.5 gpm (1.9 lpm)<br>Model E-XP2: 83.5 dB(A) at 3000 psi (21 MPa, 210 bar), 1.0 gpm (3.8 lpm)     |
| Sound Pressure, 1 m from equipment | Model E-20: 70.2 dB(A) at 2000 psi (14 MPa, 140 bar), 0.5 gpm (1.9 lpm)<br>Model E-30: 83.6 dB(A) at 1000 psi (7 MPa, 70 bar), 3.0 gpm (11.4 lpm)<br>Model E-XP1: 70.2 dB(A) at 2000 psi (14 MPa, 140 bar), 0.5 gpm (1.9 lpm)<br>Model E-XP2: 73.6 dB(A) at 3000 psi (21 MPa, 210 bar), 1.0 gpm (3.8 lpm) |
| Fluid Inlets                       | 3/4 npt(f), with 3/4 npsm(f) union  |
| Fluid Outlets                      | Component A (ISO): #8 JIC (3/4-16 unf), with #5 JIC adapter<br>Component B (RES): #10 JIC (7/8-14 unf), with #6 JIC adapter   |
| Fluid Circulation Ports            | 1/4 npsm(m), with plastic tubing  |
| Weight                             | Model E-20 and E-XP1: 342 lb (155 kg)<br>Model E-30: 400 lb (181 kg)<br>Models E-XP2 and E-30 with 15.3kW of heat: 438 lb (198 kg)  |
| Wetted Parts                       | Aluminum, stainless steel, carbon steel, brass, carbide, chrome, chemically resistant o-rings, PTFE, ultra-high molecular weight polyethylene   |

Loctite® is a registered trademark of the Loctite Corporation.



# Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

**THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

**GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO.** These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

## **FOR GRACO CANADA CUSTOMERS**

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présent document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

## Graco Information

**TO PLACE AN ORDER**, contact your Graco distributor or call to identify the nearest distributor.

**Phone:** 612-623-6921 **or Toll Free:** 1-800-328-0211 **Fax:** 612-378-3505

*All written and visual data contained in this document reflects the latest product information available at the time of publication.  
Graco reserves the right to make changes at any time without notice.*

*This manual contains English. MM X309574*

**Graco Headquarters:** Minneapolis  
**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441**

Copyright 2003, Graco Inc. is registered to I.S. EN ISO 9001

[www.graco.com](http://www.graco.com)  
Revised 03/2008